

WLAN setup

Multimedia system:



Activating the WLAN

- ▶ Select **Activate**.
Function Switch on or Switch off .

Connect device

Connect device via WPS PIN

- ▶ Select **Connect via WPS PIN**.
- ▶ On the vehicle's device that you want to connect up select "Connect via WPS PIN". The vehicle will display SSID **MB WLAN XXXXX**. The device being connected up will generate a PIN.
- ▶ Enter this PIN in your multimedia system as well.

Connect via pushbutton

- ▶ Select **Connect via WPS PBC**.
- ▶ On the vehicle's device that you want to connect up select "Connect via WPS PIN". The vehicle will select **Connect via WPS PBC** SSID. The vehicle will now display SSID **MB WLAN XXXXX**.
- ▶ Select **Continue** on your multimedia system.

Connecting up the device via a security key

- ▶ Select **Connect via security key**.
- ▶ Select on the vehicle's device that you want to connect up. SSID **MB WLAN XXXXX** will be displayed.
- ▶ On the vehicle's device that you want to connect up enter the key displayed on the multimedia system.

- ▶ Confirm your entry.

Generating a new security key

- ▶ Select **Generate security key**.
- ▶ Select **Generate new key**.
A new security key will be generated.
- ▶ Saving the security key: Select **Save**.
The WLAN menu appears. Whenever "connect using security key" is selected the new security key will be displayed and checked. The newly generated security key must now be used to reset the connection.

Changing the SSID name

- ▶ Select **Change SSID**.
An enter SSID dialog will be displayed.
- ▶ Enter your new SSID.
- ▶ Select and confirm **OK**.
From now on the new SSID will be displayed on the vehicle's device and

in the “Via security key” menu when connecting up.