Introduction

Thank you for buying a Mitsubishi Motors product.

In order to fully utilise the functionality of this product and ensure safe and correct operation, please read the "User Manual" carefully before operation.

After reading the "User Manual", ensure this is kept readily available, and refer to it again if you do not understand any points, or in the event of problems.

Table of contents

Introduction	Audio Files (MP3/WMA/AAC)21
	Folder Structure
Before Use 4	What Is MP3?23
Disclaimers	What Is WMA?
mportant Points on Usage4	What Is AAC?25
Restrictions on Operations while the Vehicle Is Driving 5	Video files (DivX/MP4)26
low to Clean5	Radio 27
rademarks 5	
mportant Points on Safety for the Customer 8	Listen to Radio27
low to Read This Manual9	Display Contents
	Search for Broadcast Stations with Strong Signals28
Basic Operation 10	Search for Broadcast Stations from the Station List28
This Product10	
Main Unit Panel10	DISC 30
Start11	Listen to CDs30
low to Perform Touch Operations 12	Display a List
Vhen Touching 12	Display Contents31
Searching Items from a List12	Switch Playback Mode32
lome Screen13	Listen to Audio Files on a Disc 33
Display Contents	Display a List33
Switch the Sources14	Display Contents34
	Switch Playback Mode36
	Watch Movie Files on a Disc 37
AV	Display a List
	Display Contents
Audio Functions 15	Watch DVDs39
Basic Operation15	Display DVD Operation Screen
Switch Audio ON/OFF15	Select Title Number or Chapter Number 41
Adjust Volume15	Change Audio41
nsert/Eject Discs16	Change Subtitles41
Steering Remote Control Switch Operation17	Change Display Modes42
landling of Discs18	Change Angles42

Operate the Menu......42

Handling of Discs......18
Types of Disc That Can Be Played Back.....19

iPod/USB	
Use an iPod	
Play iPod	
Display Contents	
Switch Playback Mode	
Search by List	
Listen to Audio Files on a USB Det Display Contents	
Display a List	
Switch Playback Mode	
•	
External Input Devices	51
Use Bluetooth Audio	51
Connect a Bluetooth-capable	
Audio Device	51
Listen to a Bluetooth-capable	
Audio Device	51
Display Contents	
Switch Playback Mode	
Use AUX Displaying	
Use HDMI	
Displaying	
Use Rear Display	
Displaying	
INFO/SETTINGS	
INTO/SETTINGS	

INFO	57
Mobile Phone	57
Connect Your Mobile Phone	57
Display the Phonebook	58
Dial a Telephone	58
Incoming Calls	59
Other Info	
Camera	61

SETTINGS	62
Adjust the Sound Quality	62
Setting Items	62
System Settings	64
Beep sound	64
Display Setting	
DVD Display Setting	65
Day/Night Display Setting	65
Clock	66
Language	66
Other Settings	67
Display Off	
Clock Screen	
Bluetooth Setting	67
Other	
Translandanting	70
Troubleshooting	70
MEMO	

Introduction

The following is what you need to know before using this product.

Before Use

Disclaimers

- Mitsubishi Motors will in no way be held responsible for losses resulting from fire, earthquake, tsunami, flood, or other natural disasters; from actions of third parties; from other accidents; or from inappropriate or abnormal usage conditions utilised by the customer, be said conditions deliberate or unintentional.
- There will be no indemnification for alteration or loss of any information stored upon this product by the customer or a third party resulting from improper use of this product, the influence of static electricity or electric noise, or at the time of malfunction or repair or similar circumstances. We recommend that you create backups of important information as a precautionary measure.
- Some personal information (telephone numbers etc.) entered into this product may remain in memory even if this product is removed. The customer is responsible for proper handling and management (including deleting) of personal information to protect privacy when handing this product over to anyone else or disposing of it. Mitsubishi Motors will in no way be held responsible.

- Mitsubishi Motors will in no way be held responsible for any collateral losses (loss of business profits, alteration or loss of recorded data) resulting from the usage or inability to use this product.
- For the purpose of product improvement, specifications and external appearance may be subject to change without advance notice. Accordingly, while the contents of the User Manual may differ, please be aware that returns, refunds, exchange, or conversion are not possible.
- This User Manual explains details for multiple models together. Depending on the model, there may be functions that may be described but not available, or requirements for separately purchased-products. Thank you for your understanding.
- Images and illustrations used in the User Manual are either those used in development, or used for explanations.
 Please be aware that these may differ from the actual images and illustrations used in the product.
- Please be aware that Mitsubishi Motors, including after-sales service departments, will in no way be held responsible for any losses or detriment resulting from alteration or loss of information stored in this product.

Important Points on Usage

Common

- During operation, ensure that the vehicle is not stationary in a garage or other confined area with bad ventilation while the engine is running. Doing so may result in gas poisoning.
- For safety, the driver is not to operate this product while the vehicle is moving. The driver should also minimize as much as possible the time spent viewing the screen. Being distracted by the screen can result in an accident.
- Do not turn the volume up to the extent that you cannot hear sounds from outside the vehicle while driving. Driving without being able to hear sounds from outside the vehicle can result in an accident.
- Do not disassemble or modify the product.
 This may lead to malfunction, smoking, or fire.
- When operating, ensure that the vehicle is stopped in a safe area in which stopping is permitted.
- Continued usage of this product without the engine running may deplete the vehicle battery, meaning that the engine may not be able to start.
- Ensure this product is used while the engine is running.

- The following phenomena are characteristic of LCD screens. They do not indicate a malfunction.
- Small black dots or bright dots (red, blue, green) on the screen.
- Screen movement is slow during cold weather.
- The screen is sometimes dark during hot weather.
- The colour tones and brightness vary with the viewing angle.
- It is a characteristic of LCD screens that the picture quality varies with the viewing angle.
 When using this product for the first time, adjust the picture quality.
- If you paste an commercially-available LCD protective film or the like on the screen, it may interfere with touch panel operation.
- If you operate the touch panel with a sharp object (pen tip, finger nail, etc.), the screen may be scratched and this unit may be damaged, leading to faulty operation.
- Operating the touch panel with gloves on may cause faulty operation.
- When cleaning the screen, wipe it with a soft cloth. Do not use benzene, paint thinners, anti-static agents, or other chemical wipes.
 They could scratch the screen.

iPod/iPhone Playback Function (Option)

- This product supports audio playback from iPod/iPhone devices, however differing versions mean that playback cannot be quaranteed.
- Please be aware that depending on the iPod/iPhone model or version, operation may differ.

Restrictions on Operations while the Vehicle Is Driving

Some operations are restricted while the vehicle is driving. The driver should refrain from operating this product while the vehicle is moving. First stop the vehicle in a safe location, then operate this product.

How to Clean

- If the product becomes dirty, wipe with a soft cloth
- If very dirty, use a soft cloth dipped in neutral detergent diluted in water, and then wrung out. Do not use benzene, thinners, or other chemical wipes. This may harm the surface.

Trademarks

- Product names and other proper names are the trademarks or registered trademarks of their respective cwners.
- Furthermore, even if there is no specific denotation of trademarks or registered trademarks, these are to be observed in their entirety.

Premi DIA

"PremiDIA HD" and "PremiDIA WIDE" are trademarks of Mitsubishi Electric Corporation. Trademarks are pending in some regions.

Premi DIA — WIDE —

DOLBY.

Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.



The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc.

and any use of such marks by Mitsubishi Motors Corporation is under license. Other trademarks and trade names are those of their respective owners.



DivX®, DivX Certified® and associated logos are trademarks of DivX, LLC and are used under license.


Made for Pod iPhone

"Made for iPod," "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iccomplete or iPhone, respectively, and has been certified by the developer to meet Apole performance standards.


iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards

- iPod and iTunes licensing allows individual users to privately reproduce and play back non-copyrighted material as well as material that may be legally copied and reproduced. Infringement of copyright is prohibited.
- * The supported devices for vehicles equipped with a Bluetooth * 2.0 interface vary. For details, see the vehicle's user manual.

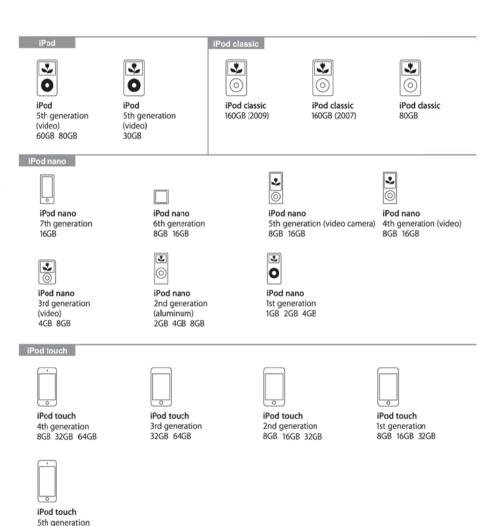

16GB 32GB 64GB

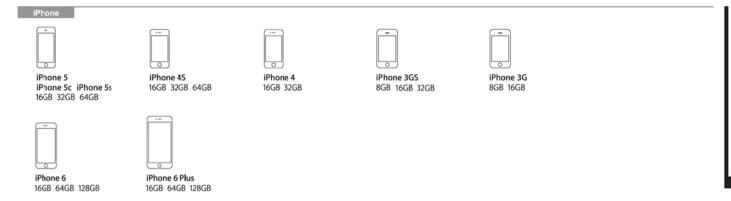

Important Points on Safety for the **Customer**

This product features a number of pictorial indications as well as points concerning handling so that you can use the product correctly and in a safe manner, as well as prevent injury or damage to yourself, other users, or property.

MARNING This indicates details recarding handling of the product that if ignored, could be expected to result in death or serious injury.

A CAUTION This indicates details regarding handling of the product that if ignored, could be expected to result in personal injury or property loss.

MARNING

 The driver should not pay close attention to the images on the screen while driving.

This may prevent the driver looking where they are going, and cause an accident.

 The driver should not perform complicated operations while driving.

Performing complicated operations while driving may prevent the driver looking where they are going, and cause an accident.

Therefore stop the vehicle in a safe location before performing such operations.

 Do not use during malfunctions, such as when the screen does not light up or no sound is audible.

This may lead to accident, fire, or electric shock.

 Ensure water or other foreign objects do not enter the product.

This may lead to smoking, fire, electric shock, or malfunction. Do not insert foreign objects into

the disc slot. This may lead to fire, electric shock, or malfunction.

.↑ WARNING

 In the event of abnormalities occurring when foreign objects or water enter the product. resulting in smoke or a strange smell, immediately stop using the product, and consult with your dealer.

Continuing to use the product may result in accident, fire, or electric shock.

 Do not disassemble or modify the product.

This may lead to malfunction, fire, or electric shock.

 During thunderstorms, do not touch the antenna or the front panel.

This may lead to electrical shock from lightning.

CAUTION

 Do not block ventilation holes or heat sinks on the product.

Blocking ventilation holes or heat sinks may prevent heat from escaping from within the product, leading to fire or malfunction.

 Do not turn the volume up to the extent that you cannot hear sounds from outside the vehicle while driving.


Driving without being able to hear sounds from outside the vehicle may result in an accident.

Do not insert your hand or fingers into the disc slot.

This may result in injury.

How to Read This Manual

The notation used in this manual and what it means are as follows.

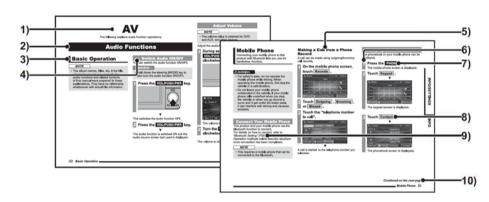

1) Volume Header

Classified by main functions.

2) Chapter Header

Classifies more finely the main functions in the volume header. A chapter header appears at the head of each chapter. You can also check the index on the right edge.

3) Major Header

Classifies the main operations and functions in a chapter.

4) Intermediate Header

Classifies the operations and functions under the major header.

5) Minor Header

Classifies more finely the operations and functions classified under the intermediate header.

6) Operation procedure

These are numbers that shows the operation procedure. Perform the procedure in the order of these numbers.

7) ••• key or [•••] key

Shows an operation key on the panel.

8) ooo or [ooo]

Shows a touch switch displayed on the screen.

9) (P000)

Shows the page to refer to. It contains relevant explanations etc.

10)Continued on the next page


Used when the explanation of operations is continued.

Basic Operation

This Product

Main Unit Panel

This gives the names of each section of the main unit panel and explains their functions.

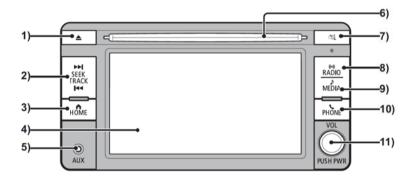

1) key

Used to eject a disc (P16).

2) K<SEEK TRACK key/ SEEK TRACK >>> key Allows you to seek a radio station, or select a track. Also, holding down either of these keys allows you to fast-forward/fastrewind a track.

3) HOME key

Displays the home screen.→"Home Screen" (P13)

4) Display

Almost all operations can be performed by touching the touch switches displayed on this display.

→ "How to Perform Touch Operations" (P12)

5) AUX

Allows you to connect external input devices. → "Use AUX" (P54)

6) Disc slot

When a disc is inserted that can be played by this product, starts playback.

→"Inserting the Disc" (P16)

7) 🖄 key

Allows you to mute the audio.

8) RADIO key

When the radio screen is displayed, the radio source changes each time the key is pressed.

When the radio screen is not displayed, the radio screen is displayed.

9) MEDIA key

When the media screen is displayed, the media source changes each time the key is pressed.

When the media screen is not displayed, the media screen is displayed.

When no media is connected or inserted, this operation becomes invalid.

10) PHONE key

Displays the phone menu.

When the phone has not been registered, the Bluetooth connection setting screen is displayed.

11) VOL/PUSH PWR key

Allows you to adjust the volume for the audio function and telephone function. It also allows you to switch the audio function ON/OFF. When the audio function is OFF, the clock screen is displayed.

 
→ "Adjust Volume" (P15)

Start

Start the system.

1

Switch the vehicle's ignition key to "ACC" or "ON".



The display switches to the last screen, the screen for the function used last the previous time.

ADVICE


 Immediately after the ignition key is switched to "ACC" or "ON", some functions cannot be used immediately because data is being read in. Please wait until the reading is completed.

How to Perform Touch Operations

This system uses a touch panel that is operated by touching the display directly.

When Touching

This manual indicates the operation of touching the screen to "Enter" with "Touch

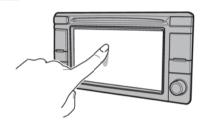


Also, the menu of operations executed by touch is indicated as "Touch Switch".

ACAUTION

- The surface of the display scratches easily. Do not push on it too hard or rub it with a stiff cloth.
- If the screen is dirty, wipe it gently with an eyeglass wipe or other soft cloth.

Searching Items from a List

 You can move the display one page by touching v or ^






When the item you are searching for is displayed, touch it directly.

Home Screen

By pressing the [HOME] key to display the home screen, then selecting a source from that menu, you can use various functions.

Display Contents

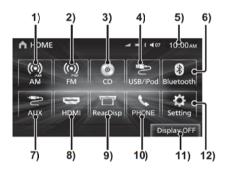

- **1)** AM (*P27*) Allows you to use the AM radio function.
- **2) FM** (*P27*) Allows you to use the FM radio function.
- 3) CD/DVD

Plays disc media inserted into this product.

Audio CD (P30)

Audio files (MP3/WMA/AAC) (P33) DVD (P39)

Video files(DivX/MP4)(P37)

4) USB/iPod *1,*2

When an iPod is connected to this product. Fod is displayed and when you touch this, the iPod screen is displayed. (P44)

When a USB device is connected to this product, **USB** is displayed and when you touch this, the USB screen is displayed. (P47)

When nothing is connected to this product, **USB/iPod** is displayed.

5) Clock

Displays the current time using 24-hour time or 12-hour time. → "Clock" (P66)

6) Bluetooth (*P51*)

When a Bluetooth-capable audio device is connected to this product, the Bluetooth audio function can be used.

7) AUX "(P54)

When an external input device is connected to AUX JACK, the external input device is played.

8) HDMI *1,*2(P55)

When an external input device is connected with an HDMI, the external input device is played.

9) RearDisp *2(P56)

Plays the audio from the rear display.

10) PHONE *4(P57)

Allows you to make and receive telephone calls.

11) DisplayOFF (*P67*)

Turns off the screen display.

12) Setting (P62)

Displays the settings screen, on which you can make various settings for this product.

- *1) This requires an external input device and a cable.
- *2) This is equipment that only some vehicle types
- *3) This requires an audio device that is Bluetooth capable (available separately).
- *4) This requires a mobile phone that is Bluetooth capable (available separately).

Switch the Sources

A source can be selected on the home screen.

NOTE

 This manual uses the term "source" as the general name for all audio functions, including radio, CD, etc.

1 Press the HOME key.



The home screen is displayed.

Touch any "source".





The screen for the selected source is displayed.

ADVICE

- [RearDisp] is displayed only when the rear display is connected.
- The contents of the menu depend on the model and on what optional equipment is connected.



The following explains audio function operations.

Audio Functions

Basic Operation

NOTE

 
• The album names, titles, etc. in the title information in pictures used with the audio functions and related functions of this manual were prepared for these explanations. They have no relationship whatsoever with actual title information.

Switch Audio ON/OFF

You can switch the audio function ON/OFF.

ADVICE

· Hold down the steering [MODE] key to also turn the audio function ON/OFF.



This switches the audio function OFF.

Press the VOL/PUSH PWR key.

The audio function is switched ON and the audio source screen last used is displayed.

Adjust Volume

NOTE

• The volume value is retained for DVD and AUX, and other devices.

Adjust the audio function volume.

During audio play, turn the **VOL/PUSH PWR** key counterclockwise.





The volume is lowered.

Turn the VOL/PUSH PWR key clockwise.

The volume is raised.

Insert/Eject Discs

 
The following explains how to insert a disc into this product.

ACAUTION

- · When replacing discs, first ensure that the vehicle is stopped in an area in which stopping is permitted.
- Do not insert your hand, fingers, or foreign objects into the disc slot. This may lead to injury, smoking, or fire.

Inserting the Disc

Insert the disc into the disc slot with the label surface up.



Push the disc in a certain amount, and the product will pull the disc in.


Playback starts.

Ejecting the Disc



This will eject the disc from the product, so remove the disc.

Steering Remote Control Switch Operation

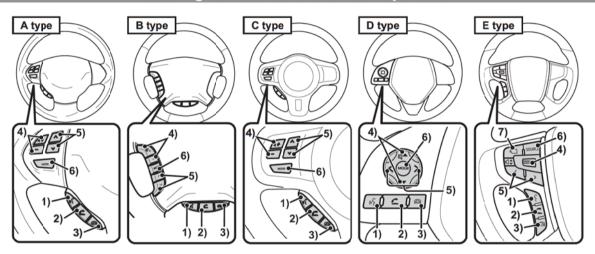

- 1) "SPEECH" key 1
 Do not use.
- 2) "OFF HOOK" key '1
 Used to receive a telephone call.
- 3) "ON HOOK" key"

 Used to end a telephone call.
- 4) Vol + , key / A, v key Adjust audio functions and the telephone function volume.
- 5) CH , key / , key
 Select CD and other audio source tracks
 and radio stations.
 Hold down for fast forward and rewind.

6) MODE key/ SOURCE key

Hold down to turn the audio function ON/OFF. Additionally, each time this is pressed, this switches the audio source. The order of switching is as shown below. If devices are not connected, then these are to be skipped, and the next source selected.

7) CAMERA key"

Allows you to display the picture from the camera or switch the picture mode.

*1) This is equipment that only some vehicle types have