

The following contents are described in Owners Manual of the vehicle.  
In Canada, it is described in English and French.

## **FCC CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **FCC/ISED**

This device complies with part 15 of FCC Rules and Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme à la partie 15 des règles de la FCC et aux normes des CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## 1. Advanced Keyless Functions

The advanced keyless functions (advanced keyless entry and start system) enables the following operations while Hand Unit (Transmitter) is being carried.

- Locking/unlocking the doors without operating the key.
  - Starting the engine without operating the key.
- 1) Operating Range
 

The system operates only when the driver is in the vehicle or within operational range while Hand Unit (Transmitter) is being carried.

    - (1) Locking, unlocking the doors
 

The operational range for locking/unlocking the doors is up to 80 cm (2.6 ft) from the center of the front door handles.
    - (2) Starting the engine
 

The operational range for starting the engine includes nearly the entire cabin area.
  - 2) Locking, Unlocking the Doors with Touch Sensor.
 

Both doors can be locked/unlocked by pressing Touch Sensor in the door handle while Hand Unit (Transmitter) is being carried.

    - (1) To lock
 

To lock the doors, press Touch Sensor.  
A beep sound will be heard once and the hazard warning lights will flash once.
    - (2) To unlock
 

To unlock the doors, press Touch Sensor.  
A beep sound will be heard twice and the hazard warning lights will flash twice.
  - 3) Starting the engine
 

Hand Unit (Transmitter) must be carried by the driver.

    - (1) Depress the brake pedal.
 

(Automatic transmission)  
Put the vehicle in park (P).  
(Manual transmission)  
Depress the clutch pedal all the way and shift into neutral.  
Keep the clutch pedal depressed while cranking the engine.
    - (2) Push the start stop button (SSB) all the way in.
    - (3) Verify that the KEY indicator light (green) illuminates in the instrument cluster.
  - 4) Turning off the engine
    - (1) The shift lever set to the park position (P).
    - (2) Push the start stop button (SSB) to turn off the engine.

## 2. Keyless entry Functions

This system remotely locks and unlocks the doors. The operation indicator light flashes when the button is pressed. The keyless entry system is designed to operate up to about 2.5m(8ft) from the center of the vehicle.

- 1) Lock button
 

To lock the doors, press the lock button on Hand Unit (Transmitter).  
A beep sound will be heard once and the hazard warning lights will flash once.
- 2) Unlock button
 

To unlock the doors, press the unlock button on Hand Unit (Transmitter).  
A beep sound will be heard twice and the hazard warning lights will flash twice.

## 3. Immobilizer Functions

Immobilizer system allows the engine to start only with Hand Unit (Transmitter) the system recognizes. If someone attempts to start the engine with an unrecognized Hand Unit (Transmitter), the engine will not start, thereby helping to prevent the theft of your vehicle.