

 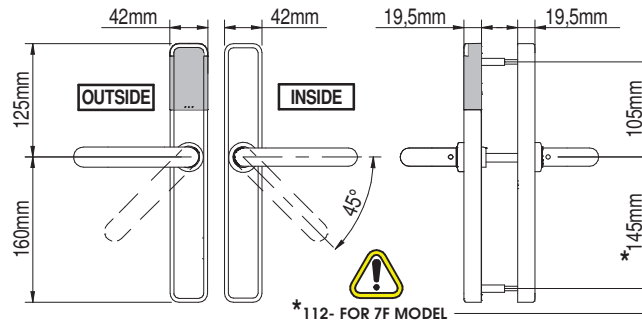
 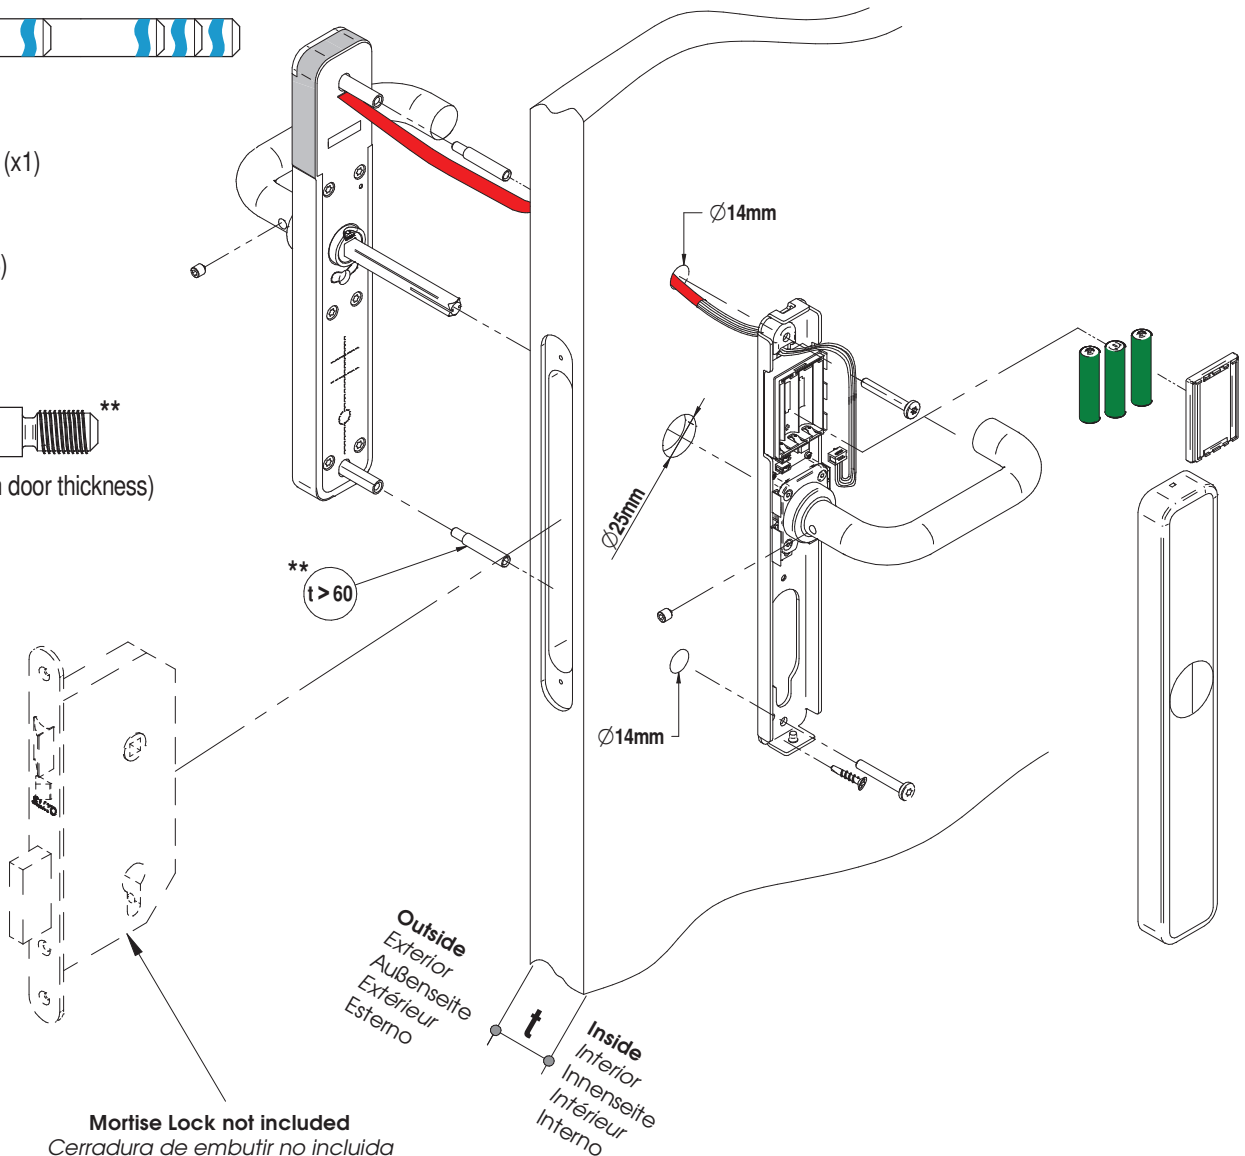
 


Installation guide XS4One


- (Eng) Installation guide
 (E) Guía de instalación
 (D) Montageanleitung
 (F) Guide d'installation
 (I) Guida all'installazione
 (P) Guia de instalação



- Ei 750 m 00 ffc t x h r series
 Ei 751 m dd ffc t x h r
 Ei 752 m dd ffc t x h r
 Ei 753 m dd ffc t x h r
 Ei 754 m dd ffc t x h r
 Ei 756 m 00 ffc t x h r
 Ei 757 m dd ffc t x h r
 Ei 7P0 m 00 ffc t x h r
 Ei 7P1 m dd ffc t x h r
 Ei 7P6 m dd ffc t x h r



Mortise Lock not included
 Cerradura de embutir no incluida
 Einsteckschloss nicht enthalten
 Serrure à mortaiser non incluse
 Serratura non inclusa
 Fechadura de embutir não incluida

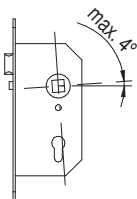


- (Eng) **SALTO recommends the use of a mortise lock, with a maximum 4° pre-turn.**
 (E) SALTO recomienda utilizar cerraduras con un pregiro máximo de 4°.
 (D) SALTO empfiehlt den Einsatz von Einsteckschlössern mit max. 4° Vorspannung.
 (F) SALTO recommande d'utiliser des serrures à mortaiser avec un angle au repos de 4° maximum.
 (I) SALTO raccomanda l'utilizzo di una serratura con un angolo di pre-rotazione massimo di 4°.
 (P) SALTO recomenda utilizar fechaduras com uma pré rotação máxima de 4°.


Installation guide XS4 One



SALTO
inspiredaccess

Ⓔ Eng Select handing
 Ⓔ E Seleccione mano
 Ⓔ D Drückerrichtung wählen
 Ⓔ F Choisir le sens de la bêcheille
Ⓔ I Scegliere il verso
 Ⓔ P Seleccione mão

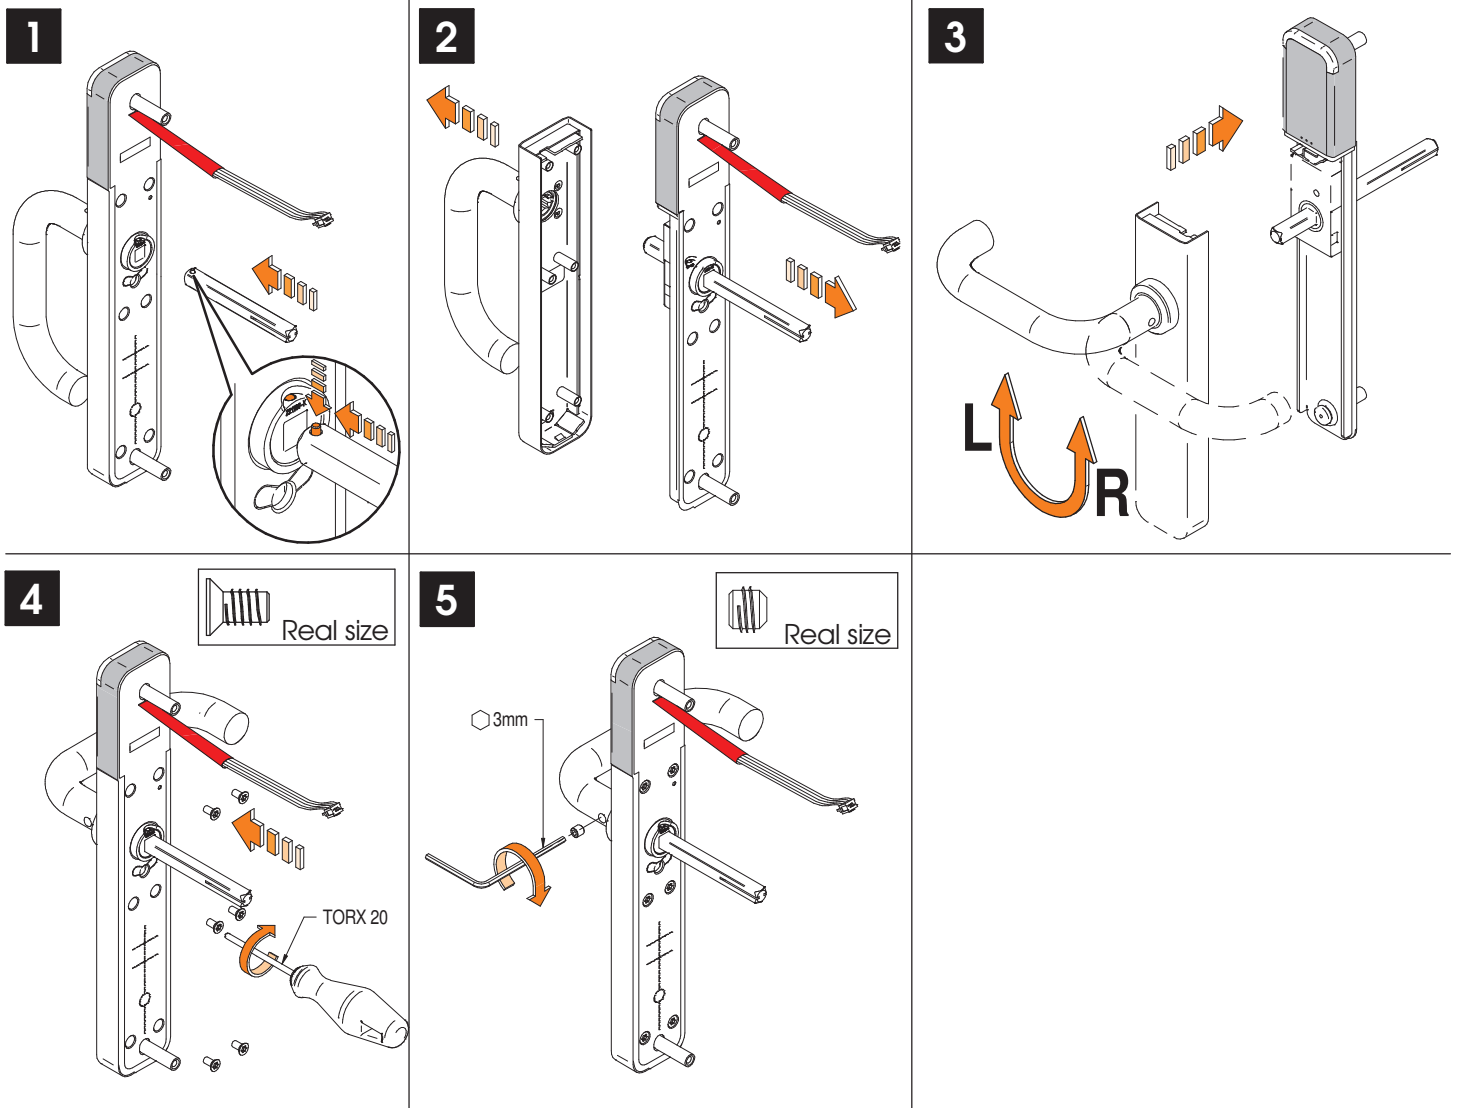

Ⓔ Eng Installation
 Ⓔ E Instalación
 Ⓔ D Installation
 Ⓔ F Installation
 Ⓔ I Installazione
 Ⓔ P Instalação

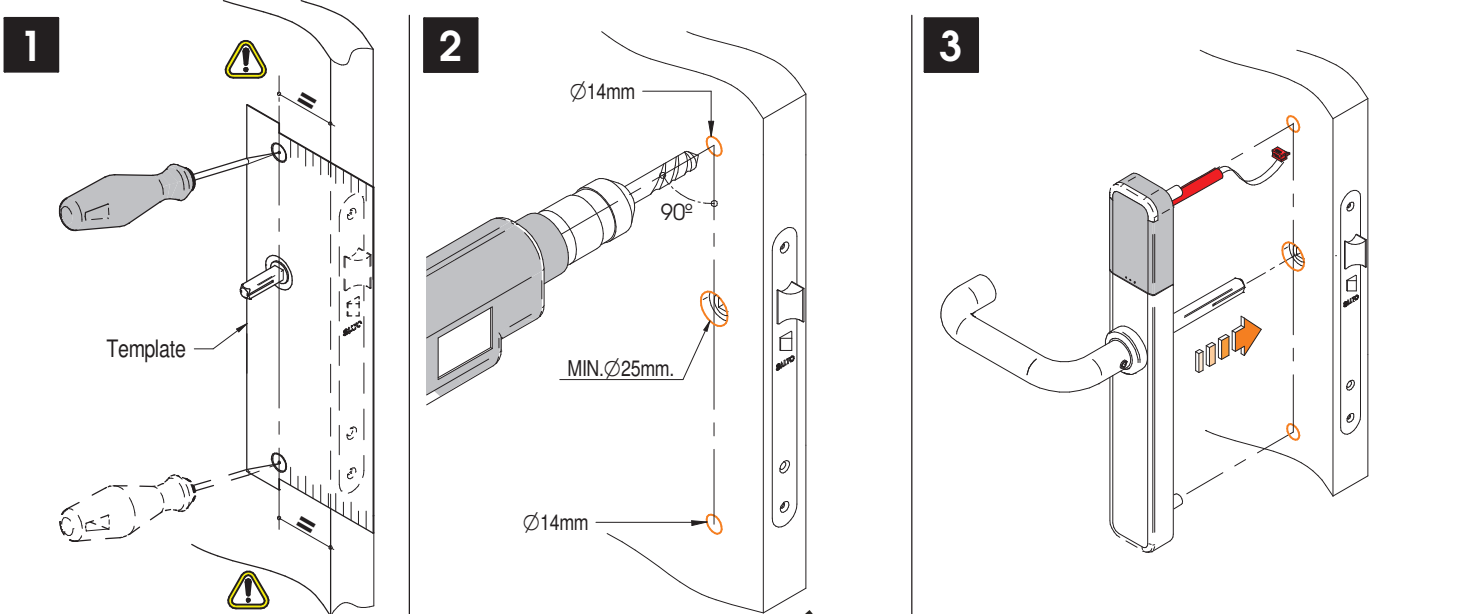

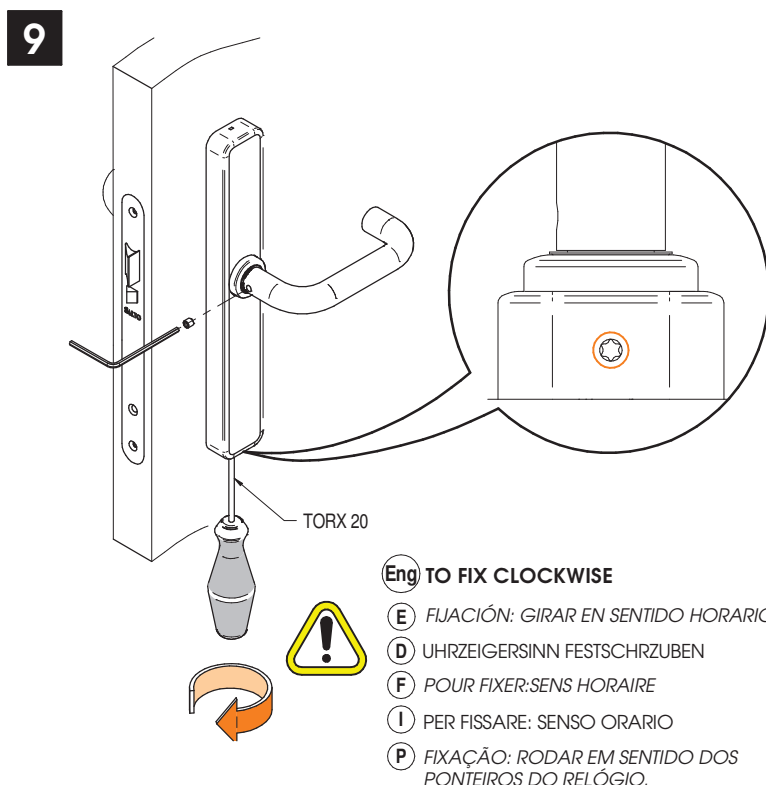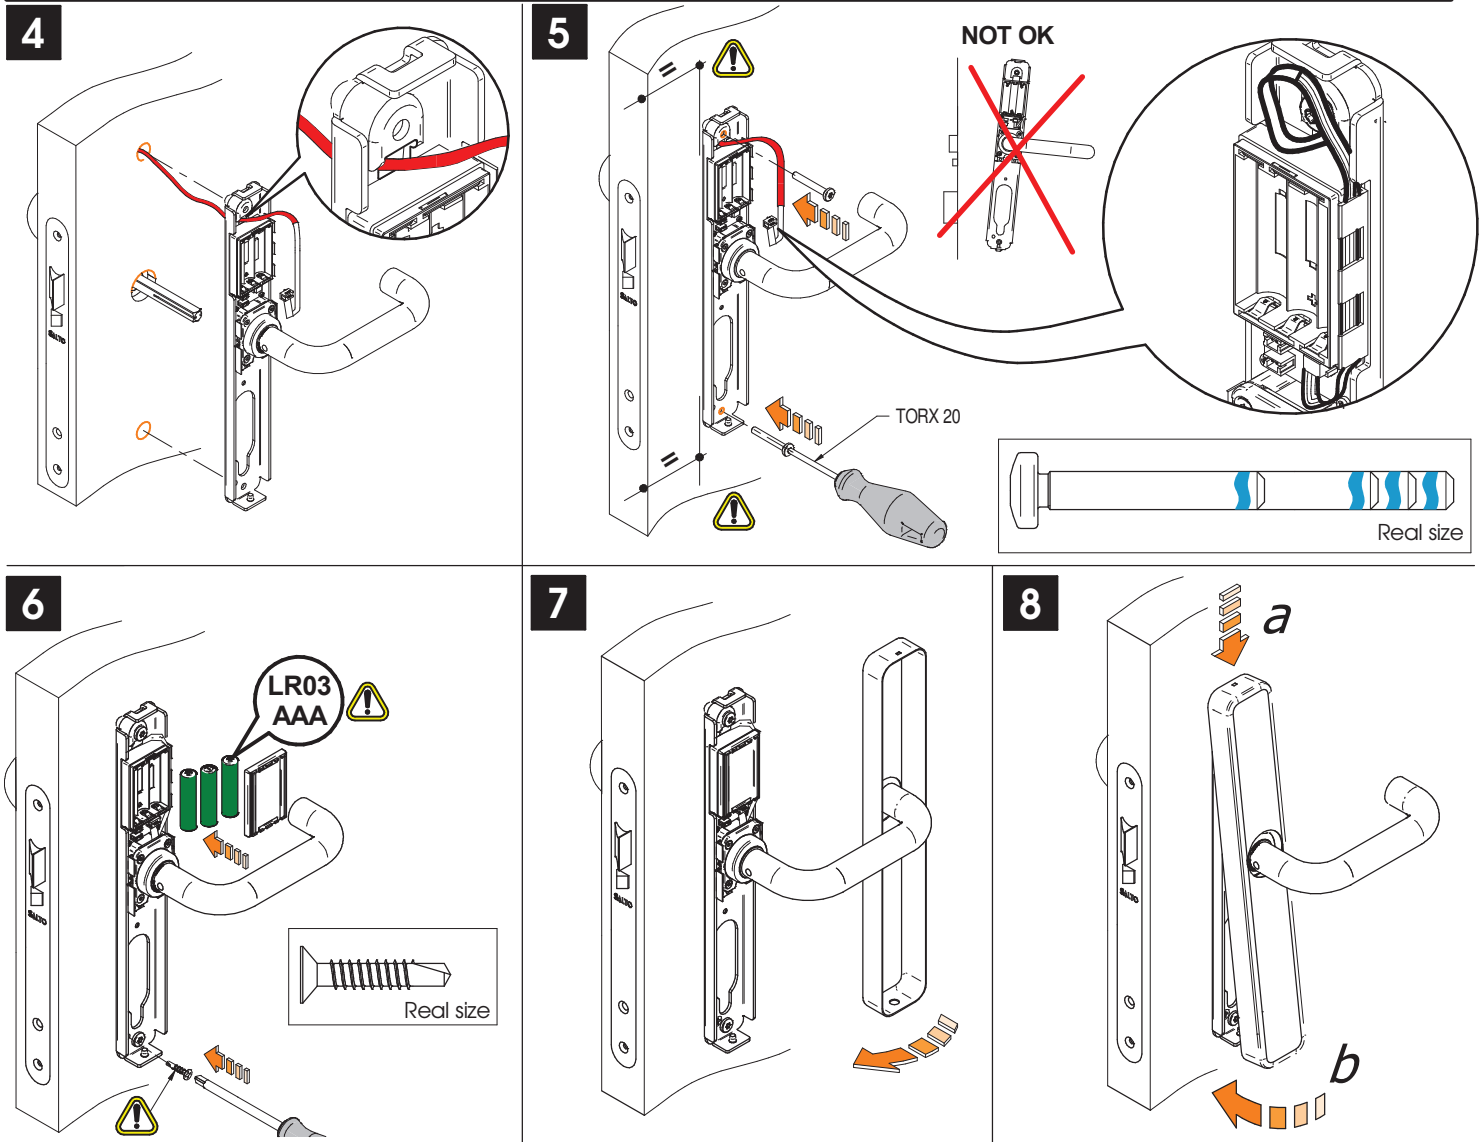

Eng TO FIX CLOCKWISE

- E** FIJACIÓN: GIRAR EN SENTIDO HORARIO
- D** UHRZEIGERSINN FESTSCHRUBEN
- F** POUR FIXER: SENS HORAIRE
- I** PER FISSARE: SENSO ORARIO
- P** FIXAÇÃO: RODAR EM SENTIDO DOS PONTEIROS DO RELÓGIO.



Eng

**AT THIS POINT DO NOT
CLOSE THE DOOR
PROGRAM THE LOCK FIRST**

Follow user manual

E

**NO CIERRE LA PUERTA. PROGRAME
LA CERRADURA**

Consulte el manual del usuario

D

**TÜR NICHT SCHLIESSEN.
ZUERST SCHLOSS PROGRAMMIEREN**

Folgen Sie dem Benutzerhandbuch

F

**NE FERMEZ PAS LA PORTE.
PROGRAMMEZ LA BÉQUILLE AVANT**

Consultez le manuel utilisateur

I

**PROGRAMARE LA SERRATURA
PRIMA DI CHIUDERE LA PORTA.**

Consultare il manuale utente

P

**NESTE PONTO NÃO FECHÉ A PORTA.
PROGRAME O ESCUDO PRIMEIRO**


Consult manual do usuário

Installation guide XS4 One

E i 751 m dd ffc t x h r
E i 7P1 m dd ffc t x h r




- Eng** HOTEL GUEST ROOM LOCK
- E** HABITACIÓN HOTEL
- D** HOTELZIMMERSCHLOSS
- F** PIÈCE D' HÔTEL
- I** CAMERE HOTEL
- P** QUARTO DE HOTEL

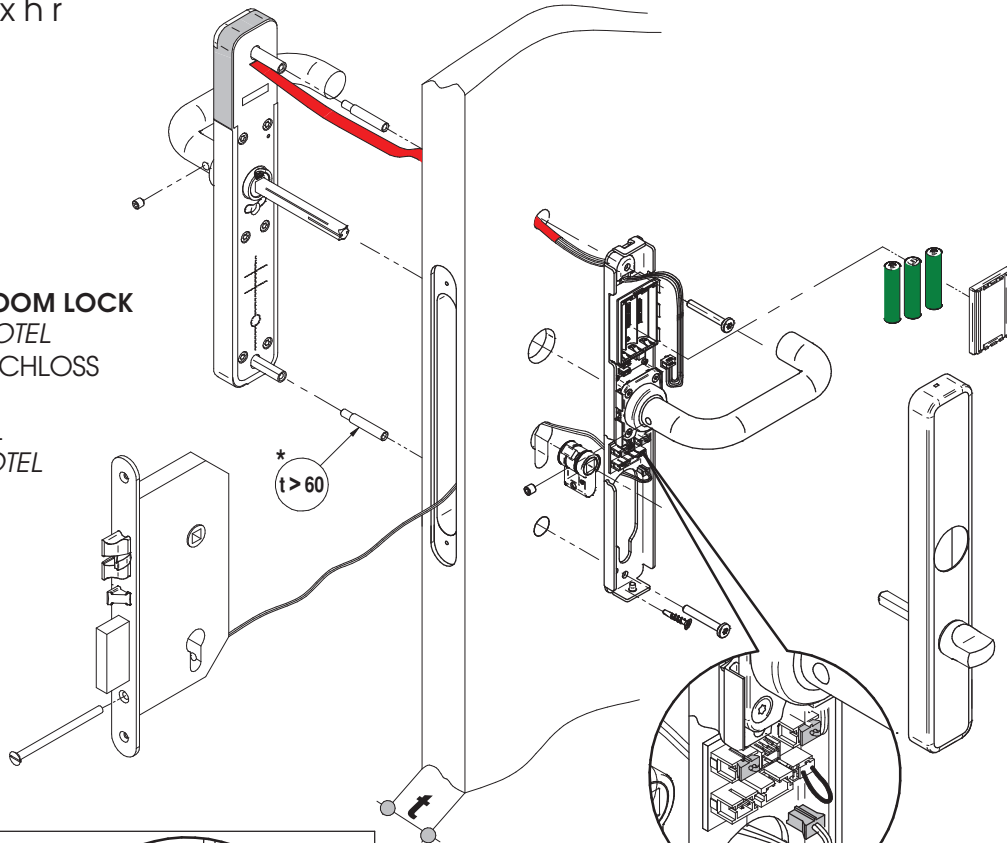

ONLY FOR LE7Sxx series MORTISE LOCK



- Unplug**
- Desconecte*
- Débranchez*
- Ziehen*
- Scollegare*
- Desliguar*

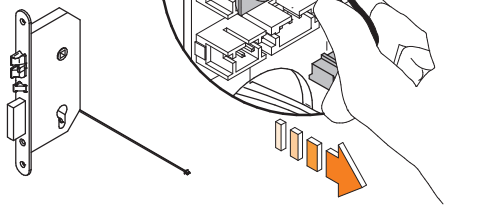

Eng Other models **E** Otros modelos **D** Andere Modelle **F** D'autres modèles **I** Altri modelli
P Outros modelos

- E i 756 m 00 ffc t x h r
- Eng** -Entry lock with privacy/ lockout funtion
 - E** -Modelo entrada con privacidad
 - D** -Beschlag mit Privacy-Funktion
 - F** -Béquille electronique avec fonction privacité
 - I** -Modelo di entrata con privacy
 - P** -Modelo entrada com privacidade

- E i 7P6 m 00 ffc t x h r
- Eng** -Entry lock with privacy/lockout funtion and key override
 - E** -Modelo entrada con privacidad y llave de emergencia con registro
 - D** -Beschlag mit Privacy-Funktion und Notschlüssel
 - F** -Béquille electronique avec fontion privacité et clef de secours
 - I** -Modelo entrata con privacy e chiave di emergenza con registrazione
 - P** -Modelo entrada com privacidade e chave de emergencia com registro

