Hearth & Home Technologies
FCC ID: UL2584-191
IC: 6722A-2841-191
SR: YYWWERMINNIN
SR: YYWWERMINNIN
USCAN: 5712 - 918MHz
Made in China
AUNYZ: 915.0-920.8 MHz

Product label SIZE: 30*10MM



PN barcode label SIZE: 39*6MM

MM08

IFT2 Installation Quick Reference

The RC400 remote shipped standard with a new fireplace:

- The RC400 remote was paired to the fireplace at the factory. It does not need to be re-paired, unless an accessory kit will be added at the time of installation. If no additional accessory will be added, simply follow steps 2 thru 8 below.
- 2. If installed, remove the batteries from the RC400 remote.
- 3. Verify the fireplace has power and secure electrical connections.
- 4. Adjust the ECM selector switch to "REMOTE" mode.
- 5. Switch the master reset switch to "ON" (if equipped).
- 6. Wait to verify the LED indicator on the ECM stops flashing.
- 7.Install the batteries in the RC400 remote.
- 8. The RC400 remote will automatically pair to the fireplace, as pre-set at the factory, within four minutes.

The RC400 remote and/or optional powervent, blower, or lights added as new accessory upgrade to a fireplace:

- 1. The RC400 remote will need to be paired to the ECM.
- 2. Follow the installation instructions provided.

153MM



PART LBL





Red ESD bubble bag would be changed to white Non-ESD bubble bag