

## OPERATING INSTRUCTIONS

Ensure the appliance is connected to a properly grounded electrical outlet on a minimum 15 Amp circuit. If a new outlet is required it should be installed by a qualified electrician according to applicable building codes.


### REMOTE CONTROL

**NOTE:** If the fireplace does not respond to the hand held control, see section A below


The fireplace is supplied with a radio frequency remote control. This remote control has a range of approximately 30 ft. (10m), it does not have to be pointed at the fireplace and can pass through most obstacles (including walls).

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

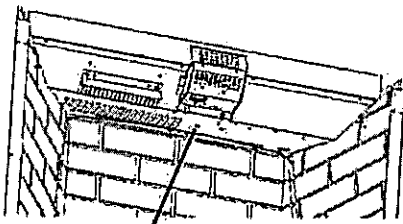

Learn Button

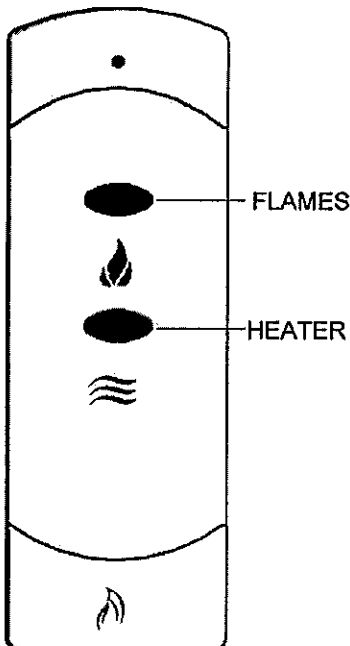

#### A. Remote Control Initialization

This procedure is required only when the unit is installed or the transmitter is replaced and is not effected by loss of power.

1. Ensure that power is supplied through main service panel.
2. Place fresh batteries in the transmitter.
3. Access the learn button by removing the front screen.
4. Press and hold down the learn button. You will hear the beep.
5. Press a button on the hand held transmitter.
6. Release the learn button when you hear the long beep.
7. This completes the remote control receiver / transmitter initialization.

#### B. Remote Control Usage

The remote control operates the fireplace modes. The Flame Effect and Backlog/Embers are turned ON/OFF by alternate action of the FLAME button on the remote transmitter. The Heater/Blower and front Embers are turned ON/OFF by alternate action of the HEATER button on the remote treansmitter.

**NOTE:**

While the heater is ON the embers in front of the grate will glow. Ensure the heater is OFF when unattended.

#### Resetting the Temperature Cutout Switch

The heater on this fireplace is protected with a safety device to prevent overheating. Should the heater overheat, an automatic cutout will turn OFF the Heater/Blower. The switch is reset by turning the unit OFF, waiting 10 -15 minutes and switching the unit back ON.