

TPMS TX022 User's Manual

TX022 Transmitter Specification	
Frequency	433.92 MHz
Pressure Range	100~1500 KPa
Temperature Range	-40 ~125°C
Operating Humidity	Max. 95%
Operating Temperature	-40 ~105°C
Storage Temperature	-40 ~125°C

1. Push the valve stem thru the rim, install the washer and nut, then tighten the nut to 36 in-lb (4N.m)





2. Hold the sensor body against the rim and install then tighten the screw to 20 in-lb (2.2 N.m)



3. FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two condition:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired

Information to user

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. In cases where the manual is provided only in a form other than paper, such as on a computer disk or over the Internet, the information required by this section may be included in the manual in that alternative form, provided the user can reasonably be expected to have the capability to access information in that form.