

# USER MANUAL

## *Enclosure:*



(Host Part)



(Infrared Controller)

## *Host operation:*

### CH key:

Short press CH key after, press PREV/ NEXT key to regulate the frequency right away, then press CH key to confirm the current frequency to combine behind

- 1) Withdraw, if the customer did not press CH key, then retreating a frequency modulation mode about the 2 Secs.

### PREV/ NEXT key:

Press these two keys right away after press CH key, mean to adjust the frequency.

Under the condition of did not press CH key, it is short to press PREV/ NEXT key to mean to adjust the song mode.

- 2) Grow to press to then mean to regulate the volume to add and reduce.
- 3) Pause hour, the figures tube manifestation the song ordinal number, show the frequency usually.
- 4) The volume manifestation scope is 0~99, tread into number is5.
- 5) The electricity prepares to establish to be worth for the 88.1 MHzs on the machine, the song ordinal number 0001, the volume is worth to show to 70 or so( to should true net value23).

The request of remember the function keeps the frequency, volume and the song ordinal number, at cut over the song cleft to keep.

## *Control from a distance the operation:*

- 1) A, CH+/ CH- the operation and frequencies set the method:

The tiny frequency modulation rate enactment method:

- 2) When press CH+ key, shoot the frequency to increase the 0.1 MHzs each time, but when press CH- key, shooting the frequency to reduce the 0.1 MHzs each time.

Directly input the numerical enactment method:

Make use of the numerical key of the remote control directly, the enactment shoots the frequency. For example the enactment shoots the frequency to 107.9 MHzs, need only to input 1,0,7 and 9 four piece words one by one in order on the remote control, then press CH+ or CH- Key, can immediately set the appointed frequency.

#### ***Volume regulates the method:***

While sow play music, press a VOL of version+ or VOL- Key, can increase or reduce the player output's volume.

1) Three, the song choice method:

Press top and bottom the song choice method:

2) While broadcast the appearance, press PREV or NEXTs to jump respectively up one song or next songs, until the song need.

Position the method directly according to the song number:

If know the song ordinal number that to choose, such as the 1234 song, can make use of the remote control to position directly up the numerical key,

At this time as long as input 1,2,3 and 4 four numerals one by one in order, then press PLAY/ PAUSE key, the player will jump the appointed No.1234th song, and start broadcast.

#### ***EQ enactment method:***

The EQ has five kinds of modes totally:Nature( NORMAL), rock'n roll( ROCK), soft( SOFT), jazz( JAZZ) and surround the voice( SRS) while broadcast the appearance, press EQ key can immediately press above-mentioned in proper order change one by one in order.

Four, broadcast/ the pause operation:

Press the PLAY/ PAUSE key on the remote control, can broadcast player at and two appearances of pause under carry on the h, under the pause appearance, the remote control has no function in addition to other key operations of PLAY/ PAUSE key.

#### **FCC Caution:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### **FCC Notes:**

The manufacturer is not responsible for and radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.