

**mobile phone**  
**User Manual**  
**Model: AM213**  
**Brand: AMGOO**  
**FCC ID: UOSAM213**

# Content

<b>1 SECURITY MEASURES .....</b>	<b>1</b>
1.1 SAFETY PRECAUTIONS .....	1
1.2 USE OF THE ENVIRONMENT .....	1
1.3 FAIR USE .....	1
1.4 ACCESSORIES AND BATTERIES .....	1
1.5 DATA BACKUP .....	2
<b>2 GETTING USED .....</b>	<b>2</b>
2.1 HOW TO INSTALL THE BATTERY .....	2
2.2 HOW TO REMOVE THE BATTERY .....	2
2.3 HOW TO CHARGE THE BATTERY .....	2
2.4 HOW TO INSTALL & REMOVE THE SIM CARD .....	2
<b>3 IME .....</b>	<b>3</b>
<b>4 MAKE &amp; RECEIVE CALLS .....</b>	<b>3</b>
4.1 MAKE A CALL .....	3
4.2 MAKE AN EMERGENCY CALL .....	3

4.3	INTERNATIONAL CALLS.....	4
4.4	ANSWER THE CALL.....	4
4.5	ADJUST THE VOLUME.....	4
4.6	TALK HANDS-FREE.....	4
4.7	CALL WAITING.....	5
4.8	CALL OPTIONS.....	5
<b>5</b>	<b>PHONEBOOK.....</b>	<b>5</b>
5.1	CONTACTS LIST.....	5
5.2	OPTIONS MENU.....	6
<b>6</b>	<b>MESSAGES.....</b>	<b>6</b>
6.1	WRITE MESSAGES.....	6
6.2	INBOX.....	7
6.3	DRAFTS.....	8
6.4	OUTBOX.....	8
6.5	SENT MESSAGES.....	8
6.6	BROADCAST MESSAGES.....	8
6.7	MESSAGES SETTINGS.....	8

6.7.1 Text message: .....	8
6.7.2 Multimedia message: .....	9
6.7.3 Service message: .....	9
<b>7 CALL CENTER .....</b>	<b>10</b>
7.1 CALL HISTORY .....	10
7.1.1 Missed calls: .....	10
7.1.2 Dialed calls: .....	10
7.1.3 Received calls: .....	10
7.1.4 Delete call logs: .....	10
7.2 CALL SETTINGS .....	10
7.2.1 SIM call settings: .....	10
7.2.2 Advanced setting:.....	11
<b>8 USER PROFILES.....</b>	<b>11</b>
<b>9 SERVICES .....</b>	<b>12</b>
9.1 HOMEPAGE .....	13
9.2 BOOKMARK .....	13

9.3 SEARCH OR INPUT URL .....	13
9.4 RECENT PAGES .....	13
9.5 SETTING .....	13
<b>10 CALENDAR.....</b>	<b>14</b>
<b>11 ALARM .....</b>	<b>14</b>
<b>12 IMAGE VIEWER.....</b>	<b>14</b>
<b>13 CAMERA .....</b>	<b>15</b>
<b>14 CALCULATOR.....</b>	<b>15</b>
<b>15 AUDIO PLAYER.....</b>	<b>15</b>
<b>16 VIDEO PLAYER.....</b>	<b>16</b>
<b>17 FM RADIO.....</b>	<b>16</b>
<b>18 VIDEO RECORDER .....</b>	<b>17</b>

<b>19 SOUND RECORDER .....</b>	<b>17</b>
<b>20 MOBILE TV .....</b>	<b>17</b>
<b>21 FILE MANAGER.....</b>	<b>18</b>
<b>22 EBOOK READER.....</b>	<b>19</b>
<b>23 GAMES.....</b>	<b>19</b>
<b>24 SETTINGS .....</b>	<b>19</b>
24.1 DUAL SIM SETTINGS.....	19
24.2 PEN CALIBRATION.....	19
24.3 PHONE SETTINGS.....	19
24.4 NETWORK SETTINGS.....	20
24.5 SECURITY SETTINGS.....	20
24.6 CONNECTIVITY.....	21
24.7 RESTORE FACTORY SETTINGS.....	21
<b>25 LOCK .....</b>	<b>22</b>

**26 POWER OFF ..... 22**

**27 MAINTENANCE AND HELP ..... 22**

27.1 MAINTENANCE AND REPAIR ..... 22

27.2 MAINTENANCE OF THE BATTERY ..... 23

27.3 HELP ..... 24





# 1 Security measures

## 1.1 Safety Precautions

✧ When mobile Phone use is prohibited or the use may cause interference or danger, please do not turn on it, and turn off the automatic startup function.

✧ Please read and follow the simple rules to prevent dangerous and illegal use.

## 1.2 Use of the environment

✧ When you take a plane the phone should be turned off, wireless devices may cause interference in aircraft.

✧ In the hospital should be powered off, the phone may make some medical equipment (such as pacemakers, hearing aids, etc.) have an impact.

✧ At gas stations, oil depots, chemical plants, where blasting operations or near flammable materials and chemicals areas, do not use the phone.

✧ Do not use mobile phones while driving, before using, you should stop your car.

## 1.3 Fair Use

✧ Just use your phone in the normal position.

✧ When you connect it to other devices, please read the instructions for detailed and safety actions, do not connect incompatible products.

✧ Only qualified personnel can install and repair the phone.

## 1.4 Accessories and batteries

✧ Use only the specified batteries and accessories.

✧ The use of any unauthorized accessories may affect the

phone's performance, even lead to physical danger or in violation of state on the relevant provisions of communication terminal products.

### 1.5 Data Backup

✧ Please note that back up all important data, so as to avoid loss.

## 2 Getting used

### 2.1 How to install the battery

- ✧ Open the back cover.
- ✧ Insert the battery into the battery slot.
- ✧ Close the phone cover.

### 2.2 How to remove the battery

- ✧ Open the back cover.
- ✧ Remove the battery from the battery slot.

**Note: We recommend first off and then remove the battery to avoid loss of data in mobile phones.**

### 2.3 How to charge the battery

- ✧ Plug one end of the charger to the phone charging port, the other end into a household power outlet. **Note: This machine can be connected to a computer USB port to charge.**
- ✧ When charging the battery level indicator on the screen icon was dynamic display, until the battery is full up.
- ✧ After charging, disconnect the power, then unplug the charger, so that the charger no-load.

### 2.4 How to install & remove the SIM card

The machine supports two SIM cards. Before doing the following, make sure the phone is turned off and no charging.

- ✧ Open the back cover, remove the battery.
- ✧ Make the golden contacts of the SIM card face down, Card gap facing the slot gap, and then put into it.
- ✧ Install the battery and close the battery cover.
- ✧ SIM card's removal and installation steps are in reverse.

### 3 IME

This phone supports multiple languages input. The IME can be alternated by pressing the "ctrl" key in the edit interface. Then press the corresponding keys in the keyboard to input.

## 4 Make & receive calls

### 4.1 make a call

- ✧ Enter the phone number in the dial screen, press the dial key with the selected SIM card to make calls.
- ✧ During the call press the end key to end the call.  
**You can also choose from a number of direct contacts to allocate;**
- ✧ Standby interface into the phone book, choose the number to dial.
- ✧ Press dial key to call the selected number.

#### **Directly in the call log can also call:**

- ✧ In the idle screen press the dial button to enter the call log.
- ✧ Select the number to dial.
- ✧ Press the dial button dial telephone.

### 4.2 Make an emergency call

Within the GSM system, you can make an emergency call. When

making an emergency call, please do not arbitrarily terminate the call. Phone without a SIM card can still make emergency calls.

✧ Enter the emergency number.

Press dial keys to make an emergency call.

**Note: As with any mobile phone, due to the network coverage reasons or wireless signal transmission case, may not support the characteristics of the mobile phones, Some networks do not even support the 112 emergency call service. Thus, for particularly critical communications (eg medical emergencies), should not rely solely on mobile phones. Please check with your local network operator and reconciliation.**

#### **4.3 International calls**

✧ In the Dial screen press "+" key then in turn enter the country code, area code and telephone number.

Press dial key to make international calls.

**Note: International dialing code of some networks is not "+" sign, please be discretion.**

#### **4.4 Answer the call**

✧ If there have an incoming call, press the dial key to answer the phone, hang up the keys to reject a call.

✧ press the hang up key to end the call.

#### **4.5 adjust the volume**

During the call you can press the joystick's left and right to adjust the volume.

#### **4.6 Talk hands-free**

On the phone, you can click directly to open or close the hands-free speakerphone.

#### **4.7 Call waiting**

Conference call feature requires opening Call Waiting. If the network supports call waiting and you start this feature, During a call when there are new calls you will hear the call waiting tone, you can answer or reject the new call. Enter the "call waiting" feature to enable or disable call waiting.

#### **4.8 Call options**

In the state of calling, press the left function key to enter the call option.

In call option, You are able to maintain / restore, end the call, establish a new call, visit call logs, calls records, SMS, sound recording, DTMF(dual-tone multifrequency) and other operations.

### **5 Phonebook**

This feature can view and manage the telephone number information in the machine and in the SIM card.

#### **5.1 Contacts List**

✦ Press the right function key in the standby screen to access Contacts.

✦ Contacts list is displayed by default for all phonebook records in mobile phone and SIM card. , you can press "options" to enter the menu, then select "Contacts Settings -> preferred storage location" to re-set the display of the phone book..

✦ In the list of pages can perform the following operations:

-Select "Add Contact" you can add a SIM card or phone

number;

-Enter the initials to quickly find the phone number;

## 5.2 Options menu

In the Contacts Options menu you can do the following:

- ✧ **View:** check the detail of the current contact number.
- ✧ **Sending text message:** Sending messages to the current number.
- ✧ **Sending multimedia message:** Sending multimedia message to the current number.
- ✧ **Call:** Dial the current number; or make an IP phone call.
- ✧ **Edit:** Edit the detail of the current number.
- ✧ **Delete:** delete the current number.
- ✧ **Copy:** Copy the current number.
- ✧ **Caller groups:** Add and edit caller groups.
- ✧ **Phonebook settings:** Able to take operations below:
  - 1、**Preferred storage:** Choose the preferred position of storage.
  - 2、**Speed dial:** Turn on “speed dial” and set the number. Speed dial is available by pressing the corresponding key in the standby interface for a longtime.
  - 3、**Extra numbers:** Set the fixed dial.
  - 4、**Memory status:** Memory status of SIM card and the phone can be checked.

## 6 Messages

### 6.1 Write messages

**Txt message:**

- ✧ Enter the interface of the message editing , input the message content, Click options to enter the options menu;

✧ Select "Options" to enter the menu where you can select "Send, insert commonly used statement, insert contact information, insert emoticons, save messages" and other options

✧ Select the "send" enter the number of interface:

- Input number: input the recipient number directly;

- Add from Phonebook: enter the phonebook to select recipients.

✧ Enter the recipient number and then press the send to send text messages.

**Multimedia message:**

✧ Only when the network operator support, you can use this feature. And only the phone with compatible multimedia message features can receive and display properly.

✧ Enter the edit screen. Able to choose "send to", "input method", "add picture", "add picture", "add sound", "add video", "add subject", "preview MMS", "slide option", "advanced", "save to drafts".

**6.2 Inbox**

✧ Inbox storage and manage the received messages.

Enter the selected Inbox, press the navigation key to select text, and press the OK key to read its contents.

✧ Press the left function key to access the Options menu, you can restore, delete, forward, call, lock, mark, sort and so on.

### **6.3 Drafts**

✧ When edit a sms which saved as a draft message can be for viewing and management, operation in this feature , please refer to the Inbox.

### **6.4 Outbox**

✧ Outbox storage and manage the messages being sent and failed being sent. Please refer to the Inbox.

### **6.5 Sent messages**

✧ Sent messages storage and manage the messages sent and stored. Please refer to the Inbox.

### **6.6 Broadcast messages**

✧ community radio is a one-way message service which the consultation service center provide for the user in the system , such as weather and traffic services. the community radio Received will automatically be displayed in the standby screen, you can direct press the hang-up key cleared. For details, please consulting operator.

### **6.7 Messages settings**

#### **6.7.1 Text message:**

##### **✧SIM**

- **Profile settings:** setting the number of the SMS center
- **Validity period:** setting SMS validity period
- **Message type:** seting the type of SMS
- **Delivery report:** setting the switch of SMS report



- **Reply path:** setting the switch of reply path
- **Preferred connection:** setting a preferred connection of the SMS

- **Voice Mail server:** Each SIM card can be set two voice mail number in the settings, press the “1” key for a longtime to make available to listen to dial voice mail number voice messages. This function should be supported by the network operator.

- ✧ **Memory status:** The memory status of SIM card and the phone are visible.

- ✧ **Save sent message:** setting the switch of the storage of sent messages.

- ✧ **Preferred storage:** setting the preferred position of the storage of SMS.

#### **6.7.2 Multimedia message:**

**Data account:** setting data account

**Common setting:** able to check and set the status of “sending”, “retrieval”, “preferred storage”, “memory status”

#### **6.7.3 Service message:**

Setting the switch of availability to receive the service message.

## 7 Call center

### 7.1 Call history

This function records related call records. Enter call records, choose a SIM card, you can see the SIM card related calling records options.

#### 7.1.1 Missed calls:

This function records the number or name recently missed. Press options to see the options from the list. The options that can be chosen are “view”, “call”, “send text message”, “send multimedia message”, “save to phonebook”, “edit before call”, “delete”.

#### 7.1.2 Dialed calls:

This function records the number or name recently called. for Operations please reference Missed calls.

#### 7.1.3 Received calls:

This function records the number or name recently received. for Operations please reference Missed calls.

#### 7.1.4 Delete call logs:

Choose whether or not to delete call record data.

### 7.2 Call settings

#### 7.2.1 SIM call settings:

◆**Call waiting:** Set the status to be activated, deactivated, query status. Note: This function depends on the network operator. Please ask the local network operator for more detail.

◆**Call divert:** The options are “Divert all voice calls”, “Divert if unreachable”, “Divert if no answer”,

“Divert if busy”, “Divert all data calls”, “Cancel all diverts”. Note: This function depends on the network operator. Please ask the local network operator for more detail.

✧**Call barring:** The options are “All voice calls”, “International voice calls”, “International voice calls except to home”, “All voice calls”, “Voice calls when roaming”, “Cancel all”, “Change barring password”. Note: This function depends on the network operator. Please ask the local network operator for more detail.

✧**Line switching:** Able to switch line 1 or line 2.

### 7.2.2 Advanced setting:

✧**Auto radial:** Able to open or close the function of auto radial. When it’s on, the phone shall redial automatically after you failed dialing.

✧**Call time reminder:** You will be reminded when the call time reaches the time set before if it’s on.

✧**Answer mode:** Able to set answer the call by pressing any key or auto answer when headset mode.

## 8 User profiles

The phone provides general, silent, meeting, outdoor. Select it, click left keys and you can choose to activate, customize or reset the mode. Select “activate” and you activate the associated function. Select “reset” and you restore the profile to default mode. Select “customize” and you set associated function below:

- ✧ **Alert type:** Able to set the alert type(alert way: ring, vibrate, silent, vibrate then ring)
- ✧ **Ring type:** Able to set ring type(alert way: repeat, ascending, beep once).
- ✧ **Incoming call:** Able to set ringtone of SIM card incoming call.
- ✧ **Ringtone volume:** Set incoming call ring size.
- ✧ **Message:** Able to set ringtone of SIM card message.
- ✧ **Message volume:** Set message size.
- ✧ **Keypad:** Able to set the sound of keypad to be “silent”, “click”, “tone”.
- ✧ **Keypad volume:** Set key volume.
- ✧ **Power on:** Set the tone when the phone is being powered on.
- ✧ **Power off:** Set the tone when the phone is being shut down.
- ✧ **System alert:** Set the system alert on or off.

## 9 Services

The internetwork is the application platform which wireless communication combine with with Internet ,it can make you get plentiful Internet information resources and electronic commerce application by phone.

Note:

1. Your Internet service provider may not support the certain functions, in order to guarantee the normal operation of the browser line, please confirm your SIM card has support the Internet service.

2. when you browse the web, it will costs related flow fee, the expenses please enquiry local operators.

### **9.1 Homepage**

The choice will be directly connected to home page which you set in advance or the default.

### **9.2 Bookmark**

Choosing a bookmark can visit the website which was set by the bookmark. You can reserve the commonly used web site in the favorites. Specific operation is as follows:

Add new bookmark: choose to add new bookmark, preserve after enter a new bookmark address and name.

### **9.3 Search or input URL**

Input the words to search or the website address to browse.

### **9.4 Recent pages**

Record your visited web addresses before.

### **9.5 Setting**

Able to set the homepage of the browser, configuration files, data account, browser setting, favorite, security.

## 10 Calendar

- ✧ In the main interface of calendar, press left or right key of navigation keys to switch year and month.
- ✧ Press the "options" to enter menu, you can view the same day/all (task), add event, jump to a specified date, deal with weekly/monthly check, turn on or off the lunar switch and so on.

## 11 Alarm

you can set 5 alarm clocks, which support ring when shutdown.

- ✧ Enter the alarm function, choose a clock, and press left key to enter editing interface.
- ✧ Press up or down of navigation key to choose setting items, Press left or right of navigation keys, or use a digital keyboard to modify, and press the right key to save the settings.

## 12 Image viewer

In [image viewer] interface, press the [option] can undertake the following function:

- ✧ **View:** Able to view the selected image.
- ✧ **Image information:** Review images for details.
- ✧ **Browse style:** Able to choose list style or matrix style.
- ✧ **Send:** Send the image by the means of Bluetooth or MMS.
- ✧ **Use as:** Set the pictures selected as "Wallpaper", "Power on display", "Power off display".
- ✧ **Rename:** Change the name of the selected pictures.
- ✧ **Delete:** Delete the selected pictures.

✧ **Sort by:** Sort the images by their names, types, times or sizes.

✧ **Storage:** Set the default path of picture storage.

### 13 Camera

Into the camera preview interface the main menu, click on the icon photo camera.

✧ Enter into options menu with pressing options and you can do below concerned settings:

◆ **Switch to video recorder:** Switch to video recorder.

◆ **Photos:** Enter album.

◆ **Camera settings:** On anti-flicker and delay timer set.

◆ **Image settings:** On image size and image quality set.

◆ **White Balance:** Auto, Daylight, Tungsten, Fluorescent, Cloudy, Incandescent.

◆ **Scene Mode:** Normal and Night.

◆ **Effect settings:** Set photo effect.

◆ **Storage:** Set photo storage path.

◆ **Restore default:** The camera back to the default settings.

### 14 Calculator

Calculator can execute addition, subtraction, multiplication, division, and four fundamental operations of arithmetic.

### 15 Audio player

In the music player interface, can play, pause, stop, fast forward, rewind, on the song, under a modified volume etc.

Into the playlist by options:

- 1、Play: The currently selected songs.

2、Details: You can view the selected songs specific information.

3、Refresh list: The song list refresh.

4、Settings: The list auto gen, repeat, shuffle, background play set.

## 16 Video player

Enter video list. According to options can do the following:

- ◆ **Play:** The selected video playback
- ◆ **Send:** Via multimedia message or Bluetooth transmission
- ◆ **Rename:** The selected video rename
- ◆ **Delete:** Delete the selected video
- ◆ **Sort by:** Selection sort
- ◆ **Storage:** Select the video path

Video playing interface can play, pause, fast forward, rewind, full screen, and volume etc.

## 17 FM radio

✧ The phone has FM Radio function for listening broadcast, but the function is available only with the earphone inserting.

Enter options can carry out the following operations:

✧ Channel List: For compiling channel name and rate.

✧ Manual Input: For inputting rate manually .

✧ Auto Search: For searching channels automatically and saving the searched channels into Channel List.



✧ Settings: For setting radio concerned parameters.

✧ Record: Showing the recorded sounds.

✧ File list: Can enter the recording list.

## 18 Video recorder

Into the camera preview interface, click on the icon began to start recording..

✧ Go to the options menu, you can do the following settings:

◆ **Switch to camera:** Switch to camera.

◆ **Camcorder settings:** On anti-flicker set.

◆ **Video settings:** On video quality set.

◆ **White Balance:** Auto, Daylight, Tungsten, Fluorescent, Cloudy, Incandescent.

◆ **Effect settings:** Set photo effect.

◆ **Storage:** Set photo storage path.

◆ **Restore default:** The camera back to the default settings.

## 19 Sound recorder

Enters the recording interface, click on the icon began can record.

Go to the options menu, Can be carried out new record, play, append, rename, delete, list, setting, use as, send Operation.

## 20 Mobile TV

Enter Mobile TV and search the effective channel to watch. The channels can be changed by the “up” and “down” button in the channel list. Press the side key to change the volume. Press the left function button to choose “Play”, “Update”, “Rename”, “Delete”.

## 21 File manager

File management features provide file management functions in the phone or in the T cards storage device. Enter file management, there will be the current storage device list.

- ✧ In the list, the phone and T card can be formatted and all data will be deleted.
- ✧ Click “open” enters the selected folder;
- ✧ Click Options, you can perform the following operations:
  - ◆ **Open:** open the current file.
  - ◆ **Send:** send the selected file by Bluetooth or MMS.
  - ◆ **New folder:** build a new folder in the current storage device.
  - ◆ **Rename:** rename the current file.
  - ◆ **Delete:** delete the selected folders, this function for system folders is unavailable.
  - ◆ **Sort by:** according to folder name, date, size, sorting, type.
  - ◆ **Mark several:** mark for single or multiple folders.
  - ◆ **Copy:** copy the file into a certain document.
  - ◆ **Move:** move the file into a certain document.

- ◆ **Delete all files:** delete all the files.
- ◆ **Details:** check the related information of the folder.

## 22 Ebook reader

Ebooks whose formats are txt can be read. **Note: Txt files should be stored under T card' s Ebook menu or in the phone.**

↵When entering the reader, the files stored in the phone or T card are list in the interface. The options “open Ebook”, “global settings”, “book informations”, “delete”, “delete all files”, “sort by”, “help” are able to be operated. Among them, “global settings” has functions to set font size, scroll type, scroll speed and the storage position. ↵When reading, press the left function key to enter the menu. “Full screen on”, “find”, “jump to”, “add bookmark”, “go to bookmark”, “delete bookmark”, “auto scroll on”, “close” .

## 23 Games

The machine provides a puzzle game for the user.

## 24 Settings

### 24.1 Dual SIM settings

Able to choose “Dual SIM open”, “Only SIM1 open” or “Only SIM2 open” .

### 24.2 Pen calibration

Mobile phone touch screen calibration.

### 24.3 Phone settings

↵ **Time and date:** Set the time, date and local city and its

format.

✦ **Schedule power on/off:** Set up automatic open/shutdown of the time and switch. Open the automatic shutdown function, when the time is out the phone will automatic turn on/off.

✦ **Language:** Set the language the phone displays.

✦ **Pref. input method:** Set fuzzy tone, hand to set the pace, handwritten font size, and font color handwritten.

✦ **Display:** Setting “Wallpaper”, “Power on display”, “Power off display” .

✦ **Flight mode:** Setting the phone to be the common mode or the flight mode.

✦ **Misc. setting:** Setting the lightness of the background light of LCD.

#### 24.4 Network settings

Setting to choose the network by hands or automatically.

#### 24.5 Security settings

✦ **SIM card security:** This function can open or close the password lock. PIN number need to be input to power on the phone after it being locked. Remarks: SIM card would be locked after 3 times mistaking the PIN number, and then PUK number is necessary to unlock it.

✦ **Phone security:** Open this function, when boot you need to input password, the default password is 1234.

✦ **Auto keypad lock:** Setting the waiting time of auto keypad lock. The keypad will be locked automatically after the set time has

passed in the standby interface without any operation.

✦**End key lock:** Set whether can press the end key lock keyboard shortcut.

## 24.6 Connectivity

✦**Bluetooth:1. Power:** Setting the power of Bluetooth.

**2. Visibility:** Setting the visibility of Bluetooth.

When it's off, other phones can't search this phone though it has opened Bluetooth.

**3. My device:** Searching the devices which has turned on Bluetooth nearby.

**4. Search audio device:** Searching Bluetooth earphone nearby.

**5. My name:** The name shows on other phones when Bluetooth is on and the phone is searched.

**6. Advanced:** Setting the audio path and the position of storage and check the Bluetooth address.

✦**Data account:**View and edit data account.

## 24.7 Restore factory settings

This function will be used for some settings which need restore the default Settings. Choose the item and input factory password for confirmation (factory password is 1122), the related parameters will return to factory Settings.

## 25 Lock

- ✧ Enter into keypad locked status after clicking it.

## 26 Power off

- ✧ Click it to shutdown the phone.

## 27 Maintenance and help

### 27.1 Maintenance and repair

The phone is designed excellent, by understanding this cell phone's maintenance and repair, you can use safe and effective in a long time:

- ✧ Please put your mobile and accessories where children can't touch.
- ✧ Please keep the cell phone dry. Rain, moisture and liquid contain minerals, so will corrode phone's circuit .
- ✧ Please don't put the phone on messy, dirty place.
- ✧ Please do not use mobile phone or keep in high temperature . High temperature can shorten the life of the electronic components, damage to the battery, and make some plastic part ddeformed or melt.
- ✧ Please do not use mobile phone or keep in low temperature . When the phone is in normal temperature, moisture in the phone internal may coagulate, which will cause the damage of the circuit board.
- ✧ Do not disassemble the mobile phone, casual treatment may be damaged cell phone.
- ✧ Please avoid falling, beating and vibrating mobile

phone, inappropriate outside force may damage mobile phone's circuit .

✧ Do not use chemical solvents or cleaner to clean mobile phone. To clean mobile phone, please use the soft cotton fabrics stained with water or neuter soap to brush cell phone .

✧ Please use the original manufacturer's recommended accessories.

✧ If the phone or its parts is out of order, please look for professional maintenance to repair your phone.

### **27.2 Maintenance of the battery**

✧ New battery can achieve the best performance after two or three full charge and discharge.

✧ Batteries can be charged and discharged hundreds of times, but will ultimately be ineffective. When the the talk and standby time is significantly short, you need to purchase a new battery.

✧ When the charger is not using, please cut off power supply. Don't connect battery to the charger more than a week, because excessive charge will shorten the battery life.

✧ if the phone is no used in a long time, please keep charging at least 20 minutes or more before used again.

✧ To make the battery life as long as possible, you can discharge the battery by turning on until turning off automatic . Don't try to use other unauthorized method to discharge.

✧ When the battery is low, and can only keep a few minutes of talk time, mobile phone will make sound warnings. when the battery is used up, phone will automatic shut down .

◇ If battery is used more than one and a half years, you'd better replace batteries. don't abandon used batteries and just give it to local recovery site .

### 27.3 help

If something abnormal happened when you use the phone, please solve refer to the table below , if there is still some questions, please contact network operator.

abnormalities	causes	solution
Receiving signal adverse	1. use mobile phones in the signal receiving bad areas . Such as tall buildings or basement near	If you are in the building, please move to the nearby window. If the signal is very weak, please move into the open place
	2. In a dense period, the line call is in congestion which cannot be calling.	Try to avoid
	3. Away from the network operator's base station	You can request network operators to provide the service area chart.



Echo or noise	1. The network operator's poor trunks caused	Hang up and dial again, trunks' choice may exchange for good lines.
	2. call line of some places is in bad	
can't be turned on	The battery is exhausted	To recharge the battery
Standby time becomes short	1. Standby time have something to do with network operators' system setting. The same cell phone is used in different networks, standby time may not the same.	In the signal receiving bad areas, please temporarily shut down
	2. The battery wears, and the performance will be gradually reduced after using a few years	Replace new battery
	3. When couldn't get a signal, phone will continue to launch to look for the base station, which will use a lot of battery, and cause standby time short.	Move to area of good signals or shutdown for the moment
No network service	1. The SIM card is invalid	Contact with network operators

	2. Not in a service area	Check the network operator's service area
	3. Weak signal	Move to the window or choose another service network
SIM card can't use	1. SIM card is damaged	Back to network operators for inspecting
	2. SIM card is not installed properly.	To properly installed the SIM card
	3. SIM card contacts is not clean	wipe the contacts with a clean cloth
Can't send SMS	Not open this service or no input text message center number	contact with network operators, and set the SMS center number
Can't call or can't answer the phone	Call limit has set	Close call limit
PIN error	Input wrong PIN code three times	Contact with network operators

Battery don't charge	<ol style="list-style-type: none"> <li>1. The battery or battery charger is damaged</li> <li>2. The cell phone is 5 degrees Celsius temperature below or above 40 degrees centigrade.</li> <li>3. Contact undesirable</li> </ol>	<ol style="list-style-type: none"> <li>1. Replace new battery or charger</li> <li>2. Adjust charging environment</li> <li>3. Check if the joint connection is good, Keep charging more than 20 minutes</li> </ol>
the data can't be input in the phone book	the phone book is full	Delete parts of this phone book
Unable to set some function	Network operators do not provide this function	Contact with network operators

(Note: if something abnormal happened with the phone, please refer to the table above for solutions. if problems still exist, please contact with network operator or the machine manufacturer. Text and images in the instructions leaflet is only for reference, please in kind prevail) About the statement conforming to 《the pollution's control measures of electronic products》

According to the national 《the pollution's control

measures of electronic products》(Ministry of Information Industry's 39th order), the following part lists the name and content of toxic/or harmful substances which the products may contain.

Poisonous and harmful substances' name and the content is in the list below						
Parts name	Poisonous and harmful substances or elements					
	lead (Pb)	mercury (Hg)	cadmium (Cd)	Hexavalent chromium (Cr6+)	Many bromine biphenyl (PBB)	(PBDE)
Shell components */ key	○	○	○	×	○	○
display screen	○	○	○	○	○	○
Circuit board components **	×	○	○	○	○	○
battery	○	×	○	○	○	○
battery charger	×	○	○	○	○	○
headset	×	○	○	○	○	○
External signal connections	○	○	○	○	○	○
Packaging materials	○	○	○	○	○	○

\*: Shell components include base/face case, lens, stopper, decoration.  
\*\*: Circuit board components include printed circuit board and its components, such as the parts of the resistor, capacitor, inductor, integrated circuit, connectors, ceramic piezo, horn, motor, camera etc.  
○: to indicate the content of poisonous and harmful material in all the parts of the homogeneous material is less than that ordered in 《 the poisonous and harmful materia's limited content in the electronic products》 .  
×: to indicate the content of poisonous and harmful material in all the parts of the homogeneous material is more than that ordered in 《 the poisonous and harmful materia's limited content in the electronic products》 .  
**Note: mobile phone's accessories take the actual configuration as standard .**

**FCC RF EXPOSURE INFORMATION:**

**WARNING!! Read this information before using your phone**

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

**BODY-WORN OPERATION:**

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**NORMAL POSITION:**

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

**TIPS ON EFFICIENT OPERATION:**

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

# RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is 0.667W/kg, next to the head is 0.746W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C or maximum over 50, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.