



# INSTRUCTION MANUAL

## COMMERCIAL INDUCTION COOKER, MODEL CE1567-1


### READ THESE INSTRUCTIONS

#### IMPORTANT INSTRUCTIONS

1. Read all instructions carefully before you use the appliance.
2. Do not touch hot surfaces, Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plug or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors (this item may be omitted if the product is specifically intended for outdoor use).
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated over.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Do not use appliance for other than intended use.
13. Save these instructions.

#### Parts of description

1. Ceramic plate
2. Upper cover
3. Control panel
4. Power cord

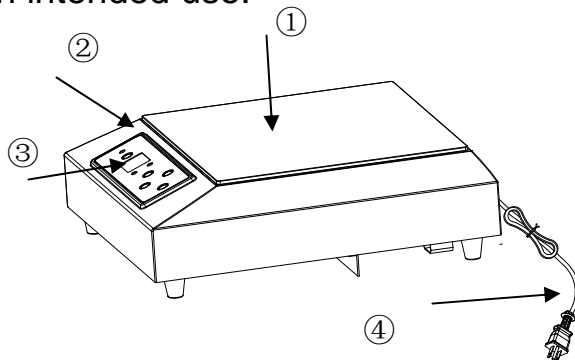

#### SAFETY

1. If they are abnormal, the power indicator will flash at the moment, the

appliance will shut off after three minute.

2. If we didn't move the cookware on the appliance for two hours, the appliance will shut off automatically.
3. If the bottom of cookware is overheat, the appliance will stop heating or shut off automatically.
4. To avoid electric shock and fire, do not attempt to disassemble the unit yourself.
5. Do not touch surface after use as it retains heat from cookware.
6. Do not place any other articles on the plate except the cookware.
7. Do not cook with aluminium-foil.
8. Place the pot in the circle on the top plate during heating.
9. Do not cook near a faucet, the water entering the air entrance or outlet may cause damage to the cooker.
10. Do not block the air entrance or outlet, and do not insert any conductive materials into the air entrance or outlet.
11. Do not strike or damage the ceramic plate. If the plate is cracked, pull out the plug immediately.


### **Notice**

1. Use individual socket. If you use an extension, the socket or current might be overloaded.
2. Place cooker on a flat surface, but keep away from the wall or other articles. Leave at least 2 inch of side space, 6 inch of rear space. When the air entrance or the air outlet is blocked, the internal temperature of the cooker rises and may automatically shut off during cooking. It is be used at a good place of well ventilated condition

3. Never heat an empty cookware. This will cause overheat and the cooker will cease to operate and cause possible damage to the product.
4. Remember to turn off cooker after use. If not the ventilator will continue to operate, resulting in energy-loss. (When turned off, fan will remain on for 3 minutes before automatically shutting off.)
5. Keep away from gas range or coal oil stove etc combustible. If the surrounding temperature is high, cooker will stop heating.
6. Make sure to wipe off water at the bottom of the pot before heating. when the bottom of the pot is heated, the boiling water may splash over and burn somebody.
7. Pacemaker users, please consult with a physician to be sure that your pacemaker will not be influenced by the induction magnetic field of this product before attempting to use.
8. After use, switch off induction cook-top by its control and do not rely on the pan detector.
9. Check the household voltage to ensure it matches the appliance's rated specification.
10. Do not use the plug of power supply with the wet hand.
11. Must open the cover at first while heating a packed food of bottle or tin.
12. Wipe away the water of cookware before using.

### **Operation Instruction**

- The appliance can be controlled by pushing buttons, which could be set on control panel.
- **ON/OFF** Push the button to turn on range. power level 1-15 will appear in LED screen.

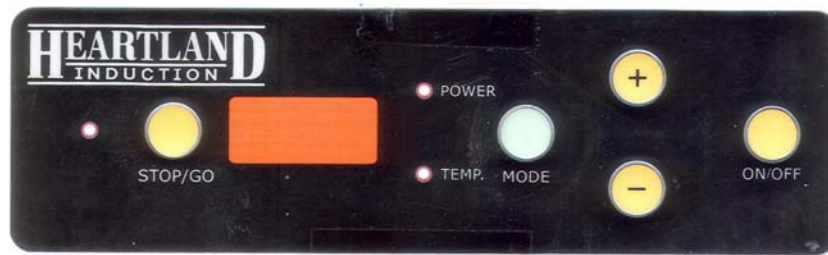

- **Power** Red power mode indicator light will illuminate. LED screen will blink if induction pan is not on cook plate.
- **+/-** Press the buttons to select desired power level.
- **MODE** The appliance has two modes of operation: “POWER” and “TEMP”, when the appliance is turned on, the “POWER” light will indicated. Press the button one time, the appliance will display “TEMP” mode the “TEMP” light will indicated , turn the “ON/OFF” button clockwise, the “TEMP” digit will change from 140 to 460, it means the temperature will increase from 140°F to 460°F.
- **Stop/Go**(turn unit off but retains all settings) Press this buttons to immediately turn off the induction rang. press again to turn on. red stop cooking indicator light will illuminate when stop mode is engaged.
- **Always turn off** Induction rang when not in use. press on/off button to induction range off(LED screen will turn blank). The ventilation fan will continue to run for 3 minutes.
- **Cleaning:** Wipe off cook plate with a damp soft cloth. Wipe off control panel and stainless steel body with a dry soft cloth.

## **WARNING**

1. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
2. If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.
3. Metallic objects such as knives, forks, spoons and lids should not be placed

on the hob surface since they can get hot.

4. Risk of fire and electric shock. Replace only with manufacture's cord set, part No 14AWG.

### **FCC information**

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

### **CARE AND MAINTENANCE**

- **BEFORE ATTEMPTING ANY CLEANING OR MAINTENANCE, REMOVE THE PLUG FROM THE SUPPLY SOCKET.**
- Wipe off the top plate with moistened cloth, To remove tough stains, use cleaning compound or polish first, then wipe it off with moistened cloth.
- Wipe off the body& adjustment with dry soft cloth to remove tough stains, use neutral liquid clean.

## **Preservation**

After maintenance, please follow the following steps to keep and stored.

1. After maintaining, take the appliance into the packing box.
2. After the packing, Get the appliance to the dry place, and the surroundings has no sour and alkaline or other harmful air.
3. The stored period is one year.

## **Specification**

| Model  | Voltage | Frequency | Output Power (W) |
|--------|---------|-----------|------------------|
| CE1567 | 120V    | 60Hz      | 1500             |