 


User Guide

Connect the smartphone

- 1 Press the photo taking key of the Selfie stick for 2s to enter the Bluetooth matching status;
- 2 Turn on the Bluetooth of the smartphone to enter the search status, touch "WS-18001-1" in the equipment searched; after successful connection, the green light of the Selfie stick will normally light up.

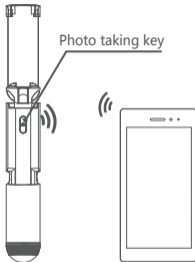 


Use the Selfie stick

① Unfold the Selfie stick




② Fix the smartphone

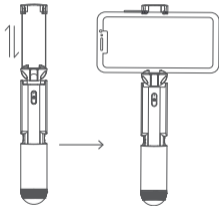

③ Take photos

Before taking photos, please ensure that the volume key of the smartphone has been preset as the shutter (photo taking) key of the camera.

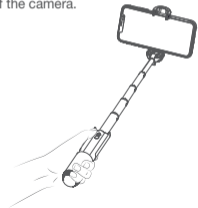 


④ Turn-off

Press the photo taking key for 3s, and the green light will go out, which means that the Selfie stick has been turned off.



Replace the battery

 Hold the tail cover of the Selfie stick, rotate it to the left to take it down, and take out the button battery for replacing the battery.

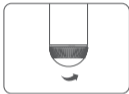

①



②

Tips:

- The Selfie stick will automatically switch to the dormant state if it is not used within 10min; it shall be reconnected if it is reused; it will enter the turn-off state if it is not used within 30min.
- If the battery level is less than 20%, when the Selfie stick is used and its green light slowly flashes, please immediately replace the battery.

The statements should be displayed in the user manual:

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.