 

# Dispho<sup>®</sup>

# One Axis Gimbal



Quick Start Guide

# **Product description**

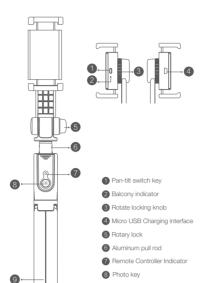

### **Bluetooth connection**

 
- 1 If you use an Android phone, before taking photos, ensure that the volume button of your phone is set to the shutter button in camera settings.
- Open Bluetooth of mobile phone to enter search state and click "Dispho" in equipment searched: after connection is finished,Blue light long on-



# Usage method

1 Mount your phone onto 2 Extend the monopod the selfie stick







3 Usage mode of pan-tilt holder

After clamping the mobile phone and keeping the phone in natural balance, then long press the power button for 3 seconds to turn on the mobile phone.



After starting up, it will enter the stable mode, move the holder. and the mobile phone will always maintain a constant direction.



Clicking the power button of the pan-tilt holder, and it will rotate 90 degrees counterclockwise.

#### 4 Non- pan-tilt mode

When the pan-tilt is shut down or out of power, the rotation will screw tight to the locking direction, the rotation function of the pan-tilt disappears, and it will become an ordinary tripod selfie stick. (When the rotation is reset to the holder end, the pan-tilt mode will be restored.)



6 Press the fill light button (optional) Open the bottom tripod, uplift the pull rod and put tripod on

 


### Charging

Holder charging mode

Connect the Micro USB interface of the pan-tilt holder for charging, and the red light will be on for a long time during the process of charging; the redlamp will be off automatically after charging is finished

Tripod



2 Charging Mode of Remote Controller

Connect the Micro USB interface charging, and the red light will be on for a long time during the process of charging; the redlamp will be off automatically after charging is finished



# Powering off

Micro USB interface

Remote controller: Long press photograph key for 3 s,blue lamp will flicker for 3 times and then be off, which means machine is shut down. Pan-tilt holder: Long press the "on" button for 3 seconds, and the green light will be off, indicating it is power off.

Silicon rubber case for avoiding empty keys

When using the the mobile phone in horizontal screen status, please use this accessory when the product cannot work normally due to touching the keys of the mobile phone.



#### Tips

- 1. When the equipment clamps the platform bracket, try to keep the equipment in the center, if not in the center, it is recommended to use the vertical screen mode
- 2. Selfie stick will enter sleep mode automatically if it is idled for 10 min after Bluetooth connection; press photograph key to recover connection.
- 3. When using the Remote control, when the battery is low, the Remote control will have a flashing red light for reminder. Charge the selfie stick promptly.
- 4. If the battery is running low, the indicator on the selfie stick will flash red. Charge the selfie stick promptly
- 5. For any imbalance of the Product after startup due to sharp change of temperature or humidity, please handle it as follows: Turn off the tripod head holder and dismantle it, and then place it on desktop horizontally as shown in diagram of and turn it on; after this, keep pressing the power key for 5 times, and the holder will give out 3 short beep sounds followed by 1 long beep sound; then it will turn off automatically and then start again; by now, the tripod head is recovered to normal status.

#### Federal Communication Commission (FCC) Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed. This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user 's authority to operate the equipment.

Winners' Sun Plastic & Electronics (Shenzhen)Co., Ltd. Building E, Yingtai Industrial Zone, Longhua New District, Shenzhen China