



**Dispho®**

Single Axis Pan-tilt Tripod

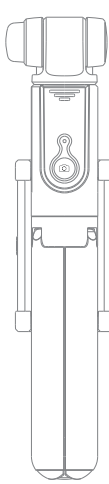

Quick Start Guide


**Product description**

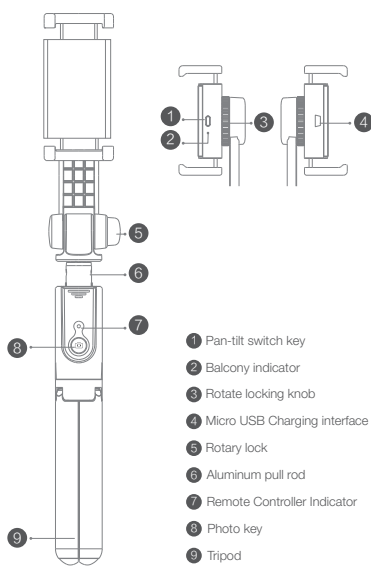

- 1 Pan-tilt switch key
- 2 Balcony indicator
- 3 Rotate locking knob
- 4 Micro USB Charging interface
- 5 Rotary lock
- 6 Aluminum pull rod
- 7 Remote Controller Indicator
- 8 Photo key
- 9 Tripod

1

**Bluetooth connection**

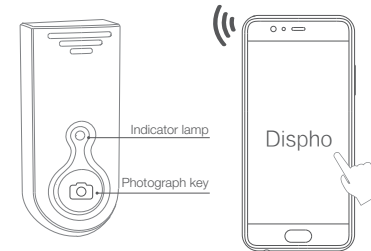


- 1 If you use an Android phone, before taking photos, ensure that the volume button of your phone is set to the shutter button in camera settings.
- 2 Open Bluetooth of mobile phone to enter search state and click "Dispho" in equipment searched; after connection is finished, Green light long on.


2

**Usage method**

- 1 Mount your phone onto the selfie stick

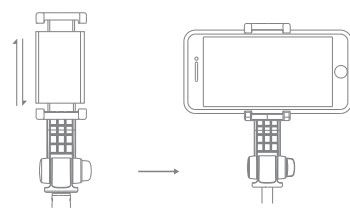


- 2 Extend the monopod




3


**3 Usage mode of pan-tilt holder**

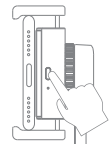

After clamping the mobile phone and keeping the phone in natural balance, then long press the power button for 3 seconds to turn on the mobile phone.

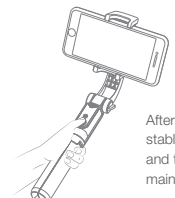

After starting up, it will enter the stable mode, move the holder, and the mobile phone will always maintain a constant direction.

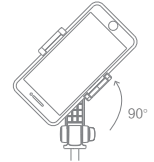


Clicking the power button of the pan-tilt holder, and it will rotate 90 degrees counterclockwise.


4

**4 Non-pan-tilt mode**

When the pan-tilt is shut down or out of power, the rotation will screw tight to the locking direction, and it will become an ordinary tripod selfie stick. (When the rotation is reset to the holder end, the pan-tilt mode will be restored.)

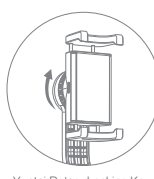


Yuntai Rotary Locking Key

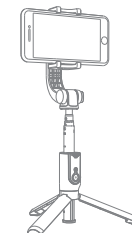

- 5 Press the fill light button (optional)

Open the bottom tripod, uplift the pull rod and put tripod on horizontal plane.

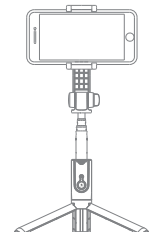


5

**Charging**

- 1 Holder charging mode


Connect the Micro USB interface of the pan-tilt holder for charging, and the red light will be on for a long time during the process of charging; the redlamp will be off automatically after charging is finished.

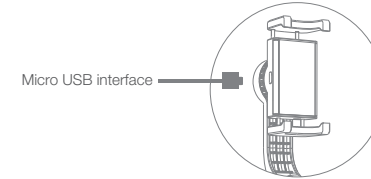

Micro USB interface

- 2 Battery replace of the remote control

Take the remote control out, turn the remote control to the reverse side, and remove its back cover according to the arrow direction, then the battery can be replaced.

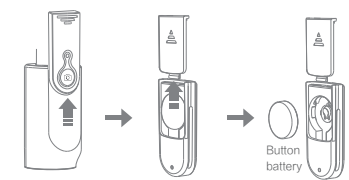

6

**Powering off**

Remote controller: Long press photograph key for 3 s, green lamp will flicker for 3 times and then be off, which means machine is shut down.

Pan-tilt holder: Long press the "on" button for 3 seconds, and the green light will be off, indicating it is power off.

**Tips**

1. When the equipment clamps the platform bracket, try to keep the equipment in the center, if not in the center, it is recommended to use the vertical screen mode.
2. Selfie stick will enter sleep mode automatically if it is idled for 10 min after Bluetooth connection; press photograph key to recover connection.
3. The selfie stick will be shut down automatically if it is idled for 30 min after entering sleep mode.
4. When using the Remote control, when the battery is low, the Remote control will have a flashing red light for reminder. Please replace the battery in time.
5. If the battery is running low, the indicator on the selfie stick will flash red. Charge the selfie stick promptly

Winners' Sun Plastic & Electronics (Shenzhen) Co., Ltd.  
Building E, Yingtai Industrial Zone, Longhua New District,  
Shenzhen, China

**Federal Communication Commission (FCC) Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement, The device can be used in portable exposure condition without restriction Federal Communication Commission (FCC) Radiation Exposure Statement Power is so low that no RF exposure calculation is needed.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.