 


Dispho®



TRIPOD WIRELESS SELFIE STICK
User Manual

Connect Bluetooth

1. Press and hold the Capture Button for 3 seconds to power on. Enable the Bluetooth on the mobile phone to start searching and click "Dispho" on the searched device list. The green light will stay on after the connection is successful.
2. Go to Camera App mode and start to take selfies.

User Notes

Remote Control

Take the remote control from the selfie stick for long-distance photographing. Press the Capture Button to take a photo or record a video (under the REC mode).

Tripod

Unfold the tripod in the bottom, push the extendable stick up and place the tripod on a flat surface.

Power Off

Press and hold the Capture Button for 3 seconds and the green indicator will flash for 3 times before going off.

Preventive Measure

Do not move the phone by force after it's clamped in case of damage to the phone shell.

 
Reminders

1. In case of no operation within 10 minutes after Bluetooth is connected, the selfie stick will automatically enter the Sleep Mode. Press the Capture Button again to restore connection. In the event of no operation after 20 minutes in the Sleep Mode, the selfie stick will automatically power off.
2. In case of low battery during the use of the selfie stick, the indicator will turn red and flash. Please replace the battery in a timely manner

Warnings

1. Watch your hands during use.
2. The product is not designed for children under 14 years old. Do not swallow it.
3. Do not dismantle or modify the product.
4. Do not store the product in a humid environment.
5. Keep the product away from heat sources.
6. Do not expose the product to water or other liquids in case of damage.


Fixed phone

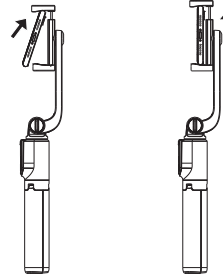


1. Insert the phone into the lower fixator slantwise.

2. Pull the upper fixator up to snap the phone into the holder.

 Usage method

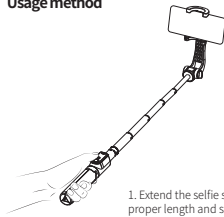

 1. Extend the selfie stick to the proper length and start to take selfies.




Barrier-free Operation within 10 Meters


2. Unfold the tripod, push the extendable stick up and place the tripod on a flat surface. Start to take selfies.

Replace Battery

 Take the remote control from the selfie stick, push the rear cover at the direction of the arrow, and take off the rear cover for battery replacement.

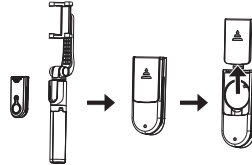

Remove the phone

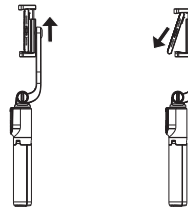 

1. Hold the phone with one hand and pull the upper fixator up.

2. Slide the phone out.

FCC statements:

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment. The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.