

Keen Sword

Instruction manual



Thank you so much for purchasing our selfie stick tripod. The usage of the product and safety precautions are recorded in the instruction manual. Please read the instruction manual before using the product and keep it for future reference.

Product introduction



How to remove/install the wireless Bluetooth remote



How to remove the remote:
Remove from the bottom slot of the remote.



How to install the remote:
Align the top of the remote with the slot and press it in.

How to open the tripod

Step 1: As shown in Figure 1, hold the handle sleeve and press the triangle button at the bottom, then three legs of the tripod will automatically open. Don't hold the position of the leg with hand, which will cause failure to open the three legs.

2



Note: The tripod adopts triangular button locking design.

Note: If you only use it as a selfie stick, you won't need to open the tripod and you can ignore Step 1, just pull out the clip as Step 2 and then pull out the telescopic rod to adjust the length.

Step 2: As shown in Figure 2, hold the handle sleeve with one hand, grip the push handle on the holder with the other hand and pull out the phone holder. And then, as shown in Figure 3, grip the middle of the phone holder with one hand and hold the handle sleeve with the other hand to pull out the rod to a suitable length (Please don't pull the telescopic rod too hard, otherwise the pole will be got stuck.)



3

Note:

- Note that your hand or finger may be pinched when you pull the telescopic rod on the phone holder.
- The telescopic rod consists of eight sections, and the total height of the tripod is 60 inches/153cm. If you find the tripod height is not enough for 60in, please make sure all 8 sections of telescopic rods are pulled out.



Note:

The bottom tripod will automatically open completely after extending the pull rod at Step 2. Don't forcibly open the tripod with your hands to prevent damage to the product.

How to close the tripod

Step 1: As shown in Figure 1, three legs of the tripod will automatically close by holding the handle sleeve with one hand and gradually pushing the telescopic rod into the handle sleeve with the other hand.



Step 2: As shown in Figure 2, place three fingers on the bottom of the three legs and press them towards the middle to lock the legs, then completely close the tripod. (Don't get your hands or fingers caught in the gap.)



4

How to connect the remote

Long press the shutter/power button for 3s to turn on the remote control, then the indicator light flashes green, and then turn on mobile phone Bluetooth to enter the search state, select "LJ-8858" from the list of available devices and the green light will be change from flashing green to steady green after the connection succeeds. Enter the phone camera mode, press the shutter button to take a picture.



Turn off the remote control: Press and hold the Shutter button for 3s to turn it off.



Charge description

- Insert the Micro USB cable into the charging port of the remote control to charge it when the battery capacity of the remote control is insufficient.
- Low battery prompt: Please charge it as soon as possible when the red light starts to flicker
- Dormant State: After the remote control is turned on, it will enter the dormant state and the flicker control will be off, if it is not connected to Bluetooth within 10 minutes. Also, the remote will enter the dormant state, if it is connected to Bluetooth successfully but not be operated within 10 minutes, and then it will automatically turn off if not be operated within 30 minutes.
- Awakening from the dormant state: In the dormant state, the camera indicator light will be on once by short pressing the shutter button, and then enter the pairing flicker state.

5

 
Warm tips

- For Android phones, if you cannot use the remote control to take pictures or videos normally, please enter the "Settings" of the phone camera and set the "Volume" Key Function from "Zoom" to "Shutter".
- If you turn on the remote control within 10m, the previously paired smartphone will automatically reconnect, so when switching phones, please cancel the Bluetooth pairing of the previously connected phone before connecting a new one.
- The charging time of the remote control is about 1h. The indicator light will turn to red in the charging process, and the red light will be off after the charging is over.

How to install the mobile phone and use horizontal and vertical screens

Use of horizontal screen


- Lean the mobile phone sideways against the handle on the upper side of the holder and push the mobile phone up, and then install the mobile phone inward, and finally adjust the horizontal screen of the mobile phone to the middle of the holder.

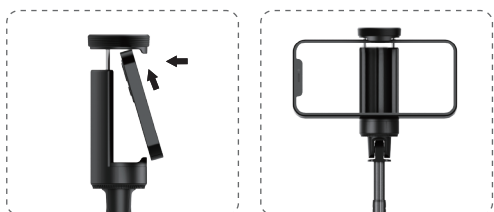

Use of vertical screen

- As shown in the figure above, rotate the phone holder 90° towards the remote control side, and then rotate the phone holder to the front to complete the vertical screen operation.

 6

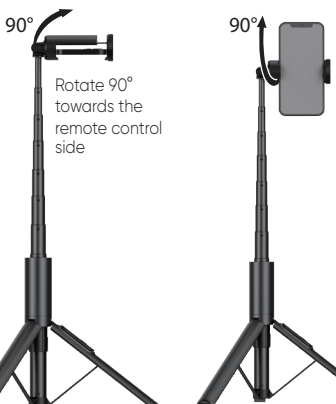


- The holder can be rotated 90° forward, 20° backward vertically, and 360° horizontally.



How to take selfies

 
Ensure that the cell phone clip is towards the same side of the remote control (in case of being not towards the same side, the clip can be rotated), and then bend the cell phone clip inward.

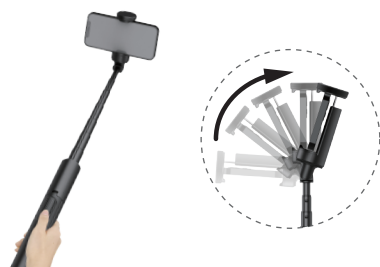

7

How to take out the mobile phone

 Hold the phone sideways, hold the product with one hand and push up the mobile phone to push off the push handle with the other hand to take out the mobile phone.

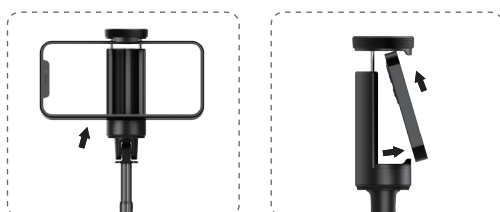

8

This device complies with Part 15 of the FCC Rules and with RSS-247 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The product complies with the Canada portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Le produit est conforme aux limites d'exposition pour les appareils portables RF pour les États-Unis et le Canada établies pour un environnement non contrôlé. Le produit est sûr pour un fonctionnement tel que décrit dans ce manuel. La réduction aux expositions RF peut être augmentée si l'appareil peut être conservé aussi loin que possible du corps de l'utilisateur ou que le dispositif est réglé sur la puissance de sortie la plus faible si une telle fonction est disponible.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction Federal Communication Commission (FCC) Radiation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications or changes to this equipment. Such modifications or changes could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC ID:UR9WS-23002, IC:28998-WS23002