


Exhibit 1: ID label - location info

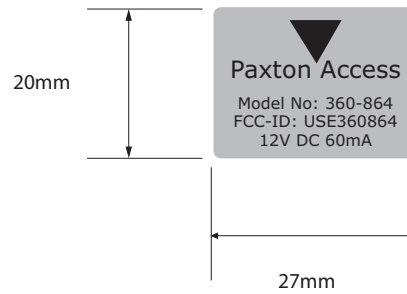


	Part Name					
	Serial number label: Architect Reader					
	Part No.	Unit	Scale			
	ils-ar1	mm	1:1			
Drawn			A	DIMS. & DWG. FRAME ADDED	05.07.07	
			Issue	Description	Date	

Exhibit 1: ID label - location info

Example of FCC ID label location



Located on the back of the reader.