

## Exhibit 1: Label Location Information


### **Example of Net2Air USB Bridge label locations**




The CE and ratings labels are located on the back of the housing.



Typical installation configurations.

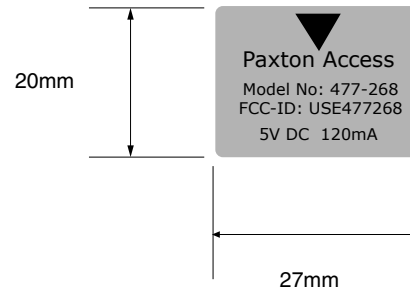

|   |   |      |       |                          |          |  |
|---|---|------|-------|--------------------------|----------|--|
|  | Part Name                                       |      |       |                          |          |  |
|   | Model number & Ratings Label Net2Air USB Bridge |      |       |                          |          |  |
|   | Part No.  | Unit | Scale |                          |          |  |
|   | ils-ubr1  | mm   | 1:1   |                          |          |  |
| Drawn   | Brett Glass                                     |      | A     | DIMS. & DWG. FRAME ADDED | 26.06.08 |  |
|   |   |      | Issue | Description              | Date     |  |