

iO	Commercial	n/a
www.oralb.com	name	
www.oralb.com	websites	n/a
www.braun.com www.service.braun.com		
Braun GmbH	Legal	n/a
Frankfurter Strasse 145	manufacturer	ily d
61476 Kronberg	manaractarci	
Germany/Alemania/Allemagne		
Charger Type 3768	Type numbers	
Handle Type 3758	Type nambers	
Travel Case Type 3759		
Power Cord Type 492-xxxx		
90791650/XI-19	PMP#, current	n/a
EN/E/F	date,	
	languages (2D	
	code)	
Description	,	
1 Brush head		
2 Brush head identification symbol		
3 Smart Pressure Sensor		
4 Interactive Display		
5 Handle		
6 Charger		
7 On/off button		
8 Mode button		
9 Interactive Display features		
10 «Daily Clean» mode		
11 «Sensitive» mode		
12 «Gum Care» mode		
13 «Whitening» mode		
14 «Intense Clean» mode		
15 «Super Sensitive» mode		
16 «Tongue Clean» mode		
17 Settings menu		
18 Settings menu features		
19 Manage Bluetooth® settings		

20 Select/Change color of Smart Pressure Sensor		
21 Select/Change language		
22 Perform factory reset		
23 Feedback features		
24 Timer		
25 Battery status		
26 Exchange reminder		
27 Brush feedback		
Accessories and features:		
a Smart Pressure Sensor features		
b Customize color of Smart Pressure Sensor via Oral-B App		
c Brush head «Ultimate Clean»		
d Brush head «Gentle Care»		
e Brush head holder with cap		
f Brush head holder stand		
g Travel case		
h Charging travel case		
h1 Charging light		
h2 Power cord (power supply)		
i Download Oral-B App and connect to Bluetooth® (see back page)		
Note: Content may vary based on the model purchased.		
IMPORTANT SAFEGUARDS	added Dec	
When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:	11th	
Safety precautions should always be followed, including the following.		
READ ALL INSTRUCTIONS BEFORE USING		
DANGER		
In order to reduce the risk of electrocution:		
1. Do not use while bathing.		
2. Do not place or store the charger, power cord or charging travel		
case where it can fall or be pulled into a tub or sink.  3. Do not place the charger, power cord or charging travel case in		
water or other liquid.		

4. De catalogia francisco de catalogia de ca	
4. Do not reach for a charger, power cord or charging travel case that	
has fallen into water. Unplug immediately.	
WARNING	
To reduce the risk of burns, electrocution, fire or injury:  1. Close supervision is necessary when this product is used by, on, or near children or persons with disabilities.  2. Use this product only for its intended use as described in this manual.  Do not use attachments not recommended by the manufacturer.  Only use the charger provided with your appliance.  3. Keep cord away from heated surfaces.  4. Never drop the appliance or insert any object into any opening of the appliance.  5. Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or if it has been dropped into water. If any of these occur, please contact a service center and return the product for examination and repair.  6. Do not use on self when drowsy or on another who is drowsy or sleeping.  7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.	
IMPORTANT	
<ol> <li>Periodically check the entire product/cords/accessories for damage. A damaged or non-functioning unit should no longer be used. If the product/cords/accessories are damaged, take it to an Oral-B Service Center.</li> <li>Do not touch the power plug with wet hands. This can cause an electric shock.</li> <li>When unplugging, always pull the power plug instead of the cord. Avoid sharp bending, jamming or squeezing of the cord. Never insert any object into any opening of the appliance.</li> <li>Do not modify or repair the product. This may cause fire, electric shock or injury. Consult your dealer for repairs or contact an Oral-B Service Center.</li> <li>This appliance contains batteries that are non-replaceable. The appliance has no user serviceable parts. Do not open and disassemble device except when disposing of the battery. Follow handling and disposal instructions of the battery/device described in this manual.</li> <li>Do not use on children under age 3.</li> <li>This toothbrush is a personal care device and is not intended for use on multiple patients in a dental practice or institution. For hygienic reasons we recommend the use of individual brush handles and brush heads for each family member.</li> <li>Only use the charger and/or special cord set (power supply) with integrated Safety Extra Low Voltage power supply provided with your appliance.</li> <li>Do not exchange or tamper with any part of it, otherwise there is risk of an electric shock. If</li> </ol>	
charger/charging travel case is marked with 492-xxxx, only use Braun/Oral-B	
special cord set (power supply) with this identification. 9. Small parts may come off, keep out of reach of children.	

## CAUTION To avoid brush head breakage which may generate a small parts choking hazard or damage teeth: • Prior to each use, ensure the brush head fits well. Discontinue use of the toothbrush, if brush head no longer fits properly. Never use without a brush head. • If the toothbrush handle is dropped, the brush head should be replaced before the next use even if no damage is visible • Replace brush head every 3 months or sooner if brush head becomes worn. Clean brush head properly after each use (see «Cleaning recommendations» paragraph). Proper cleaning ensures the safe use and functional life of the toothbrush. If you are undergoing treatment for any oral care condition, consult your dental professional prior to use. SAVE THESE INSTRUCTIONS Important Information • This toothbrush, charger and pouch (accessory) contain NdFeB magnets and generate magnetic fields. If you use a medical device or have an implanted medical device, consult with the medical device manufacturer or a physician, if you have questions about safely using your Oral-B iO toothbrush. Your Oral-B toothbrush can be used with your smartphone (find details under «Connecting your toothbrush to your Smartphone»). To avoid electromagnetic interference and/or compatibility conflicts, deactivate Bluetooth® on your toothbrush handle (5) before using it in restricted surroundings, such as aircrafts or specially marked areas in hospitals. • Deactivate *Bluetooth* by entering the «Settings» menu on the interactive display (4) -> Bluetooth -> disable. Follow the same procedure to reactivate Bluetooth again. • Persons with pacemakers should always keep the toothbrush more than six inches (15 centimeters) from the pacemaker while turned on. Anytime you suspect interference is taking place disable Bluetooth. • For satisfying RF exposure compliance requirements, body-worn operations are restricted to belt-clips, holsters or similar accessories that

have no metallic component in the assembly and must provide at least 7.9 inches (20 cm) separation between the device, including its antenna, and the user's body.	
Suggifications	
Specifications  For voltage specifications refer to the bottom of the charging unit.  Noise level: 62 dB (A)	
First use  Please wake up your toothbrush by pressing the on/off button (7) and follow the instructions on the interactive display (4) to get started for first time setup.  If not further instructed on the display, you may toggle with the mode button (8) and select with the an/off button (7)	
button (8) and select with the on/off button (7). You may change the settings via the «Settings» menu (17) at any time.	
Charging and Operating  • To charge the battery place the toothbrush on the plugged-in charger (6).  • The charge level is indicated on the interactive display (4). Once is fully charged (100%) the display turns off. A full charge typically takes 3 hours and enables 12 days of regular brushing (twice a day, 2 minutes).  • If the battery is running low the motor reduces its speed and the Smart Pressure Sensor (3) shortly blinks in red. Once the battery is empty (0%), the motor stops; it will need at least a 5-minute charge for one usage. Note: In case the battery is empty (display off), charge at least for 30 minutes.  • You can always store the handle on the plugged-in charger to maintain it at full power; a battery overcharge is prevented by device.  Note: Store handle at room temperature for optimal battery maintenance.  Caution: Do not expose handle to temperatures higher than 50°C / 122°F.	
<u>Using your toothbrush</u>	

Start Brushing Place the brush head on the handle. A small gap should remain between handle and brush head. Lift the handle off the plugged-in charger or simply pick it up to wake up the handle (display turns on). Wet brush head and apply toothpaste. To avoid splashing, guide the brush head to your teeth before switching the handle on by pressing the on/off button. Note: Display turns off after 20 seconds. You may press the on/off button to activate display again.			
Guide the brush head from tooth to tooth. Brush the outsides, the insides and the chewing surfaces. Brush all four quadrants of your mouth equally. You may also consult your dentist or dental hygienist about the right technique for you.  After Brushing, the display gives you feedback based on your brushing time (except for «Tongue Clean» mode).			
In the first days of using any electric toothbrush, your gums may bleed slightly. In general, bleeding should stop after a few days. Should it persist after 2 weeks, please consult your dentist or dental hygienist. If you have sensitive teeth and/or gums, Oral-B recommends using the «Sensitive» or «Super Sensitive» modes (optional in combination with an Oral-B «Gentle Care» brush head (d)).			
Timer The timer signals with a short stuttering sound at 30-seconds intervals to move to the next quadrant of your mouth. A long stuttering sound indicates the end of the professionally recommended 2-minute brushing time.			
The timer memorizes the elapsed brushing time, even when the handle is briefly switched off during brushing. The timer resets if pausing longer than 30 seconds or placing the handle on the plugged-in charger. Within this 30-second period you may press the mode button to enter the settings menu. Note: During the use of the Oral-B App, the timer may be deactivated for some features.  Note: You may also customize the timer settings via Oral-B App.			

Smart Pressure Sensor features (a)	
Your toothbrush is equipped with a Smart Pressure Sensor (3) that has	
various functionalities indicated via different colors of light:	
White (default) = Operating indicator (choose individual color via Oral-B	
App (b)) / Low pressure indicator	
Red = high pressure indicator / low battery indicator	
Green = recommended pressure indicator	
Blue = <i>Bluetooth</i> pairing indicator	
Orange = Error indicator (follow display messages)	
Brush with the right pressure indicated with a green light. If too much	
pressure is applied, it lights up in red reminding you to reduce pressure. If	
the Smart Pressure Sensor illuminates in white (or your pre-selected color),	
we recommend applying more pressure.	
During high pressure the brush head movement will be reduced (in «Daily	
Clean», «Intense Clean» and «Sensitive» modes).	
Periodically check the operation of the Smart Pressure Sensor by pressing	
moderately on the brush head during use.	
Note: During the use of the Oral-B App, the Smart Pressure Sensor	
feedback may be inactive for some features.	
Note: Smart Pressure Sensor is deactived during «Tongue Clean» mode.	
Brushing modes (depending on model)	
Your toothbrush offers different brushing modes indicated on the display:	
«Daily Clean»— Standard mode for daily cleaning	
«Sensitive» – Gentle, yet thorough cleaning for sensitive areas	
«Gum Care» – Gentle massage of gums	
«Whitening» – Polishing for occasional or everyday use	
«Intense Clean» – For an extraordinary clean feeling (operated with a	
higher speed)	
«Super Sensitive» – Super gentle cleaning for extra sensitive areas	
«Tongue Clean» – Tongue cleaning for occasional or everyday use	
When operating the «Tongue Clean» mode, we recommend using a	
«Gentle Care» brush head (d). You can brush your tongue either with or	
without toothpaste. Brush the whole area of your tongue systematically in	
gentle movements. The recommended brushing time is 30 seconds;	
indicated with a flashing light of the Smart Pressure Sensor.	
indicated with a hashing light of the smart ressure sensor.	


Mode setting: You may first choose your default mode by pressing the mode button (8) successively once the handle is awake (display turned on). Select a mode by pressing the on/off button (7). Your toothbrush starts in the selected default mode. You may also change modes during brushing.  Note: You may also customize mode settings via Oral-B App.	Typo corrected – Dec 20 <sup>th</sup> , 2019	
Interactive Display  Turn on the interactive display (4) by pressing the on/off button (7). If not further instructed on the display, you may toggle with the mode button and select with the on/off button.		
(10-16) «Mode selection» - toggle by pressing the mode button and select default start mode with on/off button. (17) «Settings» - toggle through all modes until you reach the option «Settings»; to enter press the on/off button: -> (19) manage Bluetooth settings (de/activate, disable) -> (20) select/change color of Smart Pressure Sensor -> (21) select/change language -> (22) perform factory reset (24) «Timer» - displays brushing time. Can be customized via Oral-B App. (25) «Battery status» - shows battery status after use, when charging or when battery is low. (26) «Exchange reminder» - reminds you when to replace your brush head. (27) «Brush feedback »— brushing feedback is indicated with a smiley face (except with «Tongue Clean» mode).  «Brush waking» when handle is picked up, lifted off the plugged-in charger or when you press the on/off button the handle indicates its readiness. «Error messages» - "outside operating limits": you are operating or charging outside standard temperatures and/or above standard battery		
current.  Brush heads Oral-B offers you a variety of different Oral-B iO brush heads (c/d) that only fit your Oral-B iO toothbrush handle and can be used for tooth-bytooth precision cleaning.		

	1	
Some iO Oral-B brush heads feature INDICATOR® bristles to help you monitor brush head replacement need. With thorough brushing, twice a day for two minutes, the color will fade halfway approximately within 3 months, indicating the need to exchange your brush head. If the bristles splay before the color recedes, you may exert too much pressure on teeth and gums.		
In general, we recommend replacing the brush head every 3 months.		
Connecting your toothbrush to your Smartphone  The Oral-B App is available for smartphones running iOS or Android™ operating systems. It can be downloaded for free from App Store™ / Google Play™ or you may scan the QR code on the back page of this manual (i).  • Launch the Oral-B App. It will guide you through the entire Bluetooth pairing procedure. You may also find it under the App's settings (More -> Your brush).  Note: Oral-B App functionality is limited if Bluetooth is deactivated on your smartphone (for directions please refer to your smartphone's user manual).  • Pairing is indicated via a blue pulsing Smart Pressure Sensor light. Any App instructions will be displayed on your smartphone.  • You may change Bluetooth settings at any time on your handle via the display -> Settings -> Bluetooth activated/deactivated.  • Keep your smartphone in close proximity (within 5m distance) when using it with the handle. Make sure the smartphone is safely positioned in a dry place.  Note: Your smartphone must support Bluetooth 4.2 (or higher)/Bluetooth	Typo corrected – Dec 20 <sup>th</sup> , 2019	
Smart in order to pair your handle. Check www.oralbappavailability.co.uk for compatible smartphones and country availability of the Oral-B App. Caution: Follow your smartphone's user manual to ensure your phone/charger is designed for use in a bathroom environment.		
Cleaning recommendations  After brushing, rinse your brush head under running water with the handle switched on. Remove the brush head and clean the handle and brush head separately. Make sure water runs inside the top of the handle as well as		

inside the brush head. Wipe all parts dry and let them air-dry before reassembling your toothbrush again.

Unplug the charger before cleaning. Clean the charger regularly with a damp cloth.

Please check individual cleaning instructions for each accessory in its "Accessories" paragraph.

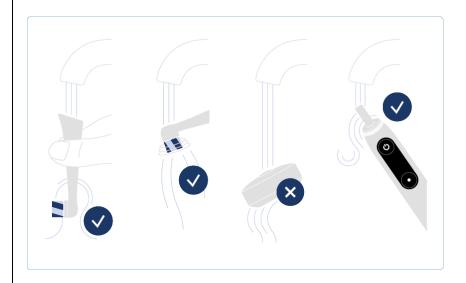

## Accessories (depending on model)

## **Charging Travel Case (h)**

- To charge your handle (5) place it in the charging travel case (h) and connect it to an electric outlet, using the extra power supply (h2) provided. The power supply may be used for all global mains voltage ranges (100 240V).
- The flashing light (h1) of the charging travel case indicates that the handle is charging. Once the handle is fully charged the light turns off. A full charge typically takes 6 hours.
- The outer and inner case should be cleaned with a damp cloth only. Make sure that the handle and brush head are completely dry before storing in the travel case.

Note: Clean stains on travel case surface immediately. Store travel case in a clean and dry place.	
Travel Case (g) Store the clean and dry toothbrush/brush heads in the travel case (g). The outer and inner case should be cleaned with a damp cloth only. Note: Clean stains on travel case surface immediately. Store travel case in a clean and dry place.	
Brush head holder stand (f) / Brush head holder with cap (e) You may store your cleaned brush heads on the pins of the brush head holders. Make sure brush heads are dried before placing them in the holder and/or closing the cap. Brush head holders and cap are dishwasher- safe.	
Zipper Pouch / Magnetic Pouch Store the clean and dry toothbrush/brush heads in the zipper pouch. The outer and inner case can be cleaned under running water. Store the clean and dry toothbrush along with the brush head holder (e) in the magnetic pouch. Make sure brush heads are dried before placing them into the holder and/or closing the cap. The outer and inner surfaces can be cleaned under running water. Store pouches in a clean and dry place. Note: Clean stains on pouch surfaces immediately.	
Subject to change without notice.	
Environmental Notice Product contains batteries and/or recyclable electric waste. For	
environment protection do not dispose in household waste, but for recycling take to electric waste collection points provided in your country.	
7 2 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	
Battery removal at the end of the product's useful life	
Do not disassemble the product except when disposing of the battery. Run	
down battery before removing. When taking out the battery for disposal,	

to local environmental regulations.  Caution! Opening the handle will destroy the appliance and invalidate the warranty.  Information Bluetooth® radio module
---

Although all indicated functions on the Bluetooth device are supported,		
Oral-B does not ensure 100% reliability in connection, and feature		
operation consistency.		
Operation performance and connection reliability are direct consequences		
of each individual Bluetooth device, software version, as well as the		
operating system of those Bluetooth devices and company security		
regulations implemented on the device.		
Oral-B adheres to and strictly implements the <i>Bluetooth</i> standard by which		
Bluetooth devices can communicate and function in Oral-B toothbrushes.		
However, if device manufacturers fail to implement this standard,		
Bluetooth compatibility and features will be further compromised and the		
user may experience functional and feature-related issues. Please note		
that the software on the <i>Bluetooth</i> device can significantly affect		
compatibility and operation.		
1) Warranty – Exclusions and Limitations		
This limited warranty applies only to the new products manufactured by or		
for The Procter & Gamble Company, its Affiliates or Subsidiaries ("P&G")		
that can be identified by the Braun / Oral-B trademark, trade name, or logo		
affixed thereto. This limited warranty does not apply to any non-P&G		
product including hardware and software. P&G is not liable for any		
damage to or loss of any programs, data, or other information stored on		
any media contained within the product, or any non-P&G product or part		
not covered by this limited warranty. Recovery or reinstallation of		
programs, data or other information is not covered under this limited		
warranty.		
This limited warranty does not apply to (i) damage caused by accident,		
abuse, misuse, neglect, misapplication, or non-P&G product; (ii) damage		
caused by service performed by anyone other than Braun or authorized		
Braun service location; (iii) a product or part that has been modified		
without the written permission of P&G, and (iv) damage arising out of the		
use of or inability to use the Oral-B Smartphone stand/puck, Smartphone		
mirror holder, or charging travel case ("Accessories").		
2) Using a smooth hone holder		
2) Using a smartphone holder		
Potential Oral-B Accessories included in the package has been designed to		
provide you with a convenient way to position your smartphone while you		
are using the Oral-B app. Try multiple orientations of your smartphone in		

the Oral-B smartphone holder prior to use to determine the best	
positioning of your smartphone in the holder. Be sure to try this in a	
manner which will not harm your smartphone if it falls out of the stand. Do	
not use in automobiles.	
LIMITATION OF LIABILITY	
TO THE EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL P&G	
ITS DISTRIBUTORS OR SUPPLIERS BE LIABLE TO YOU OR ANY THIRD PARTY	
FOR ANY DIRECT, INDIRECT, INCIDENTAL, CONSEQUENTIAL, SPECIAL,	
EXEMPLARY OR PUNITIVE DAMAGES, OF ANY NATURE WHATSOEVER,	
ARISING OUT OF THE USE OF OR INABILITY TO USE THE ORAL-B	
ACCESSORIES, INCLUDING, WITHOUT LIMITATION, INJURY TO PERSONS,	
PROPERTY DAMAGE, LOSS OF VALUE OF ANY THIRD PARTY PRODUCTS	
THAT ARE USED IN OR WITH THE ORAL-B ACCESSORIES, OR LOSS OF USE	
OF THE ORAL-B ACCESSORIES OR ANY THIRD PARTY PRODUCTS THAT ARE	
USED IN OR WITH THE ORAL-B ACCESSORIES, EVEN IF P&G HAS BEEN	
ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. WITHOUT LIMITING THE	
FOREGOING, YOU UNDERSTAND AND AGREE THAT P&G HAS NO LIABILITY	
FOR ANY DAMAGE OR DESTRUCTION TO CONSUMER ELECTRONICS	
DEVICES OR OTHER PERSONAL PROPERTY THAT ARE CONTAINED ON OR	
EXTERIOR TO THE ORAL-B ACCESSORIES, OR ANY LOSS OF DATA	
CONTAINED IN THE FOREGOING DEVICES. IN NO EVENT SHALL ANY	
RECOVERY AGAINST ORAL-B EXCEED THE ACTUAL PRICE PAID FOR THE	
PURCHASE OF THE PRODUCT.	
Warranty replacement brush heads	
Oral-B warranty will be voided if electric rechargeable handle damage is	
found to be attributed to the use of non-Oral-B replacement brush heads.	
Oral-B does not recommend the use of non-Oral-B replacement brush	
heads.	
Oral-B has no control over the quality of non-Oral-B replacement brush	
heads. Therefore, we cannot ensure the cleaning performance of non-Oral-	
B replacement brush heads, as communicated with the electric	
rechargeable handle at time of initial purchase.	
Oral-B cannot ensure a good fit of non-Oral-B replacement brush heads.	
Oral-B cannot predict the long-term effect of non-Oral-B replacement	
brush heads on handle wear.	

All Oral-B replaceme	nt brush heads carry th	ne Oral-B logo and meet
nigh quality standard	ds. Oral-B does not sell	replacement brush head
nandle parts under a	ny other brand name.	
rouble Shooting		
Problem	Possible reason	Remedy
APP		
Handle does not	1. Oral-B App is	1. Launch Oral-B
operate	closed.	App.
(properly) with	2. Bluetooth is not	2. Activate
Oral-B App.	activated on	Bluetooth on
	smartphone.	smartphone
	3. Bluetooth is	(described in its
	deactivated on	user manual).
	handle.	3. Activate
	4. Bluetooth is	Bluetooth via
	disabled on handle.	display Settings ->
	5. Bluetooth	Bluetooth
	connection to	activated.
	smartphone has	4. Activate
	been lost.	Bluetooth via
	6. Your smartphone	display Settings ->
	does not support	unlock <i>Bluetooth</i>
	Bluetooth 4.2 (or	first and then
	higher)/Bluetooth	activate.
	Smart.	5. Pair handle and
	7. Outdated Oral-B	smartphone again
	Арр.	via App settings.
		Keep your
		smartphone in
		close proximity
		when using it with
		handle.
		6. Your
		smartphone must
		support Bluetooth

	_	
		4.2 (or higher)/
		Bluetooth Smart in
		order to pair
		handle. Check
		www.oralbappavail
		ability.co.uk for
		compatible
		smartphones and
		country availability
		of the Oral-B App.
		7. Download latest
		Oral-B App.
Reset to factory	Original functionality	Enter via display
settings.	wanted.	Settings -> Factory
		Reset (22). Press
		on/off button to
		confirm.
TOOTHBRUSH		
Handle is not	1. Battery has a	1. Charge at
operating (during	very low	least for 30
first use).		min.
iirst use).	charge level;	
	handle does	2. Always
	not operate.	operate in
	2. Operating	standard
	outside	operating
	standard	temperatur
	temperature	es (> 0°C
	(message on	and <
	display	40°C).
	and/or	
	alternating	
	lights of	
	Smart	
	Pressure	
	Sensor)	

Short stuttering sounds after 2 minutes or handle does not operate any timer.	Timer has been modified/deactivate d via App.	Use App to change timer settings or perform factory reset (see App Trouble Shootings).
Handle does not charge.	1. Battery is at a very low charger level (0%); it may take up to 10-15min until display turns on. 2. Ambient temperature for charging is out of	1. Charge at least for 30min. 2. Recommended ambient temperature for charging is 5°C to 35°C. 3. Ensure charger is
	valid range (< 0°C and > 40°C).  3. Charger may not be (properly) connected.	connected to mains voltage.
Rattling/loud noise during brushing or turning on.	<ol> <li>Brush head may not be placed correctly onto the brush handle.</li> <li>Brush head may be worn.</li> </ol>	1. Check proper fit of brush head on handle. Small gap remains in between. 2. Replace brush

Satisfaction Guaranteed or Your Money Back:	
Try it with no risk for 60 days!	
If you are not 100% satisfied, call 1-877-593-4199 to	
receive a full refund. Return the product in its original	
packaging along with the original cash receipt	
postmarked within 60 days of purchase to receive a	
pre-paid card in the amount of purchase. Terms of	
prepaid card apply.	
Your Oral-B toothbrush must be returned in its original	
packaging and be postmarked no later than 60 days	
after the date of purchase. Please allow 6-8 weeks for	
handling. In the U.S., the shipment return costs of the	
product is the responsibility of the consumer. Sorry: No	
refunds will be made for any Oral-B product damaged	
by accident, neglect, unreasonable use or lost in the	
post.	
Terms and conditions apply. For further details please	
contact our customer service.	
FOR USA ONLY	
Limited 2-Year Warranty	
Oral-B warrants this appliance to be free of defects in material and workmanship for a period of two years from the date of original purchase at retail. If the appliance exhibits such a defect, Oral-B will, at its option,	
repair or replace it without cost for parts and labor. The product must be carried in or shipped, prepaid and insured (recommended), to an authorized Oral-B Service Center. Proof of date of original purchase is	
required.	
The cost to ship the product to an authorized Service Center is the responsibility of the consumer, the	
cost to return the product to the consumer is the responsibility of Oral-B. This warranty does not cover finishes or normal wear, nor does it cover damage resulting from accident, misuse, dirt, water,	
tampering, unreasonable use, service performed or attempted by unauthorized service agencies,	
failure to provide reasonable and necessary maintenance, including recharging, or units that have been modified or used for commercial purposes.	
This appliance is equipped with a <i>Bluetooth</i> Smart approved radio module. Failure to establish a <i>Bluetooth</i> Smart connection to specific smart phones is not covered under the device guarantee,	
unless the <i>Bluetooth</i> radio module of this appliance is damaged. The <i>Bluetooth</i> devices are warranted by their own manufacturers and not by Oral-B. Oral-B does not influence or make any	
recommendations to device manufacturers, and therefore Oral-B does not assume any responsibility	
for the number of compatible devices with our <i>Bluetooth</i> systems.  Oral-B reserves the right, without any prior notice, to make any technical modifications or changes to	
system implementation of device features, interface, and menu structure changes that are deemed	
necessary to ensure that Oral-B systems function reliably.	

ALL IMPLIED WARRANTIE FITNESS FOR ANY PARTIC FROM DATE OF ORIGINAL CONSEQUENTIAL DAMAG Some states do not allow th above limitation may not app have other legal rights which			
How to obtain service in the USA Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.			
To obtain service:  A. Carry the product in to the authorized Oral-B Service Center of your choice or,  B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well.  Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.			
To obtain original Oral-B replacement parts and accessories: Contact an authorized Oral-B Service Center. Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.			
	To order original Oral-B replacement parts and accessories (including replacement brush heads) by phone: Please call 1-800-566-7252.		
To speak to an Oral-B Cons	sumer Service Representative: Please call 1-800-566-7252.		
	olier's Declaration of Conformity R § 2.1077 Compliance Information		
Unique Identifier	Oral-B iO (Handle Type 3758)		
Responsible Party	The Procter & Gamble Co.		
	1 P&G Plaza Cincinnati, OH 45202		
Internet contact	www.oralb.com		
information			
FCC Compliance Statement	This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.		

Section 15.21 Information to user:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  Section 15.105 (b)  Note: This equipment has been tested and found to comply with the Limits for a Class B digital device, pursuant to Part 15 of the	
FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:	
Reorient or relocate the receiving antenna.  Increase the separation between the equipment and	
receiver.  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.	
Consult the dealer or an experienced radio/TV technician for help.	
FOR CANADA ONLY Limited 2-Year Warranty	
In the event this appliance fails to function within the specified warranty period because of defect material or workmanship, and the consumer returns the unit to an authorized service Center, Bra Canada will, at its option either repair or replace the unit without additional charge to the consum This warranty does not cover any product which has been damaged by dropping, tampering, servicing performed or attempted by unauthorized service agencies, misuse or abuse. This warra excludes units which have been modified or used for commercial purposes.	er.
This appliance is equipped with a <i>Bluetooth</i> Smart approved radio module. Failure to establish a <i>Bluetooth</i> Smart connection to specific smart phones is not covered under the device guarantee, unless the <i>Bluetooth</i> radio module of this appliance is damaged. The <i>Bluetooth</i> devices are warranted by their own manufacturers and not by Oral-B. Oral-B does not influence or make any recommendations to device manufacturers, and therefore Oral-B does not assume any responsit for the number of compatible devices with our <i>Bluetooth</i> systems.  Oral-B reserves the right, without any prior notice, to make any technical modifications or change system implementation of device features, interface, and menu structure changes that are deemed necessary to ensure that Oral-B systems function reliably.	polity es to
To the extent allowed by law, Braun Canada shall not be responsible for loss of the product, loss time, inconvenience, commercial loss, special or consequential damages. The provisions of this	of

warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in applicable provincial legislation.		
How to obtain service in Canada Should this product require service, please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.		
To obtain service:  A. Carry the product in to the authorized Oral-B Service Center of your choice or,  B. Ship the product to the authorized Oral-B Service Center of your choice. Pack the product well.  Ship the product prepaid and insured (recommended). Include a copy of your proof of purchase to verify warranty coverage, if applicable.		
To obtain original Oral-B replacement parts & accessories: Contact an authorized Oral-B Service Center.		
Please call 1-800-566-7252 to be referred to the authorized Oral-B Service Center closest to you.		
To speak to an Oral-B Service Representative: Please call 1-800-566-7252.		
IC Compliance Notice This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.		