

SLIM 11B Phone

User's Manual

About this manual

Welcome to the SLIM 11B Phone. This Phone comes with two parts.

'Before you start'

'Operation Instruction'

Before using your SLIM 11B Phone, read 'Before you start' for overview of features, basic setup, and other important details.

 
After you have become familiarized with its basic functionality, refer to the operation Instruction for detailed features, less common tasks, and for maintaining your SLIM 11B Phone.

These manuals can also serve as a source of information if you have problems operating your SLIM 11B Phone.

I. BEFORE YOU START	4
A. Features	5
1. Unpacking	5
2. Phone Layout	5
3. Display Layout	9
4. Battery	12
5. SIM Card	14
6. T-Flash	15
7. Headset	16
8. USB cable	16
B. Basic Operation	17
1. Power On/Off	17
2. Call Function	17
3. Multimedia Function	20
4. Text Input Mode	21
5. Phonebook	26
II. OPERATION INSTRUCTION	28
A. Menu Operation	28
1. Call History	28
2. Phonebook	30
3. Multimedia	33
4. Services	42
5. Messages	44
6. File Manager	52
7. Organizer	54
8. Settings	58
9. Fun & Games	71
B. Trouble Shooting	77
C. Safety Information	79
D. Glossary	81

I. Before you start



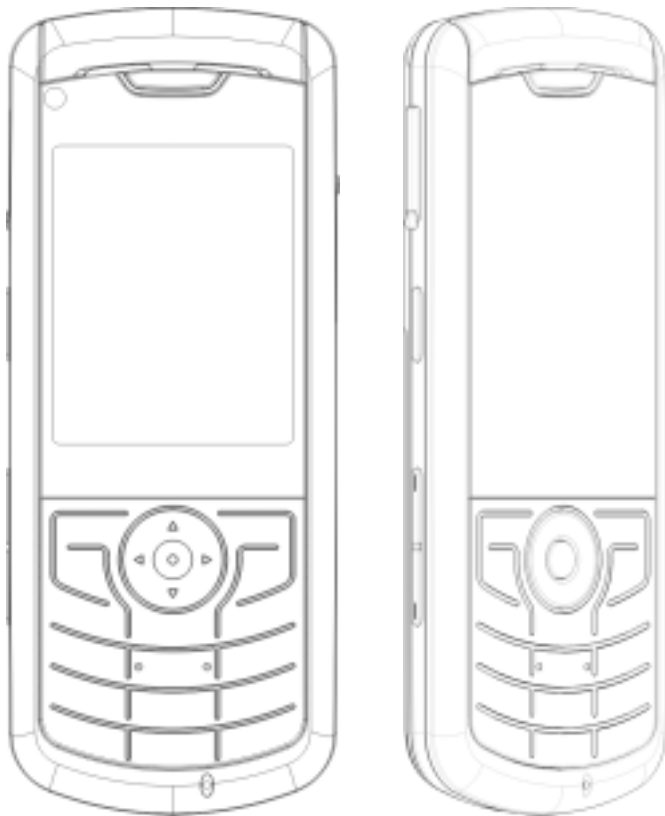

SLIM 11B Phone



A. Features

1. Unpacking

Your package list is as shown below

Handset	Manual	Travel Adaptor	Earphone	USB Cable (Optional)
				

2. Phone Layout

The following illustration shows the main elements of your phone.

2.1 LCD

The LCD is TFT LCD and has 260K colors.

You can be enjoy the more clear LCD color with your SLIM 11B phone

2.2 Camera






You can take a photo with SLIM 11B's embedded digital camera. SLIM 11B has 1.3 Mega pixels camera module, you can enjoy highly qualify digital photo with your SLIM 11B phone.



2.3 Slim Bar Type


SLIM 11B is slim bar type. SLIM 11B has a thickness of just 11.3t.



2.3 Keys Description

Function Keys	
	<p>[Basic Function] Performs the functions indicated by the text in the left-bottom line of the display screen. Usually works as 'selection' key</p> <p>[Idle Mode] Enter main menu</p> <p>[MPEG4 Mode] Play & Pause MPEG4 file</p>
	<p>[Basic Function] Performs the functions indicated by the text in the right-bottom line of the display screen. Usually works as 'backward' key</p> <p>[Idle Mode] Enter Phonebook list menu</p> <p>[MPEG4 Mode] Stop playing MPEG4 file</p>
	<p>Makes or answers a call. In the idle mode, launches the Dialed calls list</p>
	<p>Ends a call. Also switches the phone on or off when pressed and held. In the menu, returns to the idle mode or cancels your input.</p>
	<p>[Basic Function] Enter camera mode</p> <p>[Camera Mode] Take a picture</p>

Navigation Keys	
	<p>[Idle Mode] Enter WAP browser mode (press and hold)</p> <p>[Text Input Mode] Switch the input methods</p> <p>[Audio Player / Video Player Setting Mode] Short Press to Enter MP3 Player and Video Player setting.</p>
	<p>[Basic Function] move the cursor or selection bar up (Text edit mode or menu mode)</p> <p>[Idle Mode] Launch SMS Inbox menu</p>

	<p>[Camera Mode] Magnify the image (Digital Zoom Function)</p> <p>[MP3 Mode] Play & Pause MP3 file</p>
	<p>[Basic Function] move the cursor or selection down (Text edit mode or menu mode)</p> <p>[Idle Mode] Launch Search Entry menu</p> <p>[Camera Mode] Reduce the image (Digital Zoom Function)</p> <p>[MP3 Mode] Stop playing MP3 file</p>
	<p>[Basic Function] move the cursor or selection left (Text edit mode or menu mode)</p> <p>[Idle Mode] Launch Received call list menu</p> <p>[Camera Mode] Adjust EV Level</p> <p>[MP3 Mode] Go to previous MP3 file</p> <p>[MPEG4 Mode] Speed Rearward</p>
	<p>[Basic Function] move the cursor or selection right (Text edit mode or menu mode)</p> <p>[Idle Mode] Launch Missed calls list menu</p> <p>[Camera Mode] Adjust EV Level</p> <p>[MP3 Mode] Go to next MP3 file</p> <p>[MPEG4 Mode] Speed Forward</p>


Alphanumeric Keys





[Press]

Enter number and string

[Press and Hold]

 : Enter '+' (international call)

 : On and Off silent mode

 : Enter Voice Mail Box

[Video Play Mode]

Wild screen view

Side Keys



[Basic Function]

move the cursor or selection bar up (Text edit mode or menu mode)

[Idle Mode]

Increase the key-tone volume

[MP3 Mode & MPEG4 Mode]

Increase the volume



[Basic Function]

move the cursor or selection down (Text edit mode or menu mode)

[Idle Mode]

 
Decrease the key-tone volume

[MP3 Mode & MPEG4 Mode]

Decrease the volume

3. Display Layout

3.1 Display Screen

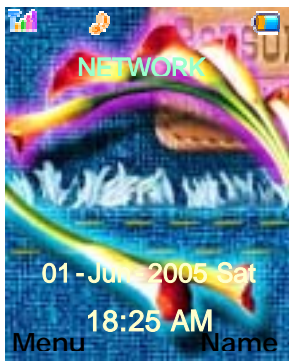

← Fixed Icon Area

← Network Status Area

← User Setting Screen Area

← Time & Date Area

← Soft Key Area

3.1.1 Fixed Icon Area:

8 fixed icons are displayed indicating the phone status.

3.1.2 Network Status Area:

Network name registered is displayed.

If there is no GSM network coverage, No Service is displayed.

If you are in the coverage area of a GSM network but you are not allowed to register to the network, Emergency is displayed.

3.1.3 User Setting Screen Area:

Digital Clock , Analog Clock , Images or User Text is displayed according to the setting of screen setting menu.

If you set to get the broadcast message from the network, you can see it on the idle screen. For details of how to activate and deactivate it, please see Cell Broadcast menu in A3. In this case, the User setting screen Area updates the received broadcast messages. If you want to go back to default screen, press [END].

! Note: The broadcast message service may not be available on all networks.

3.1.4 Time & Date Area

Current time and date is displayed in the Time & Date Area.


3.1.5 Soft Key Area:

The functions assigned to the right and left soft keys.

3.1.6 Icons Descriptions

Icon	Description
	Shows the received signal strength. The greater the number of bars, the better the signal strength.
	Shows the current battery charge level. The green area shows charge level of battery.
	Appears when the alarm clock is set.
	Appears GPRS Mode is on
	Indicate the phone number line you select
	Show Phone Lock mode
	Roaming
	Appears when you miss call
	Appear when e-mail has been received
	Appear when FAX has been received
	Appears when Voice mail has been received
	Appears when SMS has been received
	Appears when MMS has been received
	Appears when MMS client is busy
	Appears when phone is mute mode
	Appears when alert mode is selected as ring
	Appears when alert mode is selected as Silent
	Appears when alert mode is selected as Vibrator
	Appears when alert mode is selected as Vibration and Ring
	Appears when alert mode is selected as Vibration then Ring
	Appears when WAP push is arrived
	Appears when stopwatch application is undergoing

 3.2 Photo Mode Screen

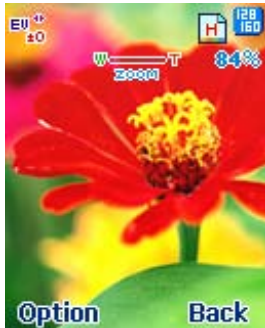

← Menu & Control Area

← Preview Area

← Soft Key Area

3.2.1 Preview Area :

You can see a preview shot before you take a photo.

3.2.2 Control Area:

You can see the status of photo mode setting with this control area. Each icon of control area has specific functions. The following table describes what the icons mean.

Functions	Icons
Zoom	
Exposure Value	
LED Highlight	
Delay timer	
Continuous shot	
Night mode	
Image quality	
Image size	

3.3 MP3 Mode Screen











← MP3 File Info Area

← MP3 Control Area

← Soft Key Area


3.4.1 Icon Description

Icons	Description
	Play MP3 file
	Pause MP3 file
	Stop playing MP3 file
	Go to Previous MP3 file
	Go to Next MP3 file
	Show volume strength level
	Show phone icon when MP3 file from phone
	Show memory card icon when MP3 file from T-Flash

4. Battery (Standard type: 550 mAh)


4.1 How to attach the battery

 - a. Align the bottom of the battery with the slot in the bottom of the phone.
- b. Then sit the battery on the back of the phone until it clicks into place.

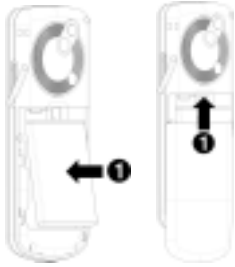

4.2 How to remove the battery

 - a. Turn off your phone first.
- b. Push up the battery release latch
- c. Slowly lift the battery away from the up.

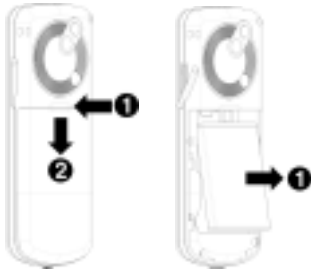

4.3 How to charge the battery

- a. Plug your charger in the wall socket.
- b. Connect the other end to the interface connector on the bottom of the phone.



! Note

The phone will automatically check the battery status while the charger connector is installed on the phone. Once it detects that the battery level

- Full status, it automatically recharges the battery.
- Normally the phone completes battery charging in one hour.
- For a new or completely discharged battery, it takes at least 4 hours of charging to achieve optimum performance.
- You can make calls while charging your phone.

- Do not charge the phone without the battery in place.

5. SIM Card

SIM Card provides additional services and functions besides making a call.

These functions will only display and work on the menu of the phone if your SIM card supports them.

Some menu may not be shown depending on the SIM card supplied.

The content and the terms of the function lists will depend on your network service provider.

Please contact your network service provider (a network operator or the service provider) regarding availability of services related to the SIM card, application information and the costs.

5.1 How to place the SIM card

Ensure the phone is powered off and the travel charger is detached first before you start the following steps.

 
- a. Push the SIM card holder in the direction of the arrow and hold it in this position.
- b. Insert a new SIM Card under the two tabs on the right of the phone, ensuring that the beveled corner is right and the gold contact of the card face downward.
- c. Hold the SIM card down and release the holder to lock it into place.



5.2 How to remove the SIM card

Ensure the phone is switched off and the travel charger is detached first before you start the following steps.

- a. Remove the battery.
- b. Release the SIM card holder by moving the SIM card holder to the top direction.
- c. Remove the SIM card from the holder.



! Note: The SIM card is a computer chip containing information about your subscription, security, phonebook etc. When you register as a subscriber with GSM network operator, you are provided with the SIM card. Always handle the SIM card with care and insert with the gold contacts facing down.

 
6. T-Flash

T-Flash provides more big flash memories for MP3 and MPEG4 depend on memory card size.

6.1 How to place the T-Flash

Ensure the phone is powered off and the travel charger is detached first before you start the following steps.

- a. Push the T-Flash holder in the direction of the arrow and hold it in this position.
- b. Insert a T-Flash under the two tabs on the right side of the phone, ensuring that the gold contact of the card face downward.
- c. Hold and push the T-Flash left direction and release the rubber into place.

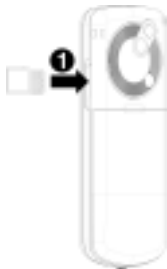


6.2 How to remove the T-Flash

Ensure the phone is switched off and the travel charger is detached first before you start the following steps.

- a. Remove the battery.
- b. Remove the T-Flash rubber and moving the T-Flash to right direction.
- c. Remove the T-Flash from the holder.



7. Headset

Insert the headset plug into the jack on the left side of your phone marked 

You can answer or end a call by pressing the hook button on the headset.

When you receive an incoming call while a call is in progress, you can answer the incoming call by pressing the hook button on the headset. (The first call is automatically put on hold.)

You can make the last number dialed call by pressing the hook button when the screen is idle.

The last number dialed is launched by pressing the hook button, and then the call will be made by pressing the hook button again.



! Note: If the headset is plugged in, your phone's standby time will be reduced. Therefore, please remove the headset when not in use.

8. USB cable

1. Connect the USB connector to USB port of PC (Desktop or Notebook)



2. Connect the other end to the interface connector on the bottom of the phone



Two functions are available via USB connection.

8.1 Data transfer with PC

When you connect your phone with PC by USB cable, the following window is shown up on you phone LCD.

- Mass Storage : You can use your phone as external memory
=> MP3 file, Image File, Photo File
- COM port : You can synchronize your phone data with PC by using 'Phonesuite' program
=> Phonebook, SMS message, Image file, i-meldody file

! Note : Refer to additional manual 'Phonesuite' regarding Synchronization function.

8.2 Charging

Your phone is on charging status automatically while USB cable connected with PC.

B. Basic Operation

1. Power On/Off

To switch your phone On and Off, make sure that the battery is inserted.

- To switch your phone on, press and hold down [END] until you hear the power-on melody.
- To switch your phone off, press and hold down [END] until you hear the power-off melody.

! Note : Some SIM card may be protected with PIN. If Enter PIN is prompted, enter your PIN and then press [Ok soft key]. For more details, please see Security Setting in 'Operation – Menu'.

2. Call Function

2.1 Making a Call

To make a call with your phone, insure that phone screen is idle mode, then key in the area code and phone number using the numeric keys and press the Dial & Menu confirmation key.



You can hear the connect tone when the call is answered by the called person, if you set the Connect tone to ON.

2.2 Making International Calls

Press and hold the “+” key twice to display “+” character.

Please Key in the country code, area code (without the leading zero) and the phone number. And then press the Dial & Menu confirmation key. The ‘+’ tells the network that the call is international.

2.3 Edit Phone Number

Key	Description
	[Press] Delete a digit on the left side of cursor [Press and Hold] Delete the whole digit
	Move cursor to the digit you want to edit

2.4 Using Phonebook

You can store the names and phone numbers dialed regularly in the SIM card and phone memory.

- See Phonebook List : If you want to go to the phonebook list, push right soft key, and then choose the name what you want to find using Navi-Up & Down keys. Push Dial key when you want to make a call or push left soft key to go to option menu.
- Search Phonebook : If you want to search phonebook list with special name, push navi-down key, and then enter the name what you want to find. Input full name or even a start letter and select “OK” menu. If there is the name you want to call, choose the name by moving navi-up & down key. Push Dial key when you want to make a call or push left soft key to go to option menu.

2.5 Making a Call from Message

You can make a call from message by pushing Dial & Menu Confirmation key when the message you want to call back is highlighted. And you can also make by choosing “Call Back” Menu in the option of “Inbox” after you read a message.

2.6 Redialing the last Number

The phone stores the last 10 numbers dialed. To recall any of these numbers, proceed as follows.

- Press the Dial key to display a list of the last numbers.
- Use Up & Down navigation keys to scroll through the numbers until the required number is highlighted.

- Dial the number highlighted

2.7 Ending a Call

When you have finished your call, briefly press the Menu exit key.

2.8 Answering a Call

When you answer a call, the phone rings or vibrates according to the setting with the incoming call animation.

When the caller can be identified, the caller's phone number and name, if stored in phonebook, will be displayed. If the caller cannot be identified, only the caller's phone number will be displayed.

- If necessary, press the Dial & Menu confirmation key. If the **Any key Answer** option is set to **ON**, you can press any key to answer a call except for the power on/off key.
 - To reject an incoming call, press and hold the volume keys on the right side of the phone.
- End the call by pressing the Menu exit key.

2.9 Emergency Call

Ensure that the phone is switched on and in service.

Enter the emergency number (Official emergency number or another official emergency number) and press the Dial & Menu confirmation key. Give your location. Do not end the call until given permission to do so.

End the call by pressing the Menu exit key.

! Note : In the situation such as power-on that **Enter Lock Code** or **Enter PIN** is prompted, Some network may not allow the emergency call and may request to insert SIM card.

2.10 Entering a “Pause” Character in a Dial String

A pause (“P”) character may be entered into a dial string by pressing the left special function key(“*”) three times.

2.11 Adjusting Earpiece Volume

During a call, you can adjust the earpiece volume by pressing up side or down side key on the right side of this phone. If you want to change keypad tone, press up side or down side volume key in idling mode.

2.12 Using the Earphone

If you insert the earphone to the jack of your phone, you can use it in the same way as your phone's earpiece and microphone.

You can answer or end a call by pressing the hook button on the earphone.

To answer another call while you are on the phone, you can answer the waiting call by pressing the hook button on the earphone.

3. Multimedia Function

3.1 Camera

If you want to take a photo, please follow the procedure as below

- Press camera 'C' key to enter camera mode
- Press camera 'C' key to take a photo
- If you want to save the image, press save button and write the title, otherwise press back button

! Note: For more detailed information about this and other functions of camera, you can refer to the below menu (II Operation instruction => A. Menu Operation => 3. multimedia)

3.2 Video Recorder

If you want to take a video in your phone, choose the [Video Recorder] menu in [Multimedia] menu.

- Choose the [Video Recorder] menu in [Multimedia] menu.
- Press the 'C' key to take a video.

! Note: For more detailed information of the functions of camcorder, you can refer to the below menu (II Operation instruction => A. Menu Operation => 3. multimedia)

3.3 Video player

If you want to play MPEG4 file, please follow the procedure as below

- Short Press 'Wap' key to enter Video player mode.
- Choose the [Video Player] menu.

- Press 'Wap' key to play MPEG4 file.

! Note: For more detailed information of the functions of Video Player, you can refer to the below menu (II Operation instruction => A. Menu Operation => 3. multimedia)

3.4 MP3 player

If you want to play MP3 file, please follow the procedure as below

- Short Press 'Wap' key to enter Audio player mode.
- Press play button to play MP3 file or press left soft key (List) to enter MP3 file list

! Note: For more detailed information of the functions of MP3 Player, you can refer to the below menu (II Operation instruction => A. Menu Operation => 3. multimedia)

4. Text Input Mode


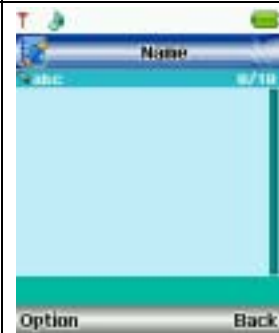 
4.1 Text Input mode general





You can input and edit text by this phone.

- Write and edit a message (SMS/MMS)
- Enter Name (Phonebook)
- Search mode
- Write and edit the name of photo (Camera)
- Write and edit the name of bookmark and WAP profile (WAP)













4.2 Text Input Methods

You can use 6 type input modes as follows and Spanish & Portuguese are same as English.













Mode	Screen (SMS write mode)	Mode	Screen (SMS write mode)
Multitap ABC		Multitap abc	

<p>Smart ABC</p>		<p>Smart abc</p>	
<p>Numeric</p>		<p>Insert Syumbols</p>	











4.3 MultiTap English mode (ABC, abc)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry [Back Soft Key] Go back to the previous mode.
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Insert a blank
	Insert symbols (. , - ? ! ' @ : # \$ / _)
	Select English characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.








4.4 Smart English mode (ABC, abc)

Key	Description
	[Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry [Back Soft Key] Go back to the previous mode.
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward * When entering a word and highlighted, swap words in database.
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward * When entering a word and highlighted, swap words in database.
	Go back to the idle screen
	Insert a blank
	Insert stroke ‘ ’, ‘ :)’, ‘ : -)’
	Select English characters. Switch the character until the desired character is highlighted by pressing the alphanumeric key from 2 to 9.
	Select Symbols.
	Switch the input methods.

4.5 Numeric mode

Key	Description
	[Select Soft Key] Accept the string entered on the edit screen [Option Soft Key] Go to option menu screen
	[Press] Clear a character [Press and Hold] Clear the entire entry [Back Soft Key] Go back to the previous mode.
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen
	Input numbers
	Select Symbols
	Switch the input methods.

4.6 Insert Symbols mode

Key	Description
	Accept the symbol selected on the symbols screen, and then turns to the edit screen.
	Back to the previous mode.
	[Press] Move the cursor to the left direction by a character [Press and Hold] Scroll the cursor leftward.
	[Press] Move the cursor to the right direction by a character [Press and Hold] Scroll the cursor rightward.
	[Press] Move the cursor one line up [Press and Hold] Scroll the cursor upward
	[Press] Move the cursor one line down [Press and Hold] Scroll the cursor downward
	Go back to the idle screen

5. Phonebook

You can store phone numbers and its corresponding names in the memory of your phone and SIM card. The SIM card and phone memories, although physically separate, are used as if they were a single entity, called phonebook.

5.1 Storing a Phone Number with a Name and an Image

As soon as you start to enter a number, press left soft key (Save) to store the number in the phonebook.

5.1.1 Key in the number to be stored. You can input the number up to 40 digits.

5.1.2 Select the storage from “To SIM” or “To Phone.” You can also check how many you saved and total entries you can store in the storage.

5.1.3 Select a category to edit. To select the category, scroll to the category and press the [Edit] soft key (left). Ten categories are available;

- Name : Max. 30 English characters. Press [Edit] to input the characters.

- Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Home Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Company Name : Max. 30 English characters. Press [Edit] to input the characters.
- Email Address : Max. 60 English characters. Press [Edit] to input the characters.
- Office Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Fax Number : Max. 40 digits. Enter digits by pressing alphanumeric keys.
- Associate Picture : allows you to set an associate picture as a Photo Caller ID; the phone will display the selected image when you have an incoming call. Select by pressing the navigation key to the right or left. You can select from 4 pre-defined images and select from file manager.
- Associate Sound : Select by pressing the navigation key to the right or left.
- Caller Group : 5 groups (Friends, Family, VIP, Business and Others) or none. Select a caller group by moving the navigation key. If you choose no group, the number is saved and displayed “None.”
-

! Note: Refer to ‘4. Text input mode’ instruction’, the previous menu.

5.2 Storing a Phone Number using the Phonebook Menu

5.2.1 Enter Phonebook menu on main menu screen.

5.2.2 Scroll to ‘Add New Entry’ and select it

5.2.3 Select the storage between “To SIM” and “To Phone.”

5.2.4 Select a category to edit. To select the category, scroll to the category and press the [Edit] soft key (left). Ten categories are available (same with “5.1 Storing a Phone Number with a Name and an Image” for selecting category, edit and save the entries).

! Note: You can store up to ten categories per an entry. (Support for up to 200 entries).

5.3 Searching the phonebook list

5.3.1 From Idle Screen: Press the right soft key (name) on the idle mode

5.3.2 From Phonebook Menu : Scroll and select the following menus

- Quick Search : This menu shows the existing list and search window
- Search Entry : This menu only shows search window

II. Operation Instruction

A. Menu Operation

1. Call History

With this menu, you can identify all call records that you have dialed, received or missed.

It will display the number and name (if available), together with the date and time at which the call was made or received.

1.1 Dialed Calls

This menu lets you view the last dialed calls.

In the dialed calls list, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record
- Save to Phone: Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number
- Edit : Allows you to edit the number and save to the phonebook

1.2 Received Calls

This menu lets you see the last 10 received calls.

In the list of received calls, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record
- Save to Phone: Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number
- Edit : Allows you to edit the number and save to the phonebook

1.3 Missed Calls

This menu lets you view the last 10 missed calls.

In the missed calls list, you can view the details of the record by pressing the [Ok] soft key (left). In the view screen, you can make a call to the number by pressing the Dial key.

There are 4 options in [Option] menu as following;

- Delete: Allows you to delete the record

- Save to Phone: Allows you to save the record to the phonebook
- Dial : Allows you to call back to the recorded number
- Edit : Allows you to edit the number and save to the phonebook

1.4 Delete Call Log

This menu lets you delete all call data of each category at once.

There are 4 categories of call as following.

- All Calls : Allows you to delete all calls data
- Dialed Calls : Allows you to delete all dialed call data
- Received Calls: Allows you to delete all received call data
- Missed Calls : Allows you to delete all missed call data

1.5 Call Time

This menu lets you view the timers for calls made and received. The following timers are available.

- Last Call Time: length of the last call
- Total Sent: total length of all calls made since the last reset
- Total Received: total length of all calls received since the last reset.
- Reset All Time: Allows you to reset the call timers

! Note: The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing purposes and so forth.

1.6 Call Cost

You can view the cost of the last call, or of all calls. Costs are shown only if your network operator supports this service. The following 5 options are available.

- Last Call Cost: Allows you to check the cost of the last call.
- Total Cost: Allows you to check the cost of all calls.
- Max Cost: Enter PIN2 and input a limitation of the Max Cost.
- Reset Cost: Allows you to reset the call cost.
- Price Per Unit: Enter PIN2 and input a limitation of the price per unit.

! Note: Not all SIM cards support this feature. The number of items in these lists depends on the contents of your SIM card.

1.7 SMS Counter

You can view the numbers of sent and received SMS.

1.8 GPRS Counter

You can view how many GPRS message has been sent and received, and reset the counter.

- Last Sent: Allows you to view the last send GPRS Messages.
- Last Received: Allows you to view the last received GPRS Messages.
- All Sent: Allows you to check the numbers of All GPRS messages sent.
- All Received: Allows you to check the numbers of All GPRS messages received.
- Reset Counter: Allows you to reset the GPRS Counter.

2. Phonebook

Phonebook offers phonebook storage, management and services. You can access to the phonebook from idle screen, phonebook menu, and message writing modes.

From Idle screen, press the [Name] soft key (right), it will display the phonebook data sorted by name in your SIM Card and phone memory.

From the Phonebook menu, you will have 8 sub menus as following.

2.1 Quick Search

When you select the Quick Search in the Phonebook menu, you will see all entries saved in the phonebook. This function allows you to search the phonebook data by name; simply type in alphabet(s), the phone will show you the search result dynamically.

From the phonebook list, you can also View, Edit, Delete, Copy, Move, and Duplicate the entry.

- View: allows you to view the entry's contents such as name, number and so on.
- Edit: allows you to edit the entry items.
- Delete: allows you to delete the entry.
- Copy: allows you to copy the entry from SIM to Phone or Phone to SIM. You will have the same entry in a different storage. (SIM + Phone)
- Move: allows you to move the entry from SIM to Phone or Phone to SIM. The entry will be stored in the original storage. (SIM → Phone, Phone → SIM)
- Duplicate: allows you to duplicate the entry in the same storage. You will have the same data in the same storage. (SIM+SIM, Phone+Phone)

2.2 Search Entry

When you select the Search Entry, after storing numbers to the phonebook, you can search them by Name.

1.2.1 Enter a name you want to search in the text input box. Input full name or even a start letter and press the [Option] soft key (left).

1.2.2 If there is a name, you want to call, choose the name by moving up & down the navigation key.

1.2.3 Press the Dial key to make a call. However, if there is more than one entry in the selected name, it will display a list. Then you may simply select one entry and press the Dial key to make a call.

The following options are available.

- View: allows you to view the entry's contents such as name, number and so on.
- Edit: allows you to edit the entry items.
- Delete: allows you to delete the entry.
- Copy: allows you to copy the entry from SIM to Phone or Phone to SIM. You will have the same entry in a different storage. (SIM + Phone)
- Move: allows you to move the entry from SIM to Phone or Phone to SIM. The entry will be stored in the original storage. (SIM → Phone, Phone → SIM)
- Duplicate: allows you to duplicate the entry in the same storage. You will have the same data in the same storage. (SIM+SIM, Phone+Phone)

2.3 Add New Entry

You can add the new entry to SIM or Phone memory.

Please see [Storing a Number using the Phonebook Menu].

2.4 Caller Group

There are 5 kinds of Caller Groups and you can setup and edit Caller Group profiles as following.

- Group Name: Friend, Family, VIP, Business and Others. You can edit the group name and press the [Option] soft key (left) and select "Done" to save the changes.
- MIDI (MIDI 1 ~15 / None) : Allows you to select the ring tone to be used when you receive a call from a person in the group. Scroll left and right with the navigation keys.
- Picture (Picture 1~4 / Select form file): Allows you to select incoming call picture when you receive a call from a person in the group. Scroll with the navigation keys to change the picture and go to the next line to select. Or if you want to view and select, select the [View] soft key and scroll with the left and right navigation keys. To select the picture, press the [OK] soft key (left).

- Color pattern (Color pattern 1~6 / None): Allows you to select incoming call color patterns when you receive a call from a person in the group.
- Associate Video (Select from file / None): Allows you to select incoming call associate video when you receive a call from a person in the group.
- Member List: After storing numbers in the phonebook, you can search them by Group. You can add or delete member(s) to the group member list. Press [Option] soft key then select "Add," it will display a phonebook list excluding the members already in the group. It is possible to set a member in multiple groups.

2.5 Speed Dial

You can enable, disable and edit the speed dial from the number 2 ~ 9 keys.

- Enable Speed Dial (On/Off) : You can choose to enable or disable the speed dial
- Set Number : You can set the speed dial from the number 2 ~ 9 keys. Press [Option] soft key, and select "Edit" and select the entry from the phonebook list.

2.6 Owner Number

You can display your mobile phone number. Press [Option] soft key, you can edit owner's name and phone number.

2.7 Extra Number

You can view and edit Service Dial number and SOS number.

- Service Dial Number: lists up the SIM SDN (Service Dial Number) and allows you to access to the number by pressing the left soft key.
- SOS Number: lists up the SOS Number.

2.8 Management

You can view and edit the management for the Phonebook as following.

2.8.1 Preferred Storage

You can set your preferred storage either to SIM or to Phone as default storage in the phonebook.

2.8.2 Fields

There are eight fields that you can set on or off in your phonebook entry.

Press the left soft key to turn on or off the field.

- Home Number
- Company Name

- Email Address
- Office Number
- Fax Number
- Birthday
- Associate Picture
- Associate Video
- Associate Sound
- Caller Group

2.8.3 Copy All

You can copy all phonebook data from SIM card to Phone or from Phone to SIM. It is a useful function if you want to back up your phonebook data from a SIM card to your phone and vice versa.

2.8.4 Delete

You can delete all phonebook data in SIM card or Phone. In addition, you can delete the phonebook data one by one.

2.8.5 Human Voice Prompt

You can do on or off the Human Voice Prompt.

2.8.6 Memory Status

You can check how many names and numbers are stored in the phone book (SIM card and phone memories) or how much free space is remained.


3. Multimedia

The Multimedia menu provides you several multimedia functions. You can enjoy your phone as multimedia device.
















3.1 Camera

This phone has a 1.3M Pixels Camera sensor (CMOS). You can enjoy taking photos and see the saved photos or images.

Two ways to access to the Camera Viewer:

- You can access to Camera preview mode by pressing the  key in the idle mode.
- You can also use [Camera] menu after pressing the [Menu] soft key (left) to open the main menus and choosing the fifth menu [Multimedia] then [Camera] menu.

You can control camera options by direct control keys as follows

Key	Description
	Take a picture
	Digital Zoom-up
	Digital Zoon-down
	EV level down
	EV level up
	Effect Setting
	White Balance
	Delay Timer
	Cont Shot
	Night Mode
	Image Quality
	Image Size
	Enter Camera Option menu
	Back to previous menu
	Back to idle mode

3.1.1 Camera Options

From the camera preview mode, you can access to the Camera Options by pressing the [Option] soft key (left) for the following options and settings for the Camera.

- To Image Viewer: By selecting this menu, there are 7 options as following:

- View: allows you to view the image in full screen. Press the navigation key up and down to view other images.
 - Browse Style: allow you to view the browse style to List Style and Matrix Style.
 - Forward: allows you to forward the image to Wallpaper, Screen Saver, Phonebook, MMS and EMS.
 - Rename: allows you to edit the image name.
 - Delete: allows you to delete the selected image.
 - Delete All Files: allows you to delete all images.
 - Sort: allows you to sort the image by Name, Type, Time and Size.
 - Storage : allows you to storage to Phone or Memory card.
- Camera Settings
 - White Balance (Auto/Daylight/Tungsten/Fluorescent/Cloud/Incandescence)
 - Flash (On/Off): You can set the camera flash light on or off with this setting. When the Flash is on, the camera flash will lit on when you take a picture.
 - LED Highlight (White/Red/Green/Blue/Yellow/Purple/Cyan/Off): allow you to select the LED highlight.
 - Shutter Sound (Sound1/2/3/Off) : Allows you to select a shutter sound among three kinds of shutter sounds or turn off the shutter sound. The sound makes you feel the sense of taking a picture.
 - EV (-4/-3/-2/-1/0/+1/+2/+3/+4): You can set the EV (Exposure Value) and the preview will look darker in lower EV and brighter in higher EV.
 - Night Mode (On/Off): Turn on this function in the dark place.
 - Banding (60Hz/50Hz): You can select the sampling bandwidth of the camera sensor. When bandwidth increases, the memory size and the picture quality will increase.
 - Image Setting: You can set image size and quality of your photo as following.
 - Image Size: 176x220, 160x120, 320x240, 640x480 and 1280x1024 are available.
 - Image Quality (Normal//High/Low): allows you to choose the JPEG quality. The captured image memory size will increase if you choose higher quality.
 - Effect Setting : Allows you to set Image effect among 17 options
 - Normal
 - Grayscale
 - Sepia
 - Sepia Green
 - Sepia Blue

- Color Invert
- Gray Invert
- Blackboard
- Whiteboard
- Copper Carving
- Blue Carving
- Embossment
- Contrast
- Sketch
- Custom FX1 ~FX3
- Add Frame : It allows you to off or add the frame 1 to 10.
- Cont. Shot : It allows you to take multiple continuous shots by pressing the camera key. You can set this function off or take 1, 3, or 5 continuous shots.
- Delay Timer : It allows you to take a picture with delayed timer. If you set the delay timer at 5 sec, and press the camera key (center navigation key), it will take a picture 5 seconds later.
 - Off
 - 5 sec
 - 10 sec
 - 15 sec
- Storage: This menu allows you to storage to Phone or Memory card.
- Restore Default: This menu allows you to restore to the camera's default settings.

! Note : Except 'Restore default', all of above functions are available on the camera preview mode by using shortcut keys.

3.2 Image Viewer

You can see your photos in your phone by choosing [Image Viewer] menu in [Multimedia] menu. It will display the photos with thumbnail, image name, and image size.

There are 7 options as following:

- View: allows you to view the image in full screen. Press the navigation key up and down to view other images.
- Browse Style: allow you to view the browse style to List Style and Matrix Style.
- Forward: allows you to forward the image to Wallpaper, Screen Saver, Phonebook, MMS and EMS.
- Rename: allows you to edit the image name.

- Delete: allows you to delete the selected image.
- Delete All Files: allows you to delete all images.
- Sort: allows you to sort the image by Name, Type, Time and Size.
- Storage: allows you to storage to Phone or Memory card.

3.3 Video Recorder

This phone has a Camcorder function. You can enjoy recording video and see the saved videos (or Movies).

- To player : By selecting this menu, you can view the saved files in the Video Player.
- Camcorder Setting
 - White Balance (Auto/Incandescence/Cloud/Fluorescent/Tungsten/Daylight)
 - LED Highlight (White/Red/Green/Blue/Yellow/Purple/Cyan/Off): You can set the LED highlighting to White, Red, Green, Blue, Yellow, Purple and Cyan or off with this setting. When the set the on, the LED will be display when you take a Video.
 - EV (-4/-3/-2/-1/0/+1/+2/+3/+4): You can set the EV (Exposure Value) and the preview will look darker in lower EV and brighter in higher EV.
 - Night Mode (On/Off) : Turn on this function in the dark place.
 - Banding (60Hz/50Hz): You can select the sampling bandwidth of the camcorder sensor. When bandwidth increases, the memory size and the camcorder quality will increase.
- Video Setting : You can set video size and quality of your video as following.
 - Video Quality (Low/Normal/High/Fine): allows you to choose the MPEG4 quality. The recorded video memory size will increase if you choose higher quality.
 - File Size Limit: 25K, 50K, 200K and No Limit are available.
 - Recording Time Limit : 15 sec, 30 sec, 60 sec and No Limit are available.
 - Recording Audio: On and Off are available.
 - Encode Format: H.263 and Mpeg4 are available **with AMR audio**.
- Effect Setting : Allows you to set video effect among 14 options
 - Normal
 - Grayscale
 - Sepia
 - Sepia Green
 - Sepia Blue
 - Color Invert
 - Gray Invert
 - Blackboard
 - Whiteboard

- Copper Carving
- Blue Carving
- Embossment
- Contrast
- Sketch
- Storage : allows you to storage to Phone or Memory card.
- Restore Default : This menu allows you to restore to the camcorder's default settings.

! Note : Except 'Restore default', all of above functions are available on the camera preview mode by using shortcut keys.

3.4 Video Player

You can see your recording video in your phone. It will display the videos with thumbnail, video name, and video size.

Three ways to access to the Video Player:

- By pressing the 'WAP'key.
- By pressing the [Menu] soft key and select 'Multimedia' menu and 'Video Player' sub menu.
- By pressing the [Menu] soft key and select 'File Manager' menu and select the 'D:\' drive, and press [Option] and select "Open" to play one file at a time.

There are 7 options as following:

- Play: allows you to view the video in full screen.
- Forward: allow you to forward the file to Phonebook, Screen Saver, Power on display, Power off display, MMS and Wallpaper.
- Rename: allows you to edit the file name.
- Delete: allows you to delete the selected file.
- Delete All Files: allows you to delete all files.
- Sort: allows you to sort the file by Name, Type, Time and Size or none.
- Storage: allows you to storage to Phone or Memory card.

! Note : There are information of the Video Player Format as follows;

- Visual Format : MP4, H.263
- Visual Size : QCIF(176x144), CIF(352x288)
- Audio Format : AAC, AMR
- Frame Rate : 15 ~ 30 frames.

3.5 Audio Player

You can listen to MP3, MIDI, WAVE music files with the Audio Player.

Three ways to access to the Audio Player:

- By pressing the 'WAP' key.
- By pressing the [Menu] soft key and select 'Multimedia' menu and 'Audio Player' sub menu.
- By pressing the [Menu] soft key and select 'File Manager' menu and select the 'D:\' drive, and press [Option] and select "Open" to play one file at a time.

To view the music list, press [List] soft key. It will display available music list from the Phone depending on Play List setting. To play the music, press the left or right navigation key, or press [Option] soft key and select "Play."

The following Options are available:

- Play : Play the file
- Detail: displays details of the music file
 - ✓ File name
 - ✓ Channel
 - ✓ Quality
 - ✓ Size
 - ✓ Time
- Add to Rings: Set the music file in the phone memory as a ring tone.
- Refresh List: Refresh the music list.
- Settings
 - Play List (from phone/card): You can search the play list from phone or card.
 - List Auto Generation (On/Off): you can select whether to generate the music list automatically or manually.
 - Skin (Skin 1/2/3): you can select the Audio Player skin depending on your taste.
 - Repeat (One/All/Off): Set repeat option. When you select one or all, it will repeat the selected file or all music files. When you select this option to off, it will play the music file one time and stop.
 - Shuffle (On/Off): Set the shuffle feature on or off. This function is useful if you want to listen to the music in random order rather than from first file to the last.
 - Background Play (On/Off): Set the Audio Player to play the music while you are using the

phone other than audio player, such as menu navigation.

- Equalizer (Normal/Bass/Dance/Classical/Treble/Party/Pop/Rock): Set equalizer options.

3.6 Photo Artist

You can edit the phone with this menu and there are 9 options.

- Save as
- Add Effect
- Add Frame
- Add Icon
- Add Text
- Adjustment
- Flip
- Expand Canvas
- Help

3.7 Sound Recorder

With this menu, you can record sound in AMR and WAV format and use it as voice memo, ring tone, MMS and EMS attachment.

1. When there is no record file in the Sound Recorder, there are two options:

- Record : Start recording
- Settings : Select recording the sound in AMR and WAV format.

2. If you have more than one record file, there are 8 options:

- Record: Start recording.
- Play: when there is a file in the list, it will play the recorded sound file.
- Append: Record right after the selected sound file.
- Rename: Change the file name.
- Delete: Delete the selected file.
- Delete All: Delete all files in the sound record list.
- Settings : Select recording the sound in AMR and WAV format.
- Forward
 - To User Profile: allows you to use the sound file as a Ring Tone.
 - To MMS: allows you to write an MMS message with the selected sound file.
 - To EMS: allows you to write an EMS message with the selected sound file.















3.8 Melody Compose

With this menu, you can create an iMelody file.

3.8.1 Compose a melody

When you first use the Melody Compose, press the [Add] soft key (left)

Start composing a melody pressing the numeric keys. The following are the descriptions.

Key	Description
	Insert 'Do'
	Insert 'Re'
	Insert 'Mi'
	Insert 'Fa'
	Insert 'Sol'
	Insert 'La'
	Insert 'Si'
	Insert Vibration – allows the phone vibrates.
	Insert Light – allows the LED lit.
	Insert Rest – indicates the rest place.
	Increases or decreases the note () and rest ().
	Changes the accidentals. Press 1~7 and then press the sharp key; the musical scale will be switched with between Sharp (#) / Flat (b), if applicable.

3.8.2 Options

There are four options while you are editing

- Play: Play the composed file before you save the file.
- Play Speed : Set the melody speed (Fast / Normal / Slow)
- Select Instrument : Choose the instrument (Piano / Guitar / Violin / Saxophone / Steel Drums / Flute / Harmonica / Trumpet / Music Box / Xylophone)
- Save: Save the melody

Press the [Option] soft key and select "Save." Edit and save a file name by pressing the [Option] soft key (left) and select "Done."

If you have more than a record file,
Press the [Option] soft key (left), and select 'Add' to start composing a melody.

There are 7 options:

- Play : Play the selected file.
- Edit : Edit the composed music.
- Add : Compose a new music file.
- Rename : Rename the selected file.
- Delete : Delete the selected file.
- Delete All Files: Delete all files in the list.
- Forward : Forward the composed file to the following usages.
 - To User Profile: allows you to forward the sound file to User Profile as a Ring Tone.
 - To MMS: allows you to write an MMS message with the selected sound file.
 - To EMS: allows you to write an EMS message with the selected sound file.

4. Services

This menu allows you to access WAP service and Data Account set-up.

! Note : If you use a SIM card that provides additional services, the GSM Access menu displays. For details, please see your SIM card instructions.

4.1 WAP

You can connect to WAP site by this phone, and use the services provided by the sites. The WAP browser works as Internet browser of PC.

4.1.1 Homepage

When you choose [Homepage] menu, WAP browser opens the main page of home site that you had activated among the sites in [Profile].

4.1.2 Bookmarks

You can make bookmark data in your phone. And, you can connect to the site directly.

There are 3 options as following.

- Connect : Connect to the bookmarked WAP page
- Edit : Edit the name and URL of the selected entry
- Delete : Delete the selected entry

4.1.3 Recent Pages

When you choose [Recent Pages] menu, WAP browser opens the latest WAP page.

4.1.4 Enter Address

If you know the URL of the site, you can go to the site directly by inputting the URL.

4.1.5 Service Inbox

Your phone receives WAP service messages and saves them in the Service Inbox. You can read the message in the Inbox.

4.1.6 Settings

This option allows you to set the WAP settings. There are five profiles of sites in this phone. You can activate one of them as a home site and change or set each profile.

! Note : The available number of profiles are varies on your country)

There are 5 options as following.

- Edit Profile: Shows the name of selected profile and you can edit the profile(s).
- Browser Options: Time out, Show Image
- Service Message Settings: On/Off
- Clear Cache: clears the most recent site files that you have downloaded in the temporary memory.
- Clear Cookies: deletes cookies in the memory.

4.2 Data Account

This menu allows you to change the settings for the GSM and GPRS network services. For further details, contact your service provider.

4.2.1 GSM Data

This setting allows you to change the settings for the GSM Data network as following.

- Account Name: Edit the account name.

- Number: Enter the server phone number.
- User Name: Enter the user name required to connect to GSM Data network.
- Password: Enter the password required to connect to GSM Data network.
- Line Type: Choose a network connection type between Analogue and ISDN.
- Speed: Select the desired speed from 9.6 Kbps, 14.4 Kbps and 4.8Kbps.
- DNS : Enter the DNS IP address

4.2.2 GPRS

This setting allows you to change the settings for the GSM Data network as following.


- Account Name: Edit the account name.
- APN: Enter the access point name used for the address of the GPRS network gateway.
- User Name: Enter the User Name required to connect to GPRS network.
- Password: Enter the password required to connect to GPRS network
- Auth. Type: Select the authorization type from Normal and Secure.

5. Messages

With this menu, you can use SMS, MMS, Voice Mail Server, and Broadcast Message. These functions are available depending on network services that your service provider supports.

5.1 SMS

The SMS (Short Message Service) function is a network service and your network may not support the service. You can send messages in Fax, Page, E-mail and Text format. To send text messages by phone, you must obtain the SMS center number from your service provider, and enter it on the SC Address option in Profile Settings menu.

When the  icon appears on the status indicators area, it indicates that you have received a new message.

! Note: The SMS service may not be available on all networks. Some network allows it only within its own network.

5.1.1 Inbox

With this menu, you can view the new text messages or the read messages.

It will display the sender's phone number or name (if stored in the Phonebook) on the list.

If you choose the [Ok] soft key, you can view the message contents.

Press [Option] soft key for the following options:

- Reply: Allows you to reply to the sender.
- Delete: Allows you to delete the viewed message
- Edit: Allows you to edit the message, and send or save the edited message.
- Forward: Allows you to forward the message.
- Delete All: Allows you to delete all messages in the Inbox.
- Use Number: Allows you to call the sender back or save the number to the phonebook.
- Save Objects: Allows you to save the objects (NVM) of incoming messages.

5.1.2 Write Message

With this menu, you can write a message and insert EMS objects.

Select [Write Message] menu in the [SMS] menu.

Make a message. You can insert Template, Object, change format text, and input method.

After you complete the message, press the [Option] soft key (left) and then select "Done." Choose one of following options.

- Send Only: Sends the message to the recipient phone number. It will not save the message.
- Save and Send: Saves the message, and send it to the required recipient.
- Save: Saves the message so that you can send it later.
- Send to Many: Send the message to multiple recipients. Select Edit List to add up to 10 recipient(s).
- Send by Group: Send the message to the Caller Group. Select a Caller Group from the list.

You can input the number directly or get from the phonebook by pressing the [Search] soft key (left).

The phone will display the Message sending Success or Fail message on the screen for all recipients.

! Note: If you receive a call while you are writing a message, the message will be backup and after hanging up the call, the phone will display [write message] mode. You can finish the message without losing the data.

5.1.3 Outbox

With this menu, you can view the sent or unsent messages you have saved.

Send, Edit, Delete, Delete All and Use Number options are available.

5.1.4 Template

You can edit and delete message templates in this menu. You can store your frequently using

messages up to 10. For example, “Call Me Now,” “How about lunch,” “How are you,” and so forth. You can store up to 40 English letters in each template. You can use the Template by selecting [2.Use Template] option, when you write a message.

5.1.5 Message Settings

You can setup default Message Information: Profile Setting, Common Settings, Memory Status, Preferred Storage, and Preferred Bearer.

5.1.5.1 Profile Setting

Depending on your service provider and service plan, you can set the message profile setting.

You can edit the profile as following:

- Profile Name: edit the profile name.
- SC Address: you have to get the number from your service provider.
- Valid Period: choose from Maximum, 1 hour, 12 hours, 1 day, 1 week
- Message Type: choose from Fax, Page, E-mail, Text

5.1.5.2 Common Setting

You can set on or off the following common settings for SMS.

- Delivery Report : This allows you to set delivery report on or off. When this function is set to on, the network informs you whether or not your message has been delivered.
- Reply Path : This menu allows the recipient of your Message to send you a reply via your message centre, if the network provides Message service. Press the [On] or [Off] soft key (left) to turn this option on and off.

5.1.5.3 Memory Status

This shows memory status of SMS in your SIM card or Phone.

5.1.5.4 Preferred Storage

You can set your preferred storage for the SMS messages: to SIM or Phone.

5.1.5.5 Preferred Bearer

You can set your preferred Bearer for SMS.

Bearer options are “Prefer GPRS, Prefer GSM, GPRS Only and GSM Only.”

5.2 MMS

The MMS (multimedia messaging service), also called Photo Message, allows end-users to send and receive messages containing multimedia content (including images, video, sound and text). It provides a rich media of personal multimedia messages from between mobile to mobile, and mobile to e-mail.

5.2.1 Write Message

With this menu, you can write a message and insert Image, Sound, and Attachment.

Select [Write Message] menu in the [MMS] menu.

Make a message. You can edit To, CC, BCC, Subject, and Content.

You can input the number directly or get from the phonebook by pressing the [Search] soft key.

After you complete the message, press the [Option] soft key (left) and then select "Done." Choose one of following options.

- Send Only: Sends the message. It will not save the message.
- Save and Send: Saves the message, and send it to required recipient(s).
- Save to Drafts: Saves the message to Drafts. You may send it later.
- Send Options: Validity Period, Delivery Report, Read Report, Priority
- Exit: Exits the Write Message, the phone will ask if you want to save the message.

The phone will display the Message sending Success or Fail message on the screen for all recipients.

! Note: If you receive a call while you are writing a message, the message will be backup and after hanging up the call, the phone will display [write message] mode. You can finish the message without losing the data.

5.2.2 Inbox

With this menu, you can view the new text messages or the read messages.

It will display the sender's phone number or name (if stored in the Phonebook) on the list.

If you choose the [Ok] soft key, you can view the message contents.

Press [Option] soft key for the following options:

- Reply: Allows you to reply to the sender.
- Delete: Allows you to delete the viewed message
- Edit: Allows you to edit the message, and send or save the edited message.
- Forward: Allows you to forward the message.
- Delete All: Allows you to delete all messages in the Inbox.
- Use Number: Allows you to call the sender back or save the number to the phonebook.

Select Objects: Allows you to save the objects (NVM) of incoming messages.

5.2.3 Outbox

With this menu, you can view the sent or unsent messages you have saved.

Send, Edit, Delete, Delete All and Use Number options are available.

5.2.4 Drafts

You can save your unsent MMS message to Draft menu. You can send the MMS message in Draft menu after finishing MMS writing.

Options on saved MMS messages are as following:

- View: plays the MMS message.
- Properties: shows properties of the message (From, Cc. Subject, Date, and Memory)
- Send: Send the saved message to the recipient(s).
- Edit Message
- Delete: Delete the message.
- Delete All: Delete all messages in the box.
- Use Number: Dial or Save to Phonebook.

5.2.5 Sent

The Sent option displays the list of sent MMS messages.

- View: to view the selected message.
- Properties: to display the properties of the selected message.
- Send to other: to send the selected message to others. The user could select this item and edit the recipient's address and subject before sending.
- Delete: to delete the selected message.
- Delete all: to delete all messages in Inbox.
- Use number: to extract all numbers from the selected message.

5.2.6 Template

You can use and edit the MMS templates and write a message in this menu.

Select a template and press the [Option] soft key:

- View: allows you to view and listen to the template message.
- Properties: shows properties of the templates (From, Cc. Subject, Date, and Memory).
- Write Message: allow you to write a message with the template.
 - From, CC., and BCC: allow you to add number(s) or email(s).
 - Subject: allows you to edit the text content.

- Edit content: allow you to select from text, image, or sound by pressing navigation keys up and down.

5.2.7 Message Settings

Within the MMS sub-menu, you can define default values on common parameters for mobile-originated messages. By setting default values for MMS messages, you can experience a more comfortable service. You can set up the MMS related parameters for sending and retrieving the MMS messages.

5.2.7.1 Sending

This sets up parameters when you send MMS messages.

- Validity Period : You can select the period in which the service center try to deliver message. When the message expires, message center will not try to deliver the message.
 - Max: Maximum period is what service provider permits.
 - 1 Week
 - 1 Day
 - 12 Hours
 - 1 Hour
- Read Report : You can set whether to receive a read report from every recipient.
- Delivery Report : This allows you to set delivery report on or off. When this function is set to on, the network informs you whether or not your message has been delivered.
- Priority : You can set the priority of MMS message.
 - High
 - Normal
 - Low
- Sliding Timing : You can set how long you want the message to play. Input number(s) in seconds.
- Delivery Time : You can set how soon the phone will send your message.
 - Immediate
 - In One Hour
 - In 12 Hours
 - In 24 Hours

5.2.7.2 Retrieval

This sets up parameters when you retrieve MMS messages.

- Home Network
 - Immediate
 - Delayed
- Roaming
 - As Home
 - Delayed
 - Restricted
- Read Report
 - On Request
 - Send
 - Never Send
- Delivery Report : This allows you to set delivery report on or off. When this function is set to on, the network informs you whether or not your message has been delivered.
 - On
 - Off

5.2.7.3 Filters

You can filter MMS Messages by three categories as following.

- Anonymous (Allow/Reject)
- Max Size (KB) : Input number(s) in Kilobytes.
- Advertisement (Allow/Reject)

5.2.7.4 Edit Profile

Select from profile list. You can activate the profile or edit the profile.

- Rename profile : edit the profile name.
- Homepage: Enter URL
- Data Account: Select data account from the list.
- Connection Type:
 - Connection Oriented: When you select Connection Oriented, you can edit the IP Address.
 - Connectionless: When you select Connectionless, you can edit the IP Address.
 - HTTP: when you select HTTP, you can edit the Proxy Address and Proxy Port
- User ID : Enter your ID
- Password : Enter your password

5.2.7.5 Auto Signature (On/Off): allows you to select the auto signature options when you send the

MMS

5.2.7.6 Memory Status

This shows usage count, total memory used, and remaining memory.

5.3 Voice Mail Server

Your phone is capable of dialing with voicemail server number (if provided by your network). If the voicemail has arrived, your phone displays new message in the idle screen and sets to inform you of the arrival. Select the Voice Mail from the list and press [Option] soft key (left). By Selecting the Edit option for editing the Voice Mail server number. By selecting the Connect to Voice option, your phone will dial to the configured number that has been stored in Voice Mail list. You can then listen to the voicemail.

! Note: Voice mail is a network feature. Please contact your service provider for more information.

5.4 Broadcast Message

This network service allows you to receive the broadcast messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in the area where you are. You can even receive the message to be in a particular language (For example, when you are abroad) by changing language selection.

! Note: For more information about broadcast message topics, please contact your service provider.

The following options are available.

- **Receive Mode:** You can turn the receive mode on and off by pressing the soft key (left). Allows you to enable or disable the reception of the broadcasted text messages.
- **Read Message:** With this menu, you can read all the broadcasted text messages received. The title area of the screen will display the name of the message subject item. Whenever the phone receives new contents, the phone will update the contents of the message subject.
- **Languages:** Allows you to select your preferred language for displaying cell broadcast messages. The number of languages you can select depends on your SIM card.
- **Channel Setting:** Allows you to indicate the channels from which you wish to receive broadcast messages. This menu allows you to read, add and delete the list by using Select, Add, Edit and Delete option. The number of items in the list depends on your SIM card. It will display all items you selected.

! Note: For more information about the available subjects, please contact your network service provider.

6. File Manager

This menu allows you to see the total memory used and free space in the storage.

6.1 Drive



Total Memory Status Graphic

Drive Selection List

There are options as following

- Open : Open the drive to see the folder or files in the drive
- Create Folder : Create a folder in the drive
- Format : Format the drive

! Note : All of data in the drive will not be recovered after you format the drive.

6.2 Folder



Current Folder Information (Date)

Folder Selection List

There are options as following

- Open : Open the folder to see the files in the folder
- Create Folder : Create a sub-folder in the folder
- Rename : Rename the selected file.
- Delete : Delete the folder
- Sort : There are five sorting ways as follows
 - By Name

- By Type
- By Time
- By Size
- None

6.3 File



Current File Information (Date & Size)

File Selection List

There are options as following

- Play or View : Play a sound file or view an image or photo file.
- Edit : Edit image or photo file. (Just Photo file has edit option)
 - Auto Resize
 - Save As : You can save as the image or photo file.
 - Add Effect : There are 13 options.
 - Grayscale, Sepia, Sepia Green, Sepia Blue, Color Invert, Gray Invert, Water Color, Blur, Strong Blur, More Sharpen, Median, Dilation and Erosion.
 - Add Frame : There are 10 frame options.
 - Add Icon : There are 18 icon options.
 - Add Text : You can add the text.
 - Adjustment : You can adjust image and color.
 - Adjust Image (Brightness, Contrast, Saturation and Hue)
 - Adjust Color (Color R, Color G and Color B)
 - Flip : You can flip image or photo file.
 - Expand Canvas : You can expand canvas.
 - Help
 - Main LCD Clip
- Forward

Sound File	Image or Photo File
■ To User Profile: allows you to use the	■ To Wallpaper : Set the image as an wallpaper

<p>sound file as a Ring Tone=> In case of Sound File</p> <ul style="list-style-type: none"> ■ To MMS: allows you to write an MMS message with the file. ■ To EMS: allows you to write an EMS message with the selected file. 	<ul style="list-style-type: none"> ■ To Screen Saver : Set the image as a screen saver ■ To Phonebook : Set the image (In case of under 20Kilobytes) ■ To MMS: allows you to write an MMS message with the file. ■ To EMS: allows you to write an EMS message with the selected file.
---	---

- Detail : See the detail information (Data & Size)
- Rename : Rename the selected file.
- Copy : Copy the file to the other folder
- Move : Move the file to the other folder
- Delete : Delete the selected file.
- Delete All Files : Delete all files in the list.
- Sort : There are five sorting ways as follows
 - By Name
 - By Type
 - By Time
 - By Size
 - None

7. Organizer

You can use the Tools menu as your alarm, calendar, to do list, world clock, calculator, unit converter, and currency converter.

7.1 Alarm

This menu allows you to set the alarm to ring at a specific time. You can save up to 3 alarms.

The following Edit Alarm options are available.

1. Alarm (On/Off)
2. Time (HH:MM): input the hour in 24 hour scale and minute.
3. Alarm melody (None/MIDI 1 to 15): select the alarm melody.
4. Repeat (Once / Everyday / Days (S, M, T, W, T, F, S)): select the repeat characteristics of the task.

After you completed editing the options, press the [Done] soft key (right) to save the changes.

To stop the alarm when it rings, press the [Stop] soft key (left) to stop the alarm or press the [Snooze]

soft key (right) to snooze the alarm so that it will remind you again in four minutes.

7.2 Calendar



The calendar helps you to keep track of memos, calls that you need to make, anniversaries, and To-Do.

First, choose the date you want to view by moving the navigation keys. Move to the previous or the next month by pressing the side volume keys located on the right side of the phone, and then press the [Option] soft key (left).

There are two Options as following:

7.2.1 View Tasks

Allows you to view the task list and add task(s) on the selected date.

From the Task List, there are five Options available:

- View: allows you to view the details of the selected task.
- Add: allows you to add a task.
- Edit Task: allows you to edit the selected task.
- Delete Task: allows you to delete the selected task.
- Delete All: allows you to delete all tasks listed on the selected date.

7.2.2 Jump To Date

Allows you to jump to the date you input in the date box (YYYY / MM / DD).

7.3 To-Do List

You can view all saved tasks. It displays a task or tasks saved in the Organizer. To-Do List shows the notes of the tasks from the oldest task to the latest task.

- View: allows you to view the details of the selected task.
- Add: allows you to add a task.
- Edit Task: allows you to edit the selected task.

- Delete Task: allows you to delete the selected task.
- Delete All: allows you to delete all tasks listed on the selected date.
- Send vCalendar: allows you to send by SMS, MMS and save to file.

7.4 World Clock



This feature allows you to check the current time for Greenwich Mean Time (GMT) and major cities around the world, using the right and left navigation keys.

The screen shows the;

- City name
- Current date and time
- Day or Night icon (☀️ 🌙)

To set the time zone of your location, select the city corresponding to your time zone by pressing the left and right navigation keys. The phone will display the local date and time.

7.7 Calculator



Using this feature, you can use the phone as a calculator. The calculator performs the basic arithmetic functions and memory functions; Addition, Subtraction, Multiplication and Division; Add to Memory, Subtract to Memory, Memory Clear and Memory Read.

To perform a calculation:

- Enter the first number using the numeric keys.
- Press the up navigation key once to use [+] (add), and twice to use [M+] (add to the

previous result).

- Press the navigation key down to use [-] (subtract), and twice to use [M-] (subtract to the previous result).
- Press the right navigation key once to use [x] (multiply), and twice to use [MC] (erase the previous result)
- Press the left navigation key once to use [/] (divide), and twice to use [MR] (memory read).
- Press the sharp key (#) to enter a [.] (Decimal point).
- Enter the next number.

Repeat Steps 2 to 3 as many times as required.

To calculate the result, enter the [Ok] soft key.

When you have finished, press the [Back] soft key (right) or the End key to exit.

7.8 Unit Converter

You can convert from one type of unit to another with this function.

To convert a value:

- Select the weight or length options.
- Press the left or right navigation keys and select the type of conversion to be performed.
(Example: Kg <-> Pound)
- Using the up and down navigation keys, place the cursor on the desired unit
- Input the value to be converted, and then press [Ok] to get the result.
- You can enter a decimal point (.) using the # key.

7.9 Currency Converter



You can convert currency if you know the exchange rate.

To convert currency:

- Input a currency rate.
- Press the [Ok] soft key (left).
- Press the left or right navigation keys to choose how you want the currency to be calculated.

(xxx:1 or 1: xxx)

- Press down the navigation key and input the local currency value.
- Press the [Ok] soft key (left) to get the result.

If you want to convert other local amount, press the up navigation key and select the currency convert type (xxx:1 or 1: xxx), and repeat the 4) and 5). If you want to convert with other currency rate, press the [Back] soft key.

8. Settings

You can change settings for your phone using this menu. There are Phone Setup, Call Setup, Network Setup, Security Setup, and Restore Factory Settings sub menu.

8.1 Time and Date

You can set time and date for your phone.

- Set Home City : This menu allows you to set a city as your home city from 57 cities list.
Please select the closest city in the list.
- Set Time/Date : This menu allows you to set the current time and date displayed in the idle screen.
 - HH:MM : Input hour in 24 hour format and minute, and then press navigation key down
 - YYYY/MM/DD : Input year, month and day. Press [Ok] soft key (left) to save the time and date.
- Set Format : Allows you to select a time display type between 12 Hour AM/PM type and 24 Hour type. When the time format is in 12 Hour type, you can change AM and PM by Navigation key.
 - Time Format
 - ✓ 24-Hours
 - ✓ 12-Hours
 - Date Format
 - ✓ YYYY/MM/DD (ex. 2004/12/25)
 - ✓ YYYY-MM-DD (ex. 2004-12-25)
 - ✓ MMM DD,YYYY (ex. "Dec 25, 2004")
 - ✓ DD-MMM-YYYY (ex. 25-Dec-2004)
 - ✓ DD/MM/YYYY (ex. 25/12/2004)
 - ✓ MM/DD/YYYY (ex. 12/25/2004)
- Auto update of Date and Time
This menu allows the phone to update the current date and time automatically. You can turn on or off this function by pressing the [On] or [Off] left soft key.

8.2 Phone Setup

With this menu, you can setup settings regarding display and operations of the phone: Language, Greeting Text, Shortcut, Dedicated Key, Schedule Power On/Off, Auto Keypad Lock, Preferred Input Methods and Default Encoding Type.

8.2.1 Language

This menu allows you to set the display language. Select your preferred language and press [Ok] soft key (left) to save the setting. When you change the language setting, the phone will display in the corresponding language mode.

The following options are available.

- English
- Portuguese
- Spanish

8.2.2 Greeting Text

The Greeting Text menu allows you to display a greeting text on the idle screen.

You can edit and set the Greeting Text. After you edit the Greeting Text, press the [Done] soft key (right) to save.

8.2.3 Shortcut

This allows you can register menu item to dedicate menu list.

You have 36 menu items and can register shortcut menu up to 10 items.

The menu items you can register as bellows.

Search Entry	Outbox	Greeting Text	Alarm
Add New Entry	Voice Mail Server	Phone Lock	Calculator
Owner Number	Received Calls	Auto Keypad Lock	To Do List
Caller Group	Dialed Calls	Wallpaper	Units Converter
Memory Status	Missed Calls	Screen Saver	Currency Converter
Preferred Storage	Call Divert	Calendar	BMI
Write Message	Schedule Power On/Off	Themes	Menstrual
Inbox	Preferred Input Method	Alert Type	Melody Compose
Audio Player	Miscellaneous Display setting	Sound Setting	Browse City

! Note : refer to the menu ‘Phone setup – Dedicated key’ regarding assign menu item to navigation keys.

8.2.4 Dedicated Key

This menu allows you to set the dedicated function for the navigation key in the idle mode.

You can dedicate the Up/Down/Left/Right navigation keys to menus. Select from the menu lists, and press [Ok] key to change the dedicated menu.

! Note : Refer to the menu 'Shortcuts' regarding make up the menu list

8.2.5 Schedule Power On/Off

You can set a schedule for powering on and off your mobile phone. When you schedule the power on or off, the phone will power on or off at every scheduled time. When the phone powers on, it will alarm with alarm tone. It is useful when you want to turn off your phone while you are sleeping, and let the phone power on in the morning so that you would not miss any call or alarm.

To set this option, press [Edit] soft key (left) and edit the following options.

- Status (Disable/ Enable)
- Power On/Off: Choose on or off by pressing the left or right navigations keys.
- Time: Input time in 24-hour scale.

8.2.6 Auto Keypad Lock

Your phone is a candy bar type and it is likely that the key presses accidentally. To prevent unwanted key presses, you can use this function to key protect.

You can select the Auto Keypad Lock options from none/ 5 sec / 30 sec / 1 min / 5 min.

When the Auto Keypad Lock feature is enabled with such time, user must enter the unlock code, which is 1, 2, and 3 in sequence, each time. You may not make a call or operate the phone if unlock code is not entered. However, answering a call, receiving message are available without entering the unlock code.

Press and Hold the * key to activate the keypad lock. It will show you auto keypad lock options. Select from none/ 5 sec / 30 sec / 1 min / 5 min and press [Ok] soft key to save the setting. The keypad lock will be activated in 5 seconds from your last key presses, when you set the Auto Keypad Lock option to 5 sec.

8.2.7 Preferred Input Methods

This menu allows you to define your preferred input method. Once you set the preferred input method, next time you edit in text input mode, it will reflect the setting until you change to another.

8.3 Sound Setting

8.2.1 Volume

This option allows you to adjust the ringing volumes of keypad, call alert, alarm and message alert. You can set different volume levels for the Ring Tone, Key Tone and Effect Sound.

8.3.2 Incoming Call

This option allows you to select the required ring tone. You can set the ring tone from sound files downloaded from WAP download, MMS and EMS. You can also forward files from Phone Memory to this sound setting. Each time you select a tone, the phone will play it for a few seconds.

8.3.3 Keypad Tone

You can select the tone that the keypad generates when you press a key by this menu

- Silent: the keys do not make any sound
- Click: the keys will make “click” sound.
- Tone: the keys will make “tone” sound. (DMTF Tone)
- Ding: the keys will make “ding” sound.
- Typewriter: the keys will make “typewriter” sound.
- Water-Drop: the keys will make “water-drop” sound.
- Human Voice Tone: the keys will make “human voice tone” sound.

8.3.4 Message Tone

You can select message sound from 5 tones or silent. The phone will play the Message Tone you selected, when you receive a message.

8.3.5 Alert Type

This option allows you to customize the alert type. This setup will control the alerts your phone might play. You can customize the alert types as following.

- Ring : the phone rings the ring tone selected with the [Tone Setup] option (8.1.1).
- Vibration Only : the phone vibrates without ringing.
- Vibra and Ring : the phone vibrates and rings simultaneously.
- Vibra then Ring: the phone vibrates first then rings.
- Light Only: the phone lights indicator LED only.

8.3.6 Ring Type

You can set the ring type for playing the ring tones.

- Single: plays the ring tone once.
- Repeat: plays the ring tone in repeated matter.

- Ascending: plays the ring tone with ascending volume.

8.3.7 Miscellaneous Sound Setting menu

8.3.7.1 Power On

You can select power on sound from 2 tones or silent.

The phone will play the power on tone, when you power on the phone by pressing the End/Power key.

8.3.7.2 Power Off

You can select power on sound from 2 tones or silent. The phone will play the Power Off tone, when you turn off the phone by pressing the End/Power key.

8.3.7.3 Extra Tone

You can turn on or off the tone of following alerts.

- Warning
- Error
- Camp On
- Connect

8.3.8 Intelligent Call Alert

Once this function is on, the phone number of other person who is calling to you is read in voice tone when you receive a call.

8.4 Display Characteristic

This menu allows you to customize how you want your phone display items below.

8.4.1 Wallpaper: You can select a wallpaper image as following.

8.4.1.1 System: Select wallpaper image from 11 images including the Analog Clock, Digital Clock and Calendar.

8.4.1.2 User Define: You can search for images and photos in the File Manager. However, there is a size limitation to use an image as wallpaper image.

8.4.2 Screen Saver : This menu allows you to set the screen saver setting. The phone will display the selected image in a full screen, when there is no key input on the phone.

8.4.2.1 Setting

- ✓ On/Off
- ✓ Waiting : 5sec, 15sec, 30sec, 1min

8.4.2.2 Select

8.4.2.2.1 System: Select screen saver image from 12 images including Analog Clock and Digital Clock

8.4.2.2.2 User Define: You can search for images and photos in the File Manager. However, there is a size limitation to use an image as wallpaper image.

8.4.3 Power On Display

- System: Select power on display image from 9 images.

- User Define: You can search for display images in the File Manager.

However, there is a size limitation to use an image as display image.

8.4.4 Power Off Display

- System: Select power off display image from 9 images.

- User Define: You can search for display images in the File Manager.

However, there is a size limitation to use an image as display image.

8.4.5 MainMenu Style: You can select the Main Menu style between matrix and page style.

8.4.6 Miscellaneous Display Setting Menu

8.4.6.1 Show Date and Time: You can set the phone to display or hide the Date and Time on the idle screen.

8.4.6.2 Show Owner Number: You can set if you want to display the owner number or not.

8.4.6.3 Themes: You can set the theme of your phone display style. You can choose a theme regarding the menu title bar, select bar, and soft key bar color themes.

8.4.7 Light

8.4.7.1 LCD Backlight

You can customize the LCD Backlight settings in this menu.

The LCD backlight is automatically off after no key input to save the battery life. You can set the backlight time by this menu. The backlight will be off after the time you set.

- 5 Sec
- 15 Sec
- 30 Sec
- 45 Sec

8.4.7.2 Status LED

This menu allows you to select the LED color pattern from 6 color patterns.

8.4.7.3 Keypad Backlight

You can customize the Keypad Backlight settings in this menu.

The Keypad backlight menu can help to save your battery life. You can set the keypad backlight options as follows;

- Always Off
- Normal Mode
- Night Mode (18:00~06:00)

8.5 Call Setup

The following Call Setup features are network services. Please contact your network service provider to check availability and subscribe to the feature if you wish.

8.5.1 Call Divert

This network service reroutes incoming calls to the number that you specify.

Example: you may wish to divert your business calls to a colleague while you are busy. Call diverting can be set up in the following ways.

You must enter a forward number when you have incoming call(s).

- All Voice Calls: diverts all voice calls.
- If Unreachable: diverts calls, if you are not in a coverage area of your service provider.
- If No Answer: diverts calls, if you do not answer the phone.
- If Busy: diverts calls, if you are already making another call.
- All Data Calls: diverts all data calls.
- Cancel All Divert: cancels all call diverting options.

8.5.2 Answer Mode

You can select the way when you answering an incoming call

- Any Key : To answer a call, you have to click any key of your phone

8.5.3 Auto Redial

This option allows you to set redial automatically when the call receiver is busy. If you set [Auto Redial] on, it will redial 10 times to make a call. To redial proceed as following.

When the other party does not answer, the phone automatically hangs up the phone and redials the phone number.

Press the Dial key or hook button on your ear/microphone when you are using ear/microphone

The phone will redial 10 times to make a call

8.5.4 Call Waiting

This network service informs when someone is trying to reach you during another call. You can specify the call waiting option for voice calls only.

The following options for each service are available:

- Activate: activates the call waiting service.
- Deactivate: deactivates the call waiting service.
- Query Status: displays the status of the call waiting service.

8.5.5 Caller ID

This network service informs your Caller ID to the recipient when you call out.

You can set the following options for the Caller ID function as following.

- Set By Network: The network will decide whether to send or hide the Caller ID,
- Hide ID: If you do not want to send your phone number, select [Hide ID] menu.
- Send ID: It will send the Caller ID when you call out.

! Note: Some networks do not allow the user to change this setting.

8.5.6 Call Barring

This network service allows you to restrict your calls. Call barring can be set up in the following ways

- Outgoing Calls
 - All Calls: prohibits outgoing calls.
 - International Calls: prohibits outgoing International calls.
 - International Except Home: When abroad, you can only make a call to numbers within the current country and to your home country that is the country where your home network provider is located.
- Incoming Calls
 - All Calls: prohibits receiving all incoming calls.
 - When Roaming: prohibits receiving calls when you are using your phone outside of your home service area.
- Cancel All : Deactivated all call barring settings. You will be able to make and receive calls normally.
- Change Barring PW : You can set and change the call barring password obtained from your service provider using this option. You must enter the current password before you

can specify a new one.

8.5.7 Call Time Reminder

You can set the call time reminder as the following options

- Off
- Single
- Periodic

8.5.8 Call Time Display

You can set if you want the phone to display the call time or not.

8.5.9 Closed User Group

This menu allows you to fill out a closed user group, and send it to the network. However, this feature is depending on the network's availability.

8.6 Network Setup

These menu functions are network services. Please contact your service provider to check their availability and subscribe to them, if you wish. These settings might affect your monthly bill and your phone's network performances.

8.6.1 Network Selection

The Network Selection feature enables you to select automatically or manually the network used when roaming outside your home area.

- Automatic: You will be connected to the first available network when roaming
- Manual: The phone scans for the available network, and you can select the network manually,

8.6.2 Preferred Networks

You can set your preferred networks. The phone will list up PLMN list. The following options are available:

- Add From List
- Select from PLMN list and press [Ok] key and select priority. The priority is for among your preferred networks.
- Create New:
- MCC/MNC: input 5 digit numbers.

- Priority: select from Set the priority by pressing navigation keys to the right or left.
- Change Priority
- Set the priority by pressing navigation keys to the right or left.
- Delete
- Delete the selected preferred network from the list.

8.6.3 Band Selection

This menu allows you to select the service bandwidth as following:

- If you phone is 900/1800/1900

- 900
- 1800
- 1900
- Dual Band

- If you phone is 850/1800/1900

- 850
- 1800
- 1900
- 850 / 1900

8.6.4 GPRS Connection

Press [Change] soft key (left) to change the setting for the GPRS connection. It will switch and save the GPRS connection to set on:

- Always
- When Needed.

8.7 Security Setup

There are six types of security setting categories, and you can optimize security mode by choosing sub menus in “Security Setup” in “Settings” menu. These security settings will help you to keep privacy and to prevent other people from using the phone without your permission.

8.7.1 SIM Lock

When the SIM Lock feature is on, the phone only works with the current SIM. If you turn on the phone with uncertified SIM, the phone will ask the password. Once the correct password has entered, the phone shall work with uncertified SIM.

8.7.2 Phone Lock

When the Phone Lock feature is on, user must enter the password each time you turn on the phone. Making a call or operating the phone is not available without the password.

! Note : The code is provided with your phone and is preset from factory to default setting of '1122'.

8.7.3 Fixed Dial

When the Fixed Dial mode is enabled, the person using this phone can call to the phone numbers stored in the Fixed Dial List only. To make a call to the number not starting the numbers stored in Fixed Dial List, you must enter the PIN2 to disable Fixed Dial mode. If the SIM card does not have PIN2, this feature is not supported.

In the Fixed Dial Mode, you can use several useful functions as following.

- View and Edit: you can see and edit FDN entry after input PIN2.
- Add : you can add FDN entry after input PIN2.
- Delete : you can delete FDN entry after input PIN2.
- SMS : you can send SMS to the phone numbers starting with the numbers stored in FDN.
- Short Type : you can choose short type among Number / Name / Sequence.

8.7.4 Barred Dial

When the Barred Dial mode is enabled, the person using this phone cannot call to numbers in the barred dial list. To make a call to the barred number, you must enter the PIN2 to disable the barred dial mode. If the SIM card does not have PIN2, this feature is not supported.

8.7.5 Change Password

To change the password, input the current password, and then enter the new password.

8.8 User Profiles

You can use the sound setting features to customize various settings depending on environments.

- Meeting
- Outdoor
- Indoor
- Headset

! Note : Headset mode has no 'activate' menu because the activation of Headset mode is

automatically on when you plug the headset to your phone in.

Select each environment and select “Activate” to activate the setting or elect “Customize” to customize the sound and light settings on each environment.

This menu customizes the tones in the following setups.

- Volume

This option allows you to adjust the ringing volumes of keypad, call alert, alarm and message alert. You can set different volume levels for the Ring Tone and Key Tone.

- Incoming Call

This option allows you to select the required ring tone. You can set the ring tone from sound files downloaded from WAP download, MMS and EMS. You can also forward files from Phone Memory to this sound setting. Each time you select a tone, the phone will play it for a few seconds.

- Keypad Tone

You can select the tone that the keypad generates when you press a key by this menu

- Silent: the keys do not make any sound
- Click: the keys will make “click” sound.
- Tone: the keys will make “tone” sound. (DMTF Tone)
- Ding: the keys will make “ding” sound.
- Typewriter: the keys will make “typewriter” sound.
- Water-Drop: the keys will make “water-drop” sound.
- Human Voice Tone: the keys will make “human voice tone” sound.

- Message Tone

You can select message sound from 5 tones or silent. The phone will play the Message Tone you selected, when you receive a message.

- Alert Type

This option allows you to customize the alert type. This setup will control the alerts your phone might play. You can customize the alert types as following.

- Ring : the phone rings the ring tone selected with the [Tone Setup] option (8.1.1).
- Vibration Only : the phone vibrates without ringing.
- Vibra and Ring : the phone vibrates and rings simultaneously.
- Vibra then Ring: the phone vibrates first then rings.

- Light Only: the phone lights indicator LED only.

- Ring Type

You can set the ring type for playing the ring tones.

- Single: plays the ring tone once.
- Repeat: plays the ring tone in repeated matter.
- Ascending: plays the ring tone with ascending volume.

- Miscellaneous Sound Setting menu

- Power On

You can select power on sound from 2 tones or silent.

The phone will play the power on tone, when you power on the phone by pressing the End/Power key.

- Power Off

You can select power on sound from 2 tones or silent. The phone will play the Power Off tone, when you turn off the phone by pressing the End/Power key.

- Extra Tone

You can turn on or off the tone of following alerts.

- Warning
- Error
- Camp On
- Connect

- Intelligent Call Alert

Once this function is on, the phone number of other person who is calling to you is read in voice tone when you receive a call.

8.9 Restore Factory Settings

This feature would reset the telephone to the same settings as those configured at the factory. You will need to input password to restore factory settings.

! Note : The code is provided with your phone and is preset from factory to default setting of '1122'.

8.10 Sound Effect

This feature would be effected the equalizer when you play the mp3 file.

You can select the sound effect of following 8 options.

- Normal
- Bass
- Dance
- Classical
- Treble
- Party
- Pop
- Rock

9. Fun & Games



9.1 Games

This phone has three games for your enjoyment.


9.1.1 Copter



This game is arcade game.

You have to drive the copter and prevent it from crashing into the obstacle, ground, ceiling.

Menu Screen	Game Screen
	

* Key Description

Key	Actions
	Move the copter up (When you do not press this key, the copter go down to the ground automatically)

	Pause the game
	Quit the game and back to game menu







9.1.2 Puzzle





This game is puzzle game.

There are scattered images at the beginning of the game. You have to make them the original image.

Menu Screen	Game Screen
	

* Key Description


Key		Actions
Numeric keys	Navi-keys	
		Make a picture go upward
		Make a picture go downward
		Make a picture go leftward

		Make a picture go rightward
		Pause the game
		Quit the game and back to game menu





 9.1.3 Panda

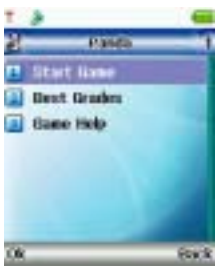






This game is arcade game.

Panda is alone in the bamboo forest. You have to control the Panda to attack bugs or prevent touch them. If the clock falls from the top, you have to get it to extend the playing time.

Menu Screen	Game Screen
	

* Key Description

Key		Actions
Numeric keys	Navi-keys	
		Move the Panda upward
		Move the Panda downward

		Move the Panda leftward
		Move the Panda rightward
		Attack bugs from the underside
		Pause the game
		Quit the game and back to game menu

9.1.4 Game Setting

You can select the game setting. This will be applied to the game plays.

Press the left or right navigation key to select the setting and press the [Ok] soft key to save the setting.

- 1) Game Audio (On/Off): allows you to set the audio sound on or off while you are playing a game.
- 2) Game Vibration (On/Off): allows you to set the vibration on or off while you are playing a game.

9.2 Stopwatch

This is a tool to measure time for various sports, running, swimming races, or car races.

9.2.1 Typical Stopwatch

There are Split Timing and Lap Timing stopwatch functions in this typical stopwatch menu.

9.2.1.1 Split Timing



Split Timing is useful for measuring each player's record from start. The timing will be recorded

earliest to latest.

- Press [Split] to measure the timing and press again for next timing, and so on.
- Press [Stop] when you are done measuring the timing. If you want continue, press the [Resume] soft key. You can record up to 20 measurements per a record.
- It will ask if you want to save. Press [Yes] to save.
- Edit the name for the record. Press [Option] and select “Done” to save.
- You can view the record by selecting 11.5.1.3 View Record and press the [Option] soft key (left) and select “View.”

9.2.1.2 Lap Timing



You can use the Lap Timing function to measure each lap record.

- Press [Lap] to measure the timing and press again for next lap timing, and so on.
- Press [Stop] when you are done measuring the timing. If you want continue, press the [Resume] soft key. Repeat this step for the other stopwatches. You can record up to 20 measurements per a record.
- It will ask if you want to save. Press [Yes] to save.
- Edit the name for the record. Press [Option] and select “Done” to save.
- You can view the record by selecting 11.5.1.3 View Record and press the [Option] soft key (left) and select “View.”

9.2.1.3 View Record

When you save the timing records from the Split Timing and the Lap Timing, it will be saved and listed in this menu.

Press the [Option] soft key and select from the following options:

- View: allows you to view the timing record.
- ⇒ Press the up and down navigation keys to scroll among the records.
- Delete: allows you to delete the selected record.
- Delete All: allows you to delete all records.

9.2.2 nWay Stopwatch



You can use 4-way navigation keys for measuring times for each direction.

When you press a navigation key, the direction stopwatch will start timing, and other direction stopwatch will pause the timing. When you press the paused direction's navigation key, the stopwatch will resume timing.

Shortcuts

This menu allows you to set 10 shortcuts menu list.

Press the [Edit] soft key (left) to edit the dedicated menu for the shortcut numbers.

* Default Shortcut Menus:

- Search Entry
- Inbox
- Write Message
- Missed Calls
- Received Calls
- Tone Setup
- Alarm
- Alert Type
- Call Divert
- User Profiles

9.3 Image Editor

This menu useful for the users to define the personal style Wallpaper, screen saver and personal pictures can associate. Maximum 5 pictures can be added.

9.4 Health

With the Health menu, you can check your health.


9.4.1 BMI



BMI is the Body Mass Index. BMI is an index for your health, keeping in the Normal range is recommended for your health. Low BMI and high BMI both are critical for the health.

	Thin	Normal	Fat
Female	~ 18	18 ~ 23	23 ~
Male	~ 20	20 ~ 25	25 ~

 9.4.2 Menstrual

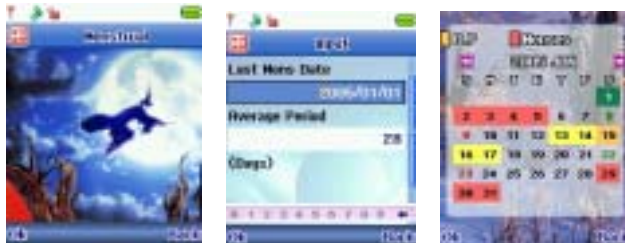

Input the information as following:

1. Last Mens Date
2. Average Period

- Press the [Ok] soft key to get the menstrual calendar.
- The calendar will display P.P and Menses periods as following.
- P.P (yellow color): indicates for the possible periods to get pregnant.
- Menses (orange color): indicates your menstrual periods.
- Press the side volume keys to scroll through months, and press the navigation keys to navigate through dates.

When you press the [Ok] soft key on the selected date, it will calculate the possibility of pregnancy.

B. Trouble Shooting

If you meet a trouble on your phone operation, please check the followings.

These checks enable you to save the time and expense due to the unnecessary after-service.

1. When Enter PIN appears at the power-up.

The PIN check is currently enabled.

You must enter the PIN supplied together with your SIM card. You can disable the PIN check if you want, please see Security Setting menu in section F.

2. When Insert SIM screen appears at the power-up.

Please check that your SIM card is inserted adequately.

3. When Enter Lock Code appears at the power-up.

Your phone is phone locked.

You must enter the Lock Code supplied together with your phone.

4. No Service appears.

You probably are in the area out of the coverage of a GSM/DCS network.

5. If any tone is not generated when you press a keypad.

You need to check the Silence Mode setting.

You need to check the Type and Volume option of Key Tone menu.

You need to check Profiles menu.

6. If an audible alert is not made when a call is received.

You need to check the Silence Mode setting.

You need to check the Type and Volume option of SMS Alert Tone menu.

You need to check Profiles menu.

7. If an audible alert is not made when an alarm is expired.

You need to check the Silence Mode setting.

8. If an outgoing call is not made.

You have probably set an outgoing calls barring option. You need to check Call Barring menu.

9. If an incoming call is not made.

You have probably set an incoming calls barring option. You need to check Call Barring menu.

10. If an outgoing SMS message is not sent.

You need to check the Message Centre option in Message Setup menu.

11. If all audible key tones are muted and all audible alerts are changed to vibrator alert.

You need to check the Silence Mode setting.

By just pressing and holding [VOLUME-CENTRE] on the idle screen, you can escape or enter the mode.

12. If some menus relevant to the sound are not visible on the Sound Setting menu.

You need to check Silence Mode setting.

By just pressing and holding [VOLUME-CENTRE] on the idle screen, you can escape or enter the mode.

C. Safety Information

For the efficient and safe operation of your phone, observe these manual-lines.

1. Everyday Use of Your Phone

For normal operating position, hold your phone as you would any other telephone, with the antenna pointed up and over your shoulder.

Do not touch the antenna unnecessarily when your phone is in use, as this will affect call quality and may cause the phone to operate at a higher power level than otherwise needed.

As with any other radio transmitting equipment, you are advised that for the satisfactory operation of your phone and for your own safety, you should use your phone only in the normal operating position.

2. Using Your Phone in a Vehicle

Safety comes first, and is the ultimate responsibility of the driver. Please:

Give full attention to driving – driving safely is your first responsibility.

Use Hands-free Kit, if available.

If you have those kits make sure it is done pre-programmed numbers where possible, and keeping calls brief and to a minimum.

If you don't have a Hands-free Kit, pull off the road and park your vehicle before making or answering a call in driving conditions so require.

3. Non-ionizing Radiation (exposure to Radio Frequency Signals)

Your phone is a low power radio transmitter and receiver. When it is on, it receives and also sends the radio frequency (RF) signals. Most modern electronic equipment is shielded from RF signals. However, certain electronic equipment may not be shielded against the RF signals from your mobile phone. RF

signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Consult your vehicle manufacturer and the manufacturer of any equipment that has been added to the vehicle.

4. Pacemakers

The Health industry Manufacturers Association recommends that a minimum separation of six inches be maintained between a mobile phone and a pacemaker to avoid potential interference with the pacemaker. Users with pacemakers:

Always keep your phone at least 20 cm (6inches) from your pacemakers when the phone is switched on.

Do not carry your phone in your breast pocket.

Use the ear opposite the pacemakers to minimize the potential for interference.

Switch off your phone immediately if you suspect that interference is being caused.

5. Hearing Aids

Some mobile phones, including your mobile phone, may interfere with certain hearing aids. In the event of such interference you may consult the hearing manufacturer to discuss alternatives.

6. Other Medical Devices

If you use any other medical devices, please consult a physician or the manufacturer of the medical devices to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Always check the regulations of the healthcare facilities, which generally request that all mobiles are switched off on entry.

7. Operating Environment

Remember to follow any special regulations in force in any area, and always turn off your phone wherever it is forbidden to use it, or when it may cause interference or danger.

8. Aircraft Safety

FCC regulations prohibit using your phone while in the air. Switch off your phone before boarding an aircraft.

9. Explosive Atmospheres and Materials

Turn your phone off and do not remove the battery when in any area with a potential explosive atmosphere and obey all signs and instructions. You must observe restrictions on the use of radio equipment in fuel depots; below deck on boats; fuel or chemical transfer or storage facilities; areas

where the air contains chemicals or particles, such as grain, dust, or metal powders; areas with signs about explosive atmospheres or where blasting operations are in progress; any other areas where you would normally be advised to turn off your vehicle engines.

10. For Vehicle Equipped with an Air Bag

All air bags inflate with great force. Do not place objects, including both installed and portable wireless equipment, in the area over the air bag or in the air bag development area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

11. Battery Charging

Do not charge the phone without the battery in place.

D. Glossary

Cell Broadcast

This network service allows you to receive the broadcasted text messages on various topics such as weather, traffic, local district code, local hospitals, taxis or pharmacy in the area where you are.

CUG (Closed User Group)

This network service allows the restriction of calls to and from a selected user group.

DTMF (Dial Tone Multi Frequency)

Codes sent as tone signals. Used for telephone banking, for accessing an answering machine, etc.

GSM

Global System for Mobile communication. This is a digital mobile telecommunication system that is used in most of the world.

GPRS

This is an abbreviation of General Packet Radio Service which enables a packet data communication with a high-speed.

Network Service Operator

To be able to use your phone, you need a subscription to a network. You get this subscription from a network operator, together with a SIM card that you need to use with your phone.

MMS (Multimedia Message Service)

This is an abbreviation of Multimedia Messages Service. The data including text, image, sound and movie can be sent with this service.

MP3

MP3 (MPEG-1 Audio Layer-3) is a standard technology and format for compression a sound sequence into a very small file (about one-twelfth the size of the original file) while preserving the original level of

sound quality when it is played

PIN (Personal Identification Number)

The code is to establish authorization for access to certain functions or information in your SIM card. The PIN code comes with your subscription. It may be a four to eight digit number and can be changed as required.

PIN2 (Personal Identification Number 2)

The code is an authorization code to access certain special field in your SIM card. The PIN2 code does not come with your subscription in some country.

Roaming

Use of your phone when you are outside your subscription network area.

SIM (Subscriber Identity Module)

It contains subscriber details, security information and memory for a personal directory of numbers.

SMS (Short Message Service)

Messages to be sent and received via the network service operator's message centre to your mobile phone. To use this service, it must be supported from your network.

WAP (Wireless Application Protocol)

A standard specifically created for mobile communications devices and gives fast and easy access to Internet information and services.

Safety Information

1 . SAFETY INFORMATION FOR FIXED WIRELESS TERMINALS

.POTE NTIALLY EXPLOSIVE ATMOSPHERES

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cauls e an explosion or fire resulting in bodily injury or even death.

INTERFERENCE TO MEDICAL DIVICES

Certain electronic equipment may be shielded against RF signal from you wireless phone. (pacemakers, Hearing Aids, and so on) Turn your phone OFF in health c are facilities when any regulations posted in these areas instruct you to do so. RF signals may affect improperly installed or inadequately shielded electronic system in motor vehicles.

.EXPOSURE TO RF ENERGY

Use only the supplied or an approved replacement antenna. Do not touch the antenna unnecessarily when the phone is in use. Do not move the antenna close to, or couching any exposed part of the body when making a call.

SAFETY INFORMATION FOR RF EXPOSURE

Body worn operation

This device was tested for typical body-worn operations with the back of the phone kept 15 mm. from the body. To maintain compliance with FCC RF exposure requirements, use only belt-clips, holsters or similar accessories that maintain a 15 mm. separation distance between the user's body and the back of the phone, including the antenna. The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

SAR INFORMATION

THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg. *

Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output. Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 0.35 W/Kg and when worn on the body, as described in this user guide, is 0.224 W/Kg. (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure. The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on **FCC ID: UTA8SLIM11B**.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.wow-com.com>. * In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

U.S.A.

U.S.FEDERAL COMMUNICATIONS COMMISSION **RADIO FREQUENCY INTERFERENCE STATEMENT**

INFORMATION TO THE USER

NOTE : This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation This equipment generates, uses, and can radiate radio frequency energy and, if Not installed and used in accordance with the instructions, may cause harmful Interference to radio communications. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *- Reorient or relocate the receiving antenna.
- . Increase the separation between the equipment and receiver.
- *- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- *- Consult the dealer or an experienced radio/TV technician for assistance.

Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables.

FCC Compliance Information

This device complies with Part 15 of FCC Rules.
Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received.
Including interference that may cause undesired operation.