

1.4" Diagonal Display
Digital Picture Album
PF140

Quick Start Operation Manual



Made in China

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Shielded cables must be used with this unit to ensure compliance with the Class FCC limits.

- b) Use the “**Photo Frame**” option to select if you would like the unit to automatically scroll through the picture list (auto scroll) or if you would like to control the changing of pictures (manual scroll). While in the “**Photo Frame**” menu, use the “**Next**” key to switch between choices and hold “**Confirm**” for 2 seconds to make a selection.
- c) Use the “**Auto sleep**” option to set the length of inactivity time before the unit switches to sleep mode. This is done to conserve power, and the default setting is one minute. While in sleep mode, the unit can be turned on by holding the “**Confirm**” key. Use the same procedure as above to make your selection.

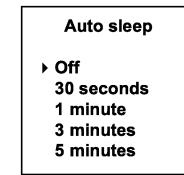

⚠️ WARNING! Turning off auto sleep is not recommended, as the battery will run down after a few hours of continuous operation.

⚠️ WARNING! Read this User Guide carefully to ensure proper use of the product and to avoid any danger or physical damage.

- Keep the product and all its parts and accessories out of the reach of small children.
- Do not expose product to water or other liquids.
- Do not leave the unit unattended while it is in use. Always unplug the AC Power Adapter from the electrical outlet when the unit is not in use.
- Do not place this product in a built-in installation such as a bookcase or rack unless proper ventilation is provided or unless advised in the manufacturer's instructions.
- Only operate this product from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
- Do not open the case; there are no user-serviceable parts inside. Opening the case will void your warranty.
- Do not use attachments not recommended or sold by the product manufacturer.
- Never operate this product if it is not working properly, has been dropped, damaged, or exposed to water or other liquids. Do not attempt to examine or repair this product yourself.
- Follow the directions for uploading/downloading data. We are not responsible for lost data due to incorrect installation.

PF 140 Digital Picture Album

Thank you for purchasing the PF140. Your PF140 is designed to allow quick and easy viewing of photographs taken on your digital camera. Please read this Instruction Manual thoroughly to gain the most enjoyment and usage from your PF140.


1. Specifications

Support Format:	JPEG/BMP
Display:	1.4" LCD Screen
Storage Photos:	Up to 59 Pictures
Connected Jack:	USB 1.1
Power:	Built in 3.7 V Lithium or USB Cable Charger

2. Packing List

Digital Picture Unit	1 PC
Charger	1 PC
Software CD	1 PC
User Manual	1 PC
USB Cable	1 PC

3. Product Diagram

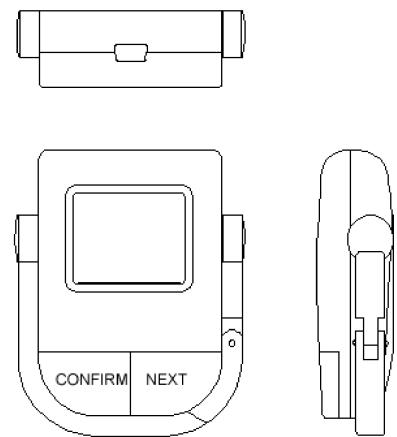


- d) When the alarm is turned on, the ALARM TONE will sound for 1 minute and the  icon will flash. Press any key to stop the alarm tone and the  icon will stop flashing.

9. Using the Digital Photo Album Features

GENERAL INFO:


- a) While in ALARM mode, press the "Confirm" key once to activate the Photo Album. If no photos are stored on the device, a "NO PHOTO" warning will display.

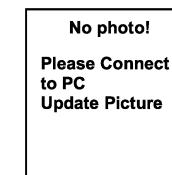

- b) If the unit is set to auto scroll, it will cycle through the available pictures, changing every ten seconds. If manual scroll is set, use the "Next" key to move to the next photo.
- c) If the battery is low, the screen will show a low battery icon in the bottom right corner.

SETUP:

- a) To enter SETUP mode, press the "Confirm" key once while viewing photos. In setup mode, you can edit the photo frame and auto sleep settings. Use the "Next" key to switch between choices, and press and hold "Confirm" for 2 seconds to make a selection. At any time, press the "Confirm" key once to exit.

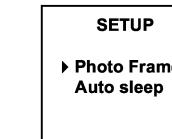

7. Setting the Date and Time

- a) While in CLOCK mode, press and hold "Confirm" for 2 seconds to edit settings. The year will flash to signify editing mode. Press the "Next" key to move between years (2000 to 2099), and press the "Confirm" key when the correct year displays.
- b) After setting the year, the month will flash. To select the MONTH, press the "Next" button until the correct month displays, then press the "Confirm" key to confirm the month.
- c) To set the DAY, HOUR and MINUTE, follow the same procedure as setting the month or year.

8. Setting the Alarm

- a) While in the CLOCK mode, press "Confirm" once to enter ALARM mode.



- b) To set the ALARM, press and hold the "Confirm" button for 2 seconds. The hour digits and the AM/PM mark will flash. Press the "Next" button to select the HOUR. Press "Confirm" to confirm the hour. Press the "Next" key to select the MINUTE. Follow the same procedure as setting the hour to set the minutes.
- c) To turn the alarm ON, press the "Next" key. The  icon will be displayed in the top right corner when the alarm function is active. Press the "Next" key again to turn OFF the alarm. The  icon will not be displayed when the alarm function is turned off.

4. General Use

- 1) Press and hold "Confirm" to turn the unit on. If there is no activity for a few minutes (refer to the Automatic power off setting), the unit will automatically turn off. Press and hold "Confirm" to turn on the unit again.
- 2) The "Next" button is used to cycle through menu options and displayed pictures.

5. Installing the Download Software

Photo Viewer V3.00fs supports the following operating systems :

Windows Vista/XP/2000

- a) Insert the disk into your CD Drive. A pop-up box will appear, press "Next" to begin installation.
- b) Choose the desired path for the program to copy to. The required and available hard disk space will display for your reference. Select "Next" to continue.
- c) Click "Start" to install the Photo Viewer.
- d) When the installation is complete, you can choose to launch the program immediately by selecting the "Launch Photo Viewer V3.00fs" box. After deciding, click "Next".
- e) Then click "Exit" to end the installation.

 **WARNING!** Do not have the PF140 connected to the PC while installing the download software.


6. Getting Started

CHARGING THE PICTURE ALBUM:

- a) The viewer should be charged if either the low battery icon displays or if the unit does not turn on when asked. Connect the USB cable to the computer and then to the frame. The Digital Picture Album will display the following screen:




- b) Use the right button to toggle between choices and highlight “**USB Charge**”. Press the left button to confirm, and the screen will update and mirror the example below. During this time, you may access all modes except updating and editing photos.

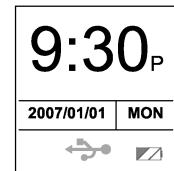


UPDATING / EDITING PHOTOS:

- a) To update your photos select “**USB Update**” and press Confirm. The computer will automatically search for the viewer, and the USB Logo will display on the digital frame.

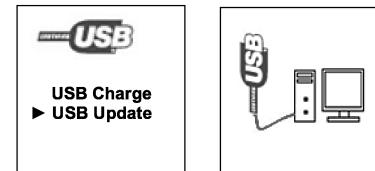

- b) Open the “**Photo Viewer**” program. On the left-half of the screen are options to edit/load pictures and on the right-half are the options for selecting/downloading pictures. Below is a picture of what the screen will look like:

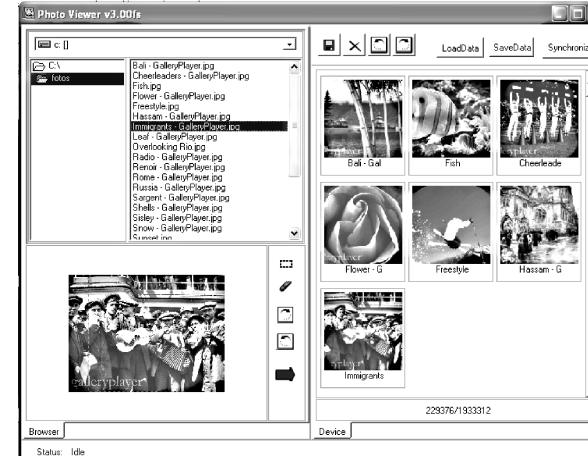

- c) Choose the directory where your desired pictures are and select the specific photos you want to download to the photo frame. You can rotate, delete and edit selected pictures and save them using the viewer software.
- d) After the photos are added to the download list, click “**Synchronize**” to download the photos to the Photo Viewer.

 **WARNING!** Do not disconnect the USB cable while downloading data; this will damage the digital photo frame.

- e) When the download is complete, disconnect the USB cable and enjoy your pictures on the Digital Picture Album.