## **Operation Description**

Adjust RV, RW1, RW2, the RF output power can be changed the value. View to adjust CW1, CW2, CW3, LW1, LW2, the filter frequency can be changed transmitter. The Power is by 2\*AAA battery or DC 12V by the charger.