

**Microphone sans fil avec enceinte et lumières  
Wireless Microphone with Speaker and lights**



**Mode d'emploi – Instruction manual**

**LEXIBOOK®**

**MIC200series**



## UNPACKING YOUR DEVICE

When unpacking, ensure that the following elements are included:

1 x Wireless microphone with speaker and lights / 1 x micro USB cable / 1 x Instruction manual

**WARNING:** All packaging materials, such as tape, plastic sheets, wire ties and tags are not part of this toy and should be discarded for your child's safety.

## QUICK PRESENTATION

Please refer to the diagram p.2.

1. Microphone
2. Echo button
3. Mic volume control
4. Power and lights control button
5. Speaker
6. LED light
7. Micro USB charging port
8. TF card/ micro memory card slot
9. Music control knob (play/pause, previous/next, volume up/down)

## CHARGING THE DEVICE

The Wireless microphone with speaker and lights operates with the micro USB charging cable (included) or with a USB type adaptor (not included) 5V  $\overline{=}$ , 500mA.

### Power supply

1. Check that the unit is switched off.
2. Insert the small end of the micro USB cable (included) into the micro USB charging port (7).
3. Connect the other end of the micro USB cable into the USB port of your powered computer or USB type power adaptor (not included) and plug it into a wall socket. The indicator near the micro USB charging port lights up in red when the device is charging.
4. Once loading complete the LED light will turn off.

**Notes:** Please note that the micro USB cable can be used for battery charging only and not for data transfer. The micro USB cable can be used for charging during playback.

**WARNING:**

- Risk of explosion if battery is incorrectly replaced. Please only replace it with an identical or an equivalent battery. (For Service instructions only; battery is not intended to be replaced by the USER).
- The battery should not be exposed to high temperatures, such as sunlight, fire or anything similar.

**Safety Instructions**

- Keep a minimum distance around the device for sufficient ventilation.
- The openings should never be blocked by newspapers, curtains, tablecloths, etc.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- Device for use in a temperate and/or tropical climate.
- Batteries should be disposed properly. Take them to the collection container in order to protect the environment.

**TURNING THE DEVICE ON AND OFF**

1. To turn on the Wireless microphone, press and hold the power control (4). Once powered on you will hear a signal tone.
2. To turn off the device press and hold the same button until you hear a signal tone.

**WARNING:** Significant electromagnetic interference or electrostatic discharges may cause the device to malfunction or lose data. If the device is not functioning correctly, switch it off and then on again, or unplug the USB cable.

**BLUETOOTH® PAIRING**

The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Lexibook® is under license. Other trademarks and trade names are those of their respective owners.

© 2017 Bluetooth SIG, Inc.

1. Activate the Bluetooth® function on your personal device (smartphone, MP3 player, etc.). Please refer to your device's instruction manual on how to activate this function.
2. Turn the wireless microphone on to activate auto-detection of a nearby device. The blue indicator will start blinking.
3. Confirm pairing or select the Bluetooth® name "MIC200" to connect your player to the speaker.
4. If pairing is successful, a "Beep" sound will come out from the speaker and the blue indicator will glow steadily. You can enjoy music via the Bluetooth® device now.
5. To stop the connection with the speaker, press the button on your Bluetooth device.

**Notes:**

- When turned on, the speaker automatically searches for a device that it has previously synchronized with.
- If your Bluetooth® device requires a password, the default password is 0000.

## DEVICE FUNCTIONS

### Microphone functions

#### Volume

Slide the mic volume control (3) from bottom to top to increase the volume of your wireless microphone (1). To mute the microphone, slide the volume button to the bottom.

#### Echo function

Slide the echo button (2) from bottom to top to increase the echo effect. To remove the echo effect from the mic, slide the echo button to the bottom.

### Speaker functions

#### Memory card

To play audio files from your TF card/micro SD, insert it into the corresponding card slot (8). The music will start playing automatically.

**Note:** If you insert the memory card while the speaker is paired with an audio player, the device will automatically switch to memory card function.

#### Play/pause

Press shortly the middle of the music control knob (9) to start playing or resume audio files from your synchronized device or memory card. The blue LED will blink.

Press the same knob to pause playback. The blue LED will glow steadily.

#### Previous/Next

Push the music control knob downward shortly to play the next song.

Push the music control knob upward shortly to play the previous song.

#### Volume

Push and hold the music control knob downward to increase the volume. Push and hold the music control knob upward to decrease the volume.

**Note:** The device beeps when volume reaches maximum level.

**CAUTION:** Too high volume can damage your hearing. For this reason, please turn the volume down.

**Notes:** Some music players do not fully support Bluetooth® audio controls. Play/pause, previous and next buttons on the Bluetooth® speaker may not respond. The music player may also turn off.

To get the best control experience in the said player, use the on-screen track controls of your music player rather than those on the microphone.

**Light effects**

1. Press the lights control button (4) shortly to turn on the light around the speaker.
2. Press the same button again each time you wish to change the colour, select the automatic change of colours or a light effect as per:

Level 1: red;

Level 2: dark blue;

Level 3: green;

Level 4: pink;

Level 5: light blue;

Level 6: automatic change of colours;

Level 7: lighting intensity based on the music rhythm.

**« Red Karaoke » Application**

The Wireless microphone with speaker and lights is compatible with the Red Karaoke mobile application.

1. Download the Red Karaoke app for free on your iOS<sup>TM</sup> or Android<sup>TM</sup> smartphone:  
<https://redkaraoke.com/rkapp>
2. Connect your Smartphone in Bluetooth to your Microphone & Choose your favorite song among 70,000 karaoke titles!
3. Sing with the mic and record your performance using your smartphone camera
4. Edit your video and share it with your family and friends!

**TROUBLESHOOTING**

Problem	Solution
The Bluetooth® device and speaker are not pairing	Ensure the Bluetooth® speaker is charged and power switch is on. Ensure the Bluetooth® function on the Bluetooth® device is activated.
Pairing lost	Ensure that the Bluetooth® feature on the device has not been deactivated. It may be necessary to repeat the pairing steps again. Ensure the device is within 10 meters (32 feet) of the Bluetooth® speaker. Ensure there are no obstacles.
No sound	Ensure the volume is not too low or on mute. Ensure the song is playing. Ensure the Bluetooth® device is correctly paired.

**SPECIFICATIONS**

- Bluetooth® version 4.2
- Effective distance: Up to 10 meters (32 feet)
- Output Power: 5W
- Playing time: Around 3 hours
- Charging time: Around 2.5 hours
- Battery: Lithium battery 3.7V, 1800mAh
- Product dimension: ø 80 x 80 x (height) 245mm

**SIMPLIFIED EU DECLARATION OF CONFORMITY**

We, Lexibook® S.A.  
2, avenue de Scandinavie  
91953 Courtaboeuf Cedex – France

Kind of product: Wireless microphone with speaker and lights  
Type designation: MIC200series

Hereby, Lexibook Limited declares that the radio equipment type MIC200series is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address:  
[http://www.lexibook.com/doc/mic200/mic200\\_1.pdf](http://www.lexibook.com/doc/mic200/mic200_1.pdf)



Yiu Wai Man  
Product Development Manager  
03/04/2017 (Hong Kong)



## MAINTENANCE

The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use a soft, clean cloth moistened with plain, lukewarm water to clean the exterior of the unit. Use caution when cleaning and wiping the plastic parts.

## WARRANTY

This product is covered by our 2 years warranty program, except for the integrated battery which is covered by a 6-month warranty.

For any claim under the warranty or after sale service, please contact your distributor and present a valid proof of purchase. Our warranty covers any manufacturing material and workmanship defect, with the exception of any deterioration arising from the non-observance of the instruction manual or from any careless action implemented on this item (such as dismantling, exposition to heat and humidity, etc.). It is recommended to keep the packaging for any further reference.

In a bid to keep improving our services, we could implement modification on the colours and the details of the product shown on the packaging.

**NOTE:** Please keep this instruction manual, it contains important information.

Reference: MIC200series  
Designed and developed in Europe – Made in China  
© Lexibook®

United Kingdom & Ireland  
For after-sales service, please contact our teams: 0808 1003015

[www.lexibook.com](http://www.lexibook.com)



This product is not a toy.



### Environmental Protection

Unwanted electrical appliances can be recycled and should not be discarded along with regular household waste! Please actively support the conservation of resources and help protect the environment by returning this appliance to a collection centre (if available).





**Correct disposal of batteries in this product**

(Applicable in countries with separate collection systems)

This symbol means that the product contains a built-in rechargeable battery covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

All batteries should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

The correct disposal of your old batteries will help to prevent potential negative consequences for the environment, animal and human health.

We strongly advise you to take your product to an official collection point or service center to have a professional remove the rechargeable battery.

Inform yourself about the local separate collection system for electrical and electronic products and rechargeable batteries. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste.

For more detailed information about disposal of your old batteries, please contact your city office or waste disposal service center.

## YOUR OPINION MATTERS / VOTRE AVIS COMPTE

Help us make products better than ever! Please fill out the following form in English or in French, and return it to the following address / Adresse-nous à rendre nos produits encore meilleurs! Merci de bien vouloir remplir ce coupon en français ou en anglais et de nous le retourner à l'adresse suivante

LEXIBOOK S.A.  
Mon avis compte  
2, avenue de Scandinavie,  
91953 Courtabouff Cedex  
FRANCE

Reference of product / Référence du produit : **MIC200series**

Name of product / Nom du produit :

Date of purchase / Date de l'achat : \_\_\_\_/\_\_\_\_/\_\_\_\_

Store / Enseigne : \_\_\_\_\_

Birth Date of the user / Date de naissance de l'utilisateur de ce produit : \_\_\_\_/\_\_\_\_/\_\_\_\_

First name/Prénom : \_\_\_\_\_ Last name/Nom de famille : \_\_\_\_\_

Address/Adresse : \_\_\_\_\_

Zip code/Code Postal : \_\_\_\_\_ Country/Pays : \_\_\_\_\_ City/Ville : \_\_\_\_\_

Phone/Téléphone : \_\_\_\_\_ Email : \_\_\_\_\_

What is your overall impression of the product? / Vous trouvez le produit globalement :

Very satisfactory/Trés satisfaisant

Satisfactory/Satisfaisant

Average/Moyen

Disappointing/Décevant

Very disappointing/Très décevant

Please feel free to leave your comments here / Vous pouvez à présent utiliser l'espace suivant pour nous donner vos remarques :

Find all our new products on / Retrouvez toute notre actualité sur: <http://www.lexibook.com>

Conformément aux articles 34 et suivants de la loi « Informatique et Libertés » du 6 janvier 1978, vous disposez d'un droit d'accès, de modification, de rectification et de suppression des données qui vous concernent. Vous pouvez exercer sur simple demande à notre adresse. Si vous ne souhaitez pas que ces données soient utilisées à des fins de prospection commerciale, veuillez cocher ici :



**LEXIBOOK S.A.**  
**Mon avis compte**  
**2, avenue de Scandinavie**  
**91953 Courtaboeuf Cedex**  
**FRANCE**

Affranchir  
ici