


ILLUSTRATIONS:

- A. ON/OFF Volume control
- B. Push to talk button
- C. Morse code key

One 9V battery per walkie talkie required.

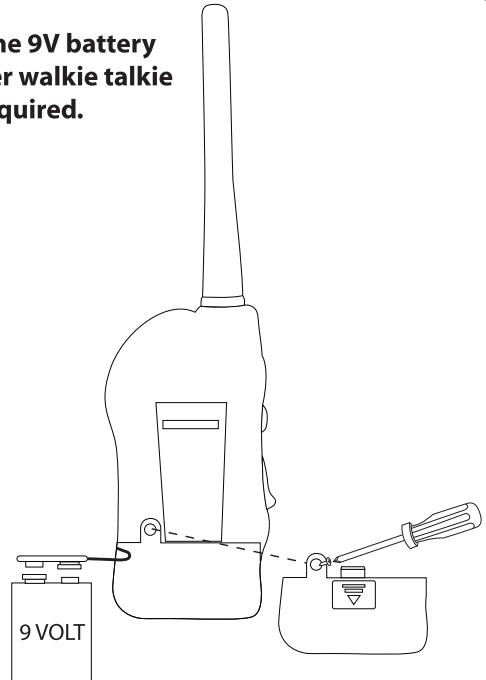

HOW TO PLAY

- 1) Insert 9V battery as shown into battery compartment of each unit.
- 2) Turn ON/OFF/VOLUME **A** control knob of both units to desired sound levels.
Your walkie talkies are now ready to operate.
- 3) Press the "PUSH TO TALK" **B** button for transmitting message.
- 4) Release the "PUSH TO TALK" **B** button for receiving message.
- 5) When transmitting, speak clearly and hold the set about 3 inches from your mouth.
- 6) Best transmission and reception are obtained when the antenna is held in a vertical position.
- 7) In the event of interference caused by other radio signals in the vicinity, move to a different location.
- 8) When the sound becomes weak, it is time to change the batteries.

HOW TO USE MORSE CODE FUNCTION

- 1) For transmitting a signal, turn the "ON-OFF" **A** switch to "ON" position.
- 2) While pushing and holding the "PUSH TO TALK" **B** button, pressing the "MORSE CODE KEY" **C** intermittently.

WARNING

- Your communication system has been fully adjusted prior to shipment from the factory. Be sure not to touch internal components other than replacing batteries.
- The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.
- Keep your set in a dry, clean place and away from electrical appliances.

ATTENTION !!! How to use batteries!

Batteries are to be inserted with the correct polarity. Positive(+) and negative(-). Non-rechargeable batteries are not to be recharged.

Do not throw batteries into a fire.

Do not use rechargeable batteries.

Use only the battery type as recommended.

Do not short-circuit the battery contacts.

FCC ID: UVHGC615069308

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.