


1. External Photograph of EUT

Brand Name: Zebra / Model Name: EC55BK

Sample 1

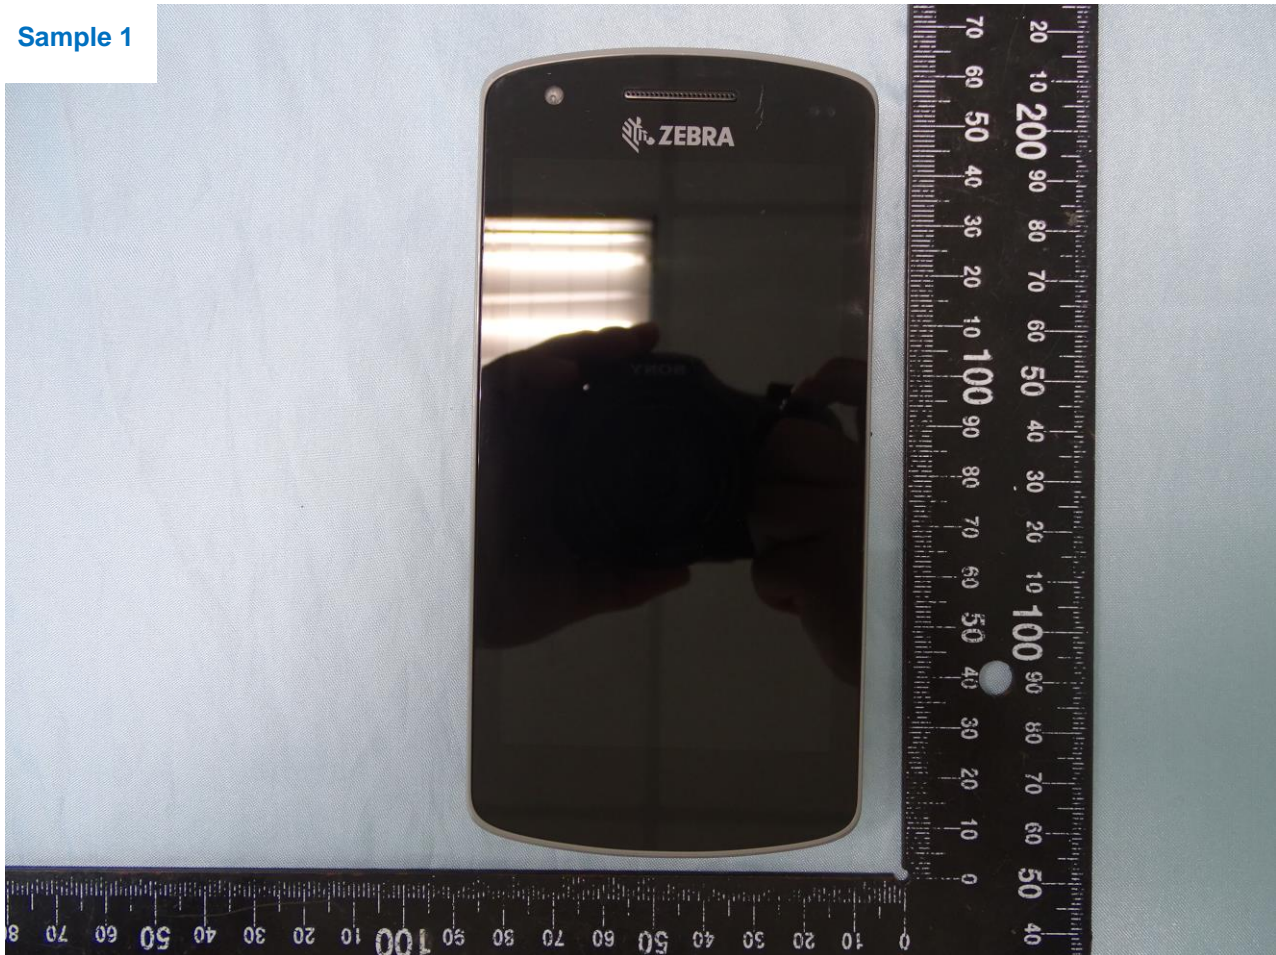

Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK




Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK

Sample 2

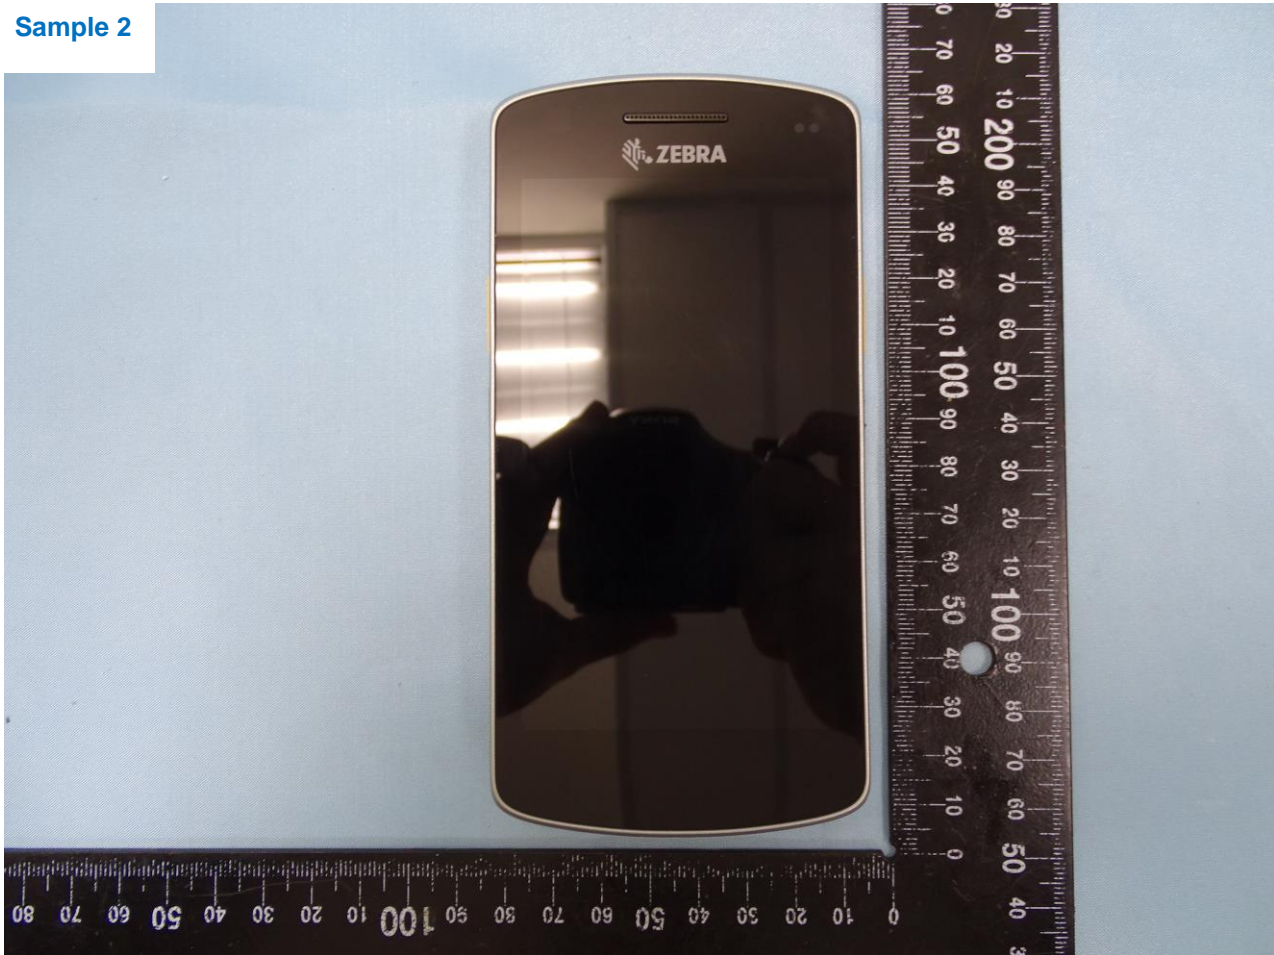

Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK




Brand Name: Zebra / Model Name: EC55BK





Brand Name: Zebra / Model Name: EC55BK

Sample 3

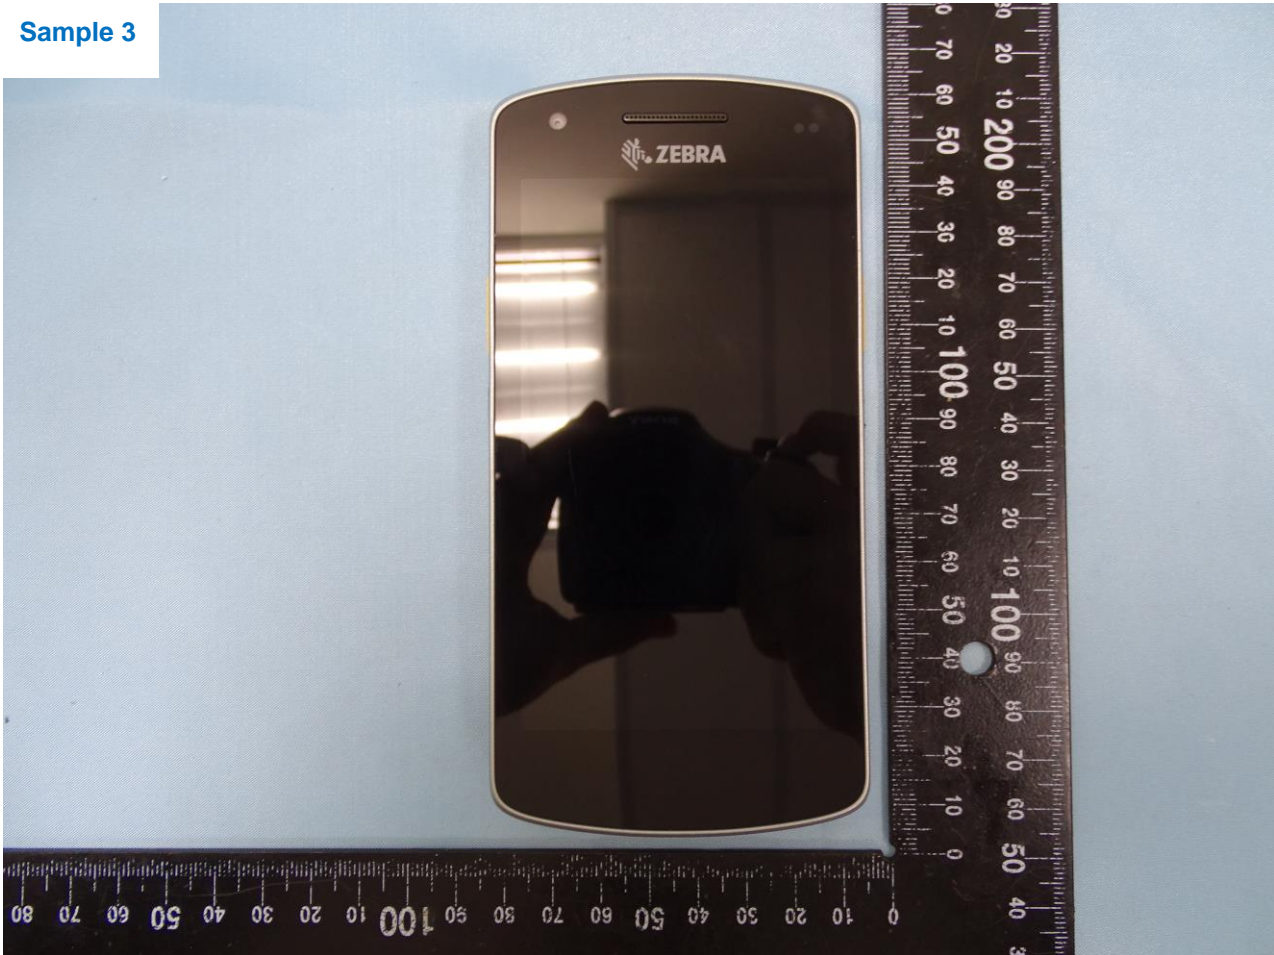

Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK





2. Photograph of Accessory

Brand Name: Zebra / Model Name: EC55BK

Specification of Accessory		
AC Adapter	Brand Name	Zebra
	Part Number	PWR-WUA5V15W0US
USB TYPE-C to TYPE-C cable	Brand Name	Zebra
	Part Number	CBL-EC5X-USBC3A-01
Battery 1	Brand Name	Zebra
	Part Number	BT-000424-00
Battery 2	Brand Name	Zebra
	Part Number	BT-000424-08
Earphone 1	Brand Name	Zebra
	Part Number	HDST-35MM-PTVP-01
Earphone 2	Brand Name	Zebra
	Part Number	HS2100-OTH
USB TYPE C to 3.5mm audio connector	Brand Name	Symbol
	Part Number	ADP-USBC-35MM1-01
3.5mm Jack 43"(1.1m) Standard Cable	Brand Name	Zebra
	Part Number	CBL-HS2100-3MS1-01
Trigger Handle	Brand Name	Zebra
	Part Number	TRG-EC5X-SNP1-01
Soft Holster	Brand Name	Zebra
	Part Number	SG-EC5X-HLSTR1-01
Protective Boot	Brand Name	Zebra
	Part Number	SG-EC5X-BOOT1-01

Remark: For accessories equipped with this EUT, please refer to the following photos.

Brand Name: Zebra / Model Name: EC55BK



Brand Name: Zebra / Model Name: EC55BK

AC Adapter



Brand Name: Zebra / Model Name: EC55BK

Battery 1



Brand Name: Zebra / Model Name: EC55BK

Battery 2

