

1. External Photograph of EUT

Brand Name: Zebra; Model Name: ET40AB





Brand Name: Zebra; Model Name: ET40AB





Brand Name: Zebra; Model Name: ET40AB





Brand Name: Zebra; Model Name: ET40AB





Brand Name: Zebra; Model Name: ET40AB





Brand Name: Zebra; Model Name: ET40AB





2. Photograph of Accessory

Brand Name: Zebra; Model Name: ET40AB

List of Accessory:

Specification of Accessory				
Battery	Brand Name	Zebra	Model Number	BT-000456

Supported Unit Used in Test Configuration and System				
AC Adapter	Brand Name	Zebra	Part Number	PWR-WUA5V12W0US
Earphone 1	Brand Name	Zebra	Part Number	HDST-35MM-PTVP-01
Earphone 2	Brand Name	Zebra	Part Number	HDST-USBC-PTT1-01
USB Cable (Type C to Type A)	Brand Name	Zebra	Part Number	CBL-TC5X-USBC2A-01
Type C-Audio Cable (Type C to 3.5mm)	Brand Name	Zebra	Part Number	ADP-USBC-35MM1-01

Remark: For accessories equipped with this EUT, please refer to the following photos.

Brand Name: Zebra; Model Name: ET40AB




Brand Name: Zebra; Model Name: ET40AB

AC Adapter




Brand Name: Zebra; Model Name: ET40AB

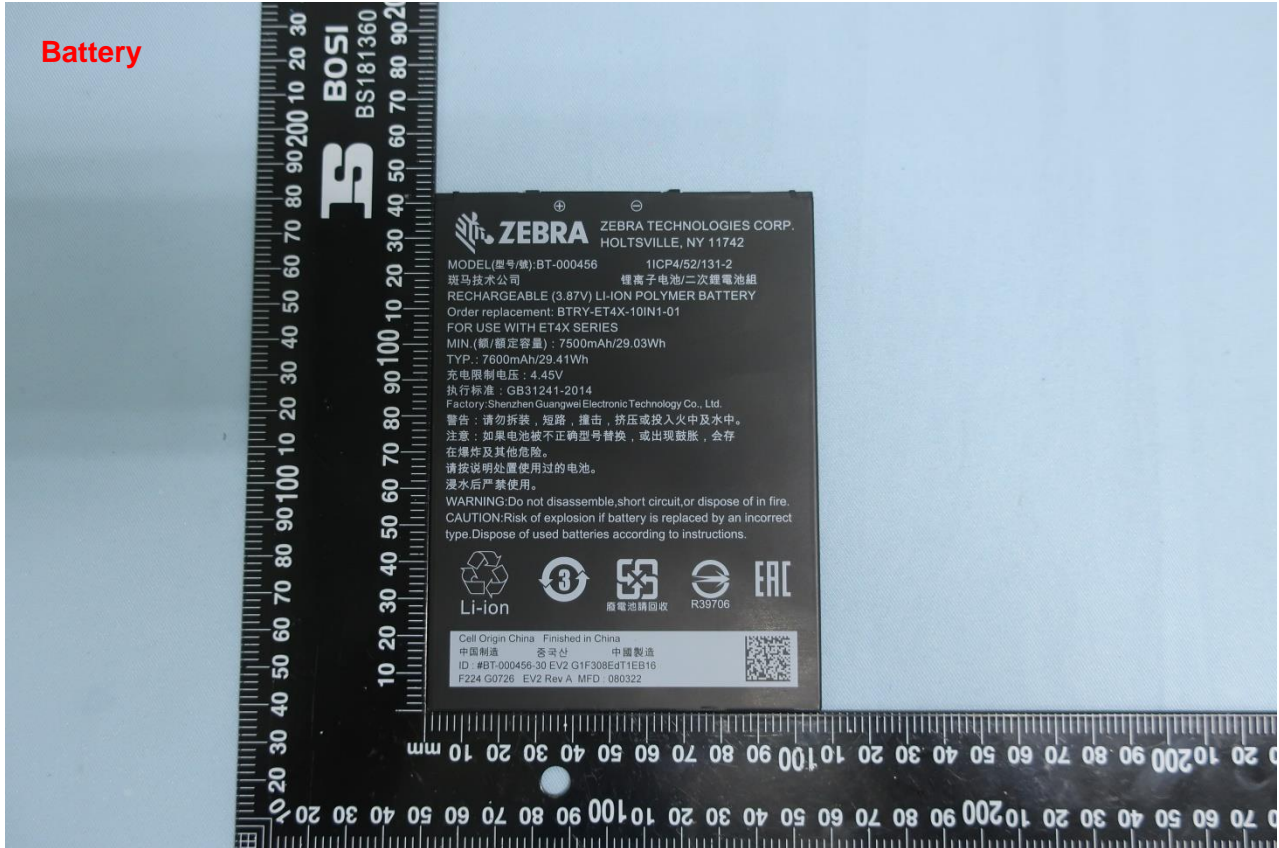



Brand Name: Zebra; Model Name: ET40AB

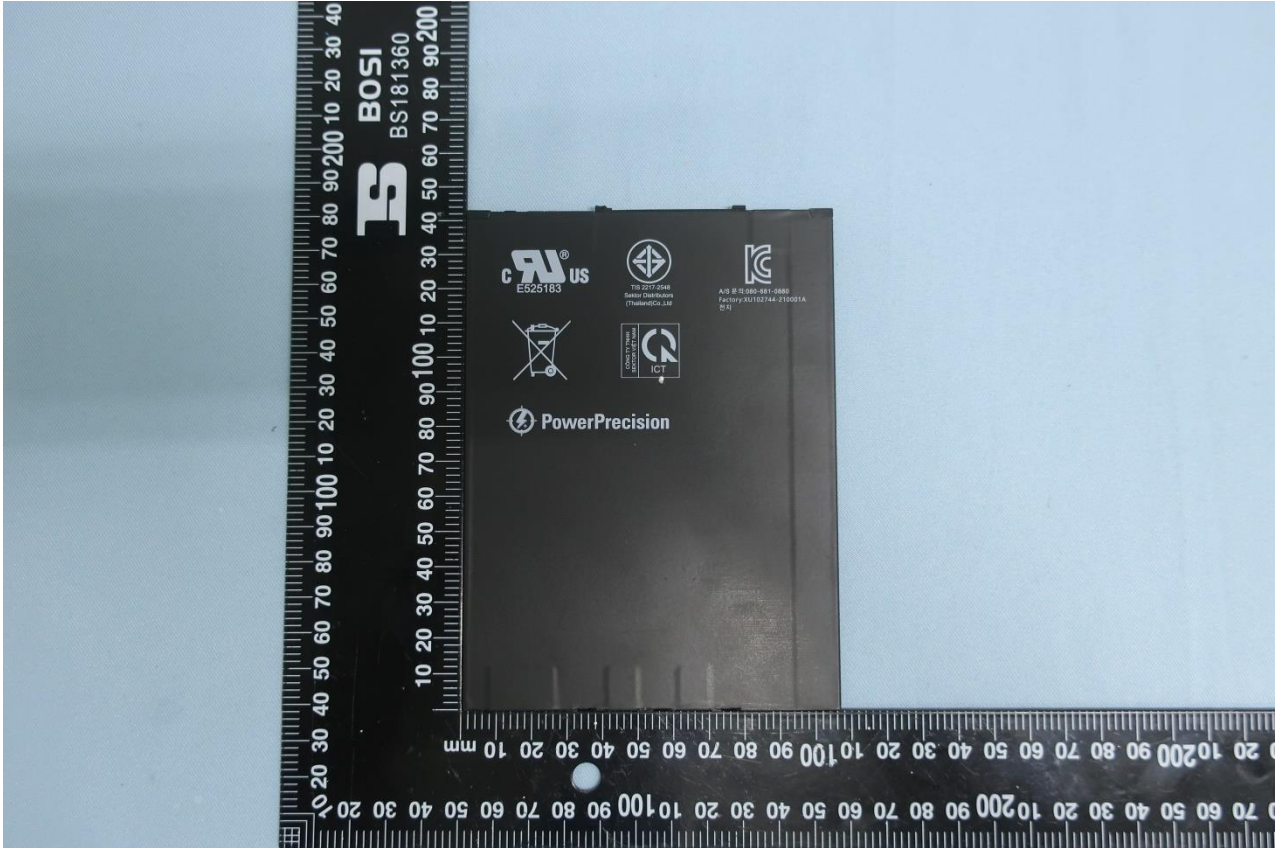



Brand Name: Zebra; Model Name: ET40AB



Brand Name: Zebra; Model Name: ET40AB





Brand Name: Zebra; Model Name: ET40AB



Brand Name: Zebra; Model Name: ET40AB

