



**1. External Photograph of EUT**

**Brand Name: Zebra / Model Name: MC27BJ**



**Brand Name: Zebra / Model Name: MC27BJ**



Brand Name: Zebra / Model Name: MC27BJ



**Brand Name: Zebra / Model Name: MC27BJ**





**Brand Name: Zebra / Model Name: MC27BJ**



**Brand Name: Zebra / Model Name: MC27BJ**





**2. Photograph of Accessory**

**Brand Name: Zebra / Model Name: MC27BJ**

<b>Specification of Accessory</b>		
<b>AC Adapter</b>	<b>Brand Name</b>	Zebra
	<b>Model Name</b>	PWR-WUA5V12W0US
<b>Battery</b>	<b>Brand Name</b>	Zebra
	<b>Model Name</b>	BT-000418-10
<b>USB Cable (TypeA plug to TypeC plug)</b>	<b>Brand Name</b>	Zebra
	<b>Model Name</b>	CBL-TC2X-USBC-01
<b>Trigger Handle</b>	<b>Brand Name</b>	Zebra
	<b>Model Name</b>	TRG-MC2X-SNP1-01
<b>Holster 1</b>	<b>Brand Name</b>	Zebra
	<b>Model Name</b>	SG-MC2X-HLSTR-01
<b>Holster 2</b>	<b>Brand Name</b>	Zebra
	<b>Model Name</b>	SG-MC3021212-01R

**Remark:** For accessories equipped with this EUT, please refer to the following photos.

Brand Name: Zebra / Model Name: MC27BJ





Brand Name: Zebra / Model Name: MC27BJ

AC Adapter



Brand Name: Zebra / Model Name: MC27BJ

## Battery

