



1. External Photograph of EUT

Brand Name: Zebra / Model Name: MC27BK




Brand Name: Zebra / Model Name: MC27BK





**Brand Name: Zebra / Model Name: MC27BK**

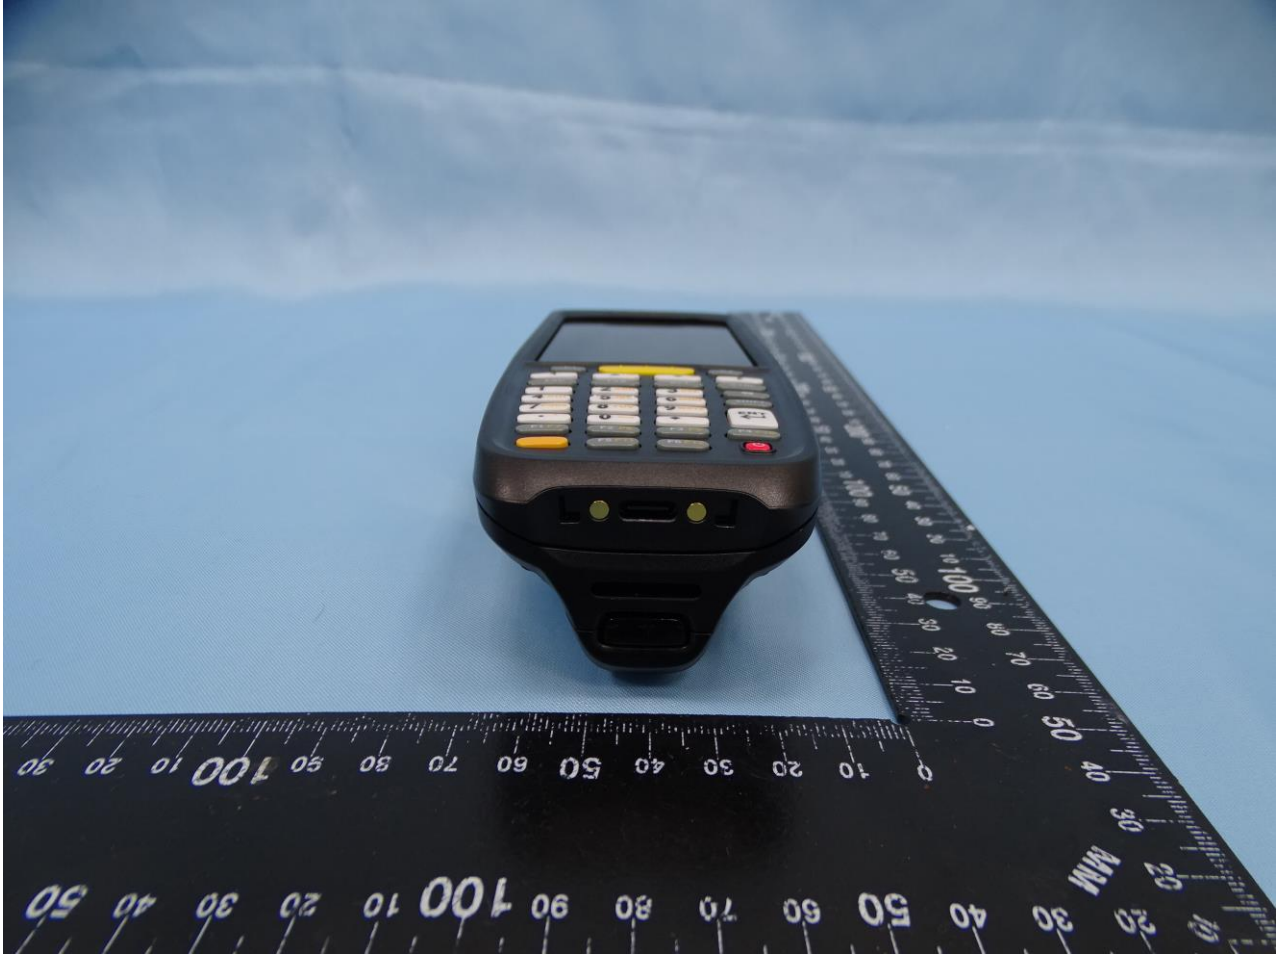

**Brand Name: Zebra / Model Name: MC27BK**





**Brand Name: Zebra / Model Name: MC27BK**





**Brand Name: Zebra / Model Name: MC27BK**





**2. Photograph of Accessory**

**Brand Name: Zebra / Model Name: MC27BK**

<b>Specification of Accessory</b>		
<b>AC Adapter</b>	<b>Brand Name</b>	Zebra
	<b>Part Number</b>	PWR-WUA5V12W0US
<b>Battery</b>	<b>Brand Name</b>	Zebra
	<b>Part Number</b>	BT-000418-10
<b>USB Cable (TypeA plug to TypeC plug)</b>	<b>Brand Name</b>	Zebra
	<b>Part Number</b>	CBL-TC2X-USBC-01
<b>Trigger Handle</b>	<b>Brand Name</b>	Zebra
	<b>Part Number</b>	TRG-MC2X-SNP1-01
<b>Holster</b>	<b>Brand Name</b>	Zebra
	<b>Part Number</b>	SG-MC2X-HLSTR-01
<b>Holster</b>	<b>Brand Name</b>	Zebra
	<b>Part Number</b>	SG-MC3021212-01R

**Remark:** For accessories equipped with this EUT, please refer to the following photos.



Brand Name: Zebra / Model Name: MC27BK





Brand Name: Zebra / Model Name: MC27BK

AC Adapter



Brand Name: Zebra / Model Name: MC27BK

## Battery

