


MC95XX Series

Quick Start Guide




FEATURES

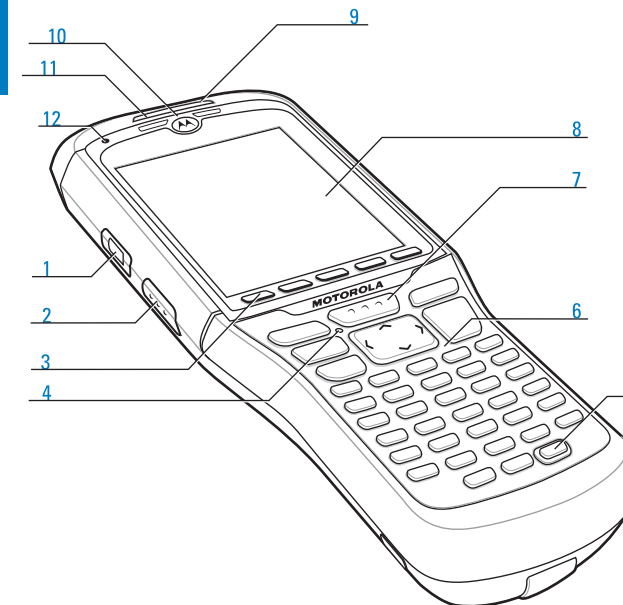

- 1 Up/Down Volume Button
- 2 Scan/Application Button
- 3 Function Keys
- 4 Microphone
- 5 Power Button
- 6 Keypad
- 7 Scan/Action Button
- 8 Touch Screen (with screen protector)
- 9 Scan/Decode LED
- 10 Receiver
- 11 Charging/Battery Status LED
- 12 Radio Status LED

Note 1: To warm boot the MC95XX, press and hold the Power button for five (5) seconds.
To cold boot the MC95XX, press and hold the 1, 9 and Power button.

- 13 Speaker
- 14 Camera and Flash
- 15 Interface Connector
- 16 Stylus
- 17 Scan Exit Window (see Data Capture Options)
- 18 IrDA Window
- 19 Action Button
- 20 Scan/Application Button
- 21 Headset Connector
- 22 Battery Release Button
- 23 Battery

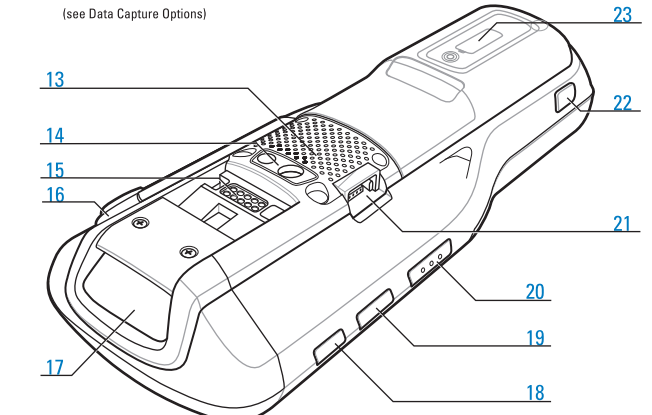

LED Notifications

- Charging/Battery Status:**
 - Slow blinking amber: Battery charging
 - Solid green: Fully charged
 - Fast blinking amber: Charging error
- Scan/Decode:**
 - Red: Scanning active
 - Green: Good Decode
- Radio Status:**
 - Flashing blue: RF activity

KEYPADS



Telephony Numeric




Biometric Telephony Numeric



Calculator Numeric






Alpha Numeric Wide

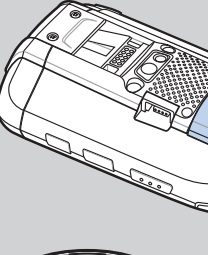

Alpha Primary

GETTING STARTED

1 Insert the Battery

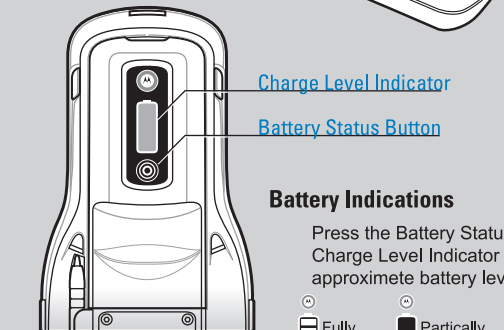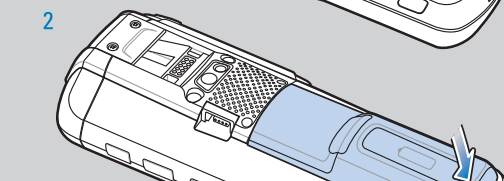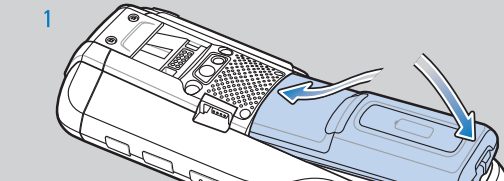


Charge Level Indicator
Battery Status Button

Battery Indications


- Press the Battery Status button. Charge Level Indicator display approximate battery level.
- Fully Charged
 - Partially Charged
 - Un-Healthy

2 Charge the MC95XX

1-Slot Cradle

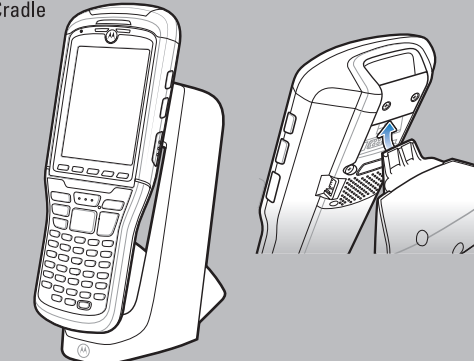

4-Slot Cradle

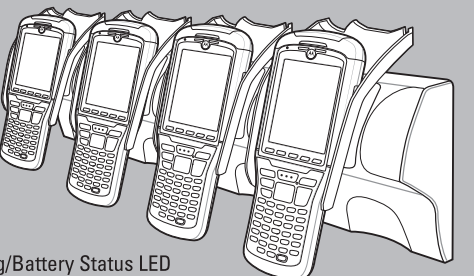

Charging/Battery Status LED


- Slow Blinking Amber = Charging
- Solid Green = Fully Charged
- Fast Blinking Amber = Charging error
- Solid Red = Un-healthy battery

* It is recommended that this product be charged for 24 hours before the first use to ensure that the internal battery is fully charged.


24hr*

Charge the Battery

1-Slot Spare Battery Charger



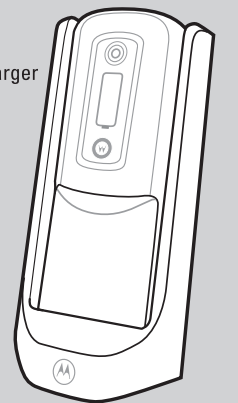


4-Slot Battery Charger

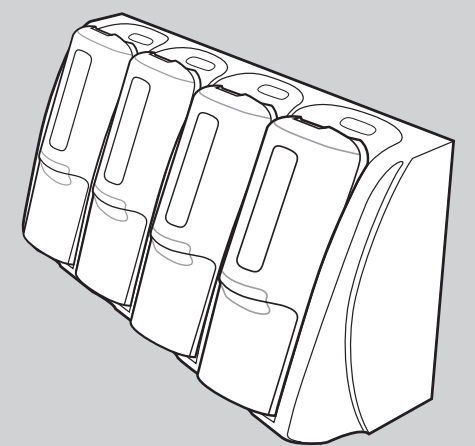

SIM Card Installation (MC9596 Only)

- Remove battery pack.
 - Remove SIM cover using flathead screwdriver.
 - Slide SIM card holder to the left.
 - Lift card holder.
 - Insert SIM card into SIM holder.
- NOTE:**
The proper position of the SIM card—the card connector (i.e., gold area) should be facing down with the beveled edge facing down.
- Lower the SIM card holder down.
 - Slide SIM card holder to the right to lock into place.
 - Reinstall SIM cover and secure screw.
 - Reinstall battery pack.
 - Warm boot the MC9596.

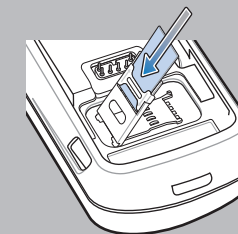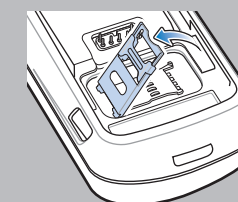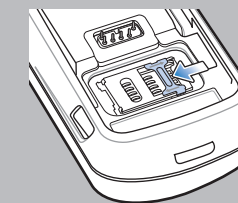


Enter Your PIN

After installing the SIM card activate your mobile service connection. In most cases, SIM cards are preset with a PIN (Personal Identity Number), provided by your service provider.

- Press the Power button to turn on the MC9596.
- Tap Start > Phone.
- Enter the PIN from your service provider.
- Tap Enter.

3 Install ActiveSync®

Download ActiveSync® 4.5 or higher from <http://www.microsoft.com> and follow the instructions to install ActiveSync onto the host computer.

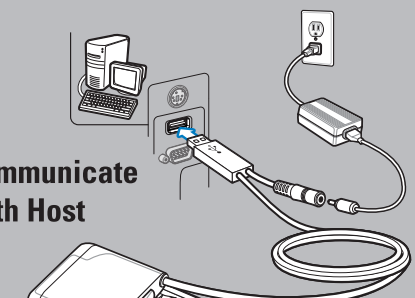

4 Communicate with Host

5 Create a Partnership

Follow the on-screen ActiveSync instructions to establish a connection between the MC95XX and the host computer.

SUPPORT INFORMATION

More Information on the MC95XX

Visit the Motorola Web site at <http://www.motorola.com/mc9500>

Setting up, using and troubleshooting the MC95XX

MC95XX User Guide

MC95XX Integrator Guide

Available at: <http://www.motorola.com/mc9500>

Additional Software

Check Motorola web site for approved applications.

<http://www.motorola.com/mc9500>

Connecting and synchronizing with the host computer

ActiveSync® Help on the host computer. To view help, start ActiveSync®, Click Help - Microsoft ActiveSync Help.

Information on using programs on the MC95XX

Tap Start - Help within the specific program.

Service and Warranty

MC95XX Regulatory Guide



Motorola, Inc.
One Motorola Plaza Holtsville, New York 11742-1300, USA
MOTOROLA and the Stylized M Logo and Symbol and the Symbol logo are registered in the U.S. Patent and Trademark Office. All other product or service names are the property of their respective owners.
© Motorola, Inc. 2009



72-118504-01 Rev. 1 — January 2009

ACCESSORIES




microSD Card Installation

1. Remove battery pack.
2. Remove SIM cover using flathead screwdriver.
3. Slide microSD card holder to the left.
4. Lift card holder.
5. Insert microSD card into holder.


NOTE:

The proper position of the microSD card—the card connector (i.e., gold area) should be facing outward with the bevelled corner facing away.

6. Lower the microSD card holder down.
7. Slide card holder to the right to lock into place.
8. Reinstall SIM cover and secure screw.
9. Reinstall battery pack.
10. Warm boot the MC95XX.

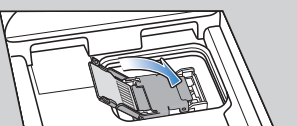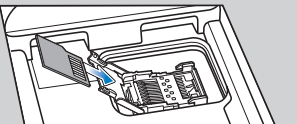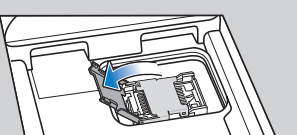


Screen Protector

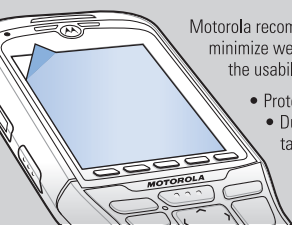


Motorola recommends the use of a screen protector to minimize wear and tear. Screen protectors enhance the usability and durability of touch screen

- Protection from scratches and gouges
- Durable writing and touch surface with tactile feel
- Abrasion and chemical resistance
- Glare reduction


Not using a screen protector can affect your warranty coverage.

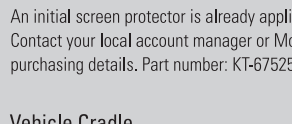


Vehicle Cradle

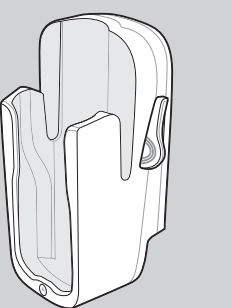


Auto-Charge Cable

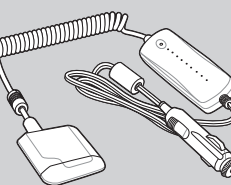


Vehicle Battery Charger

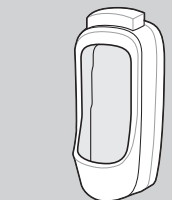


One Slot USB Cradle

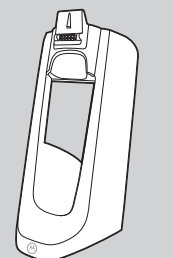


One Slot Battery Charger

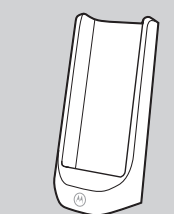


USB Charging Cable

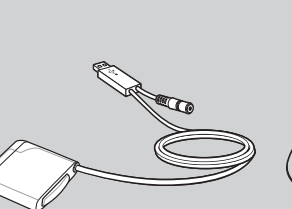


Four Slot Charge Only Cradle

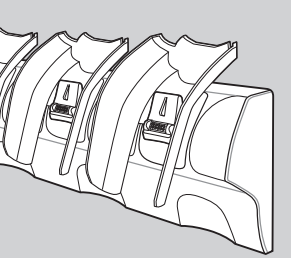



Four Slot Battery Charger

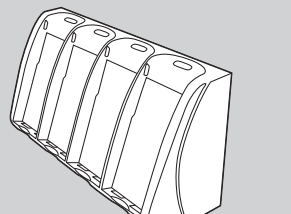

Magnetic Stripe Reader

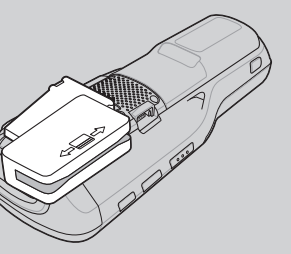

CABLE CONNECTION

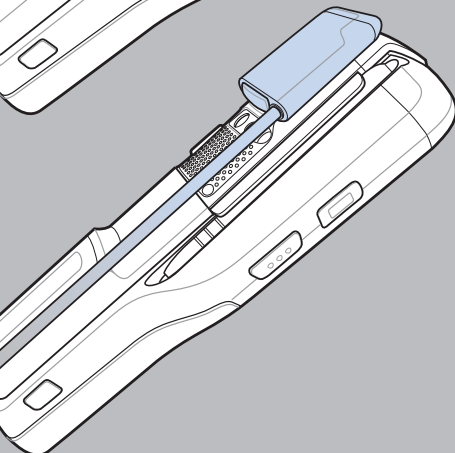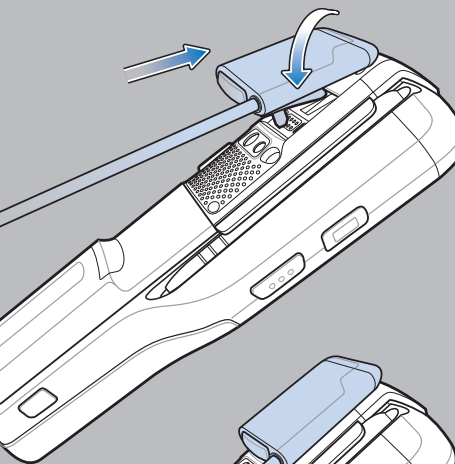

DATA CAPTURE OPTIONS

Camera Lens

Exit Window

Laser scanner or Imager


GPS Information

When using the GPS feature of the MC95XX:

- Acquiring satellite signals may take a few minutes. It is best to be outside and have a clear, unobstructed view of the sky.
- Without a clear view, acquisition takes much longer and could result in the MC95XX being unable to compute the initial position quickly.
- Obtain a satellite fix before moving.
- Shutdown GPS application when not in use.

OPTIMUM SCANNING AND IMAGING

Scanning/Imaging

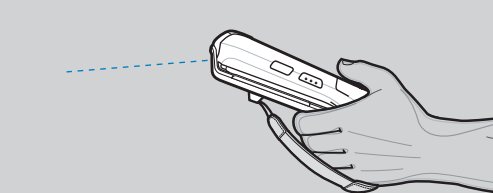


Laser Scanning



Imaging




Camera Decode

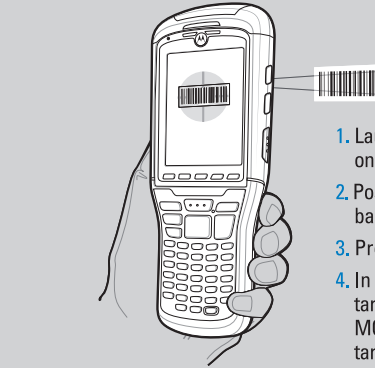


1. Launch a bar code reading application on the MC95XX.
2. Position the MC95XX toward the bar code.
3. Press the **Scan** button.
4. In the image window align the red target over the bar code. When the MC95XX decodes the bar code the target turns green.

Camera Photo

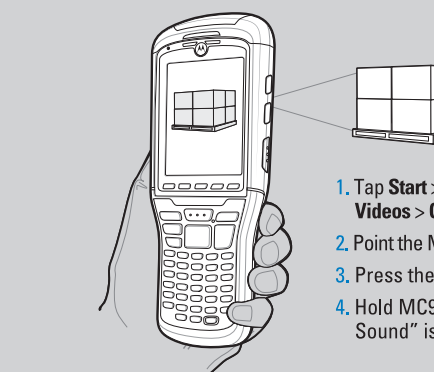

1. Tap **Start > Programs > Pictures & Videos > Camera**.
2. Point the MC95XX at an object.
3. Press the **Enter** button.
4. Hold MC95XX still until "Shutter Sound" is heard.

ERGONOMIC CONSIDERATIONS

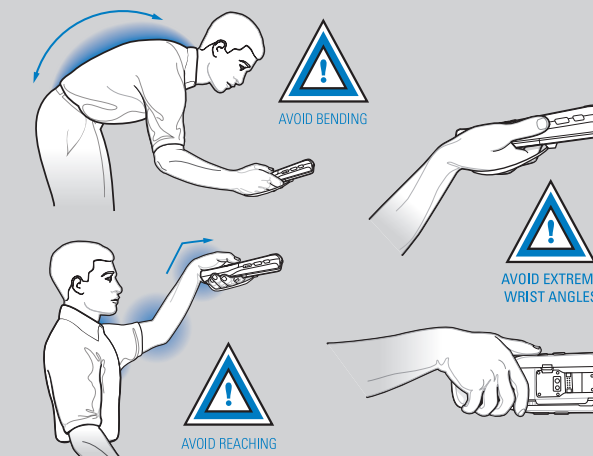

Taking breaks and task rotation recommended