


Label locates under the battery. Users will see the label as they install the battery.

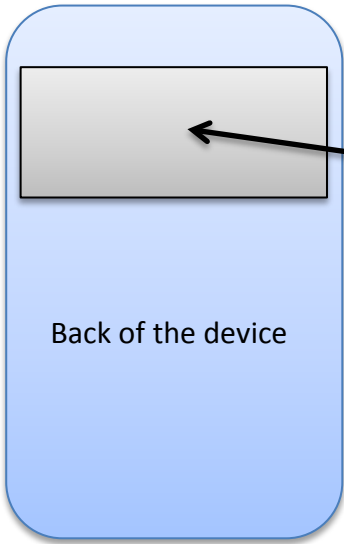

Label locates on the back of the device.