


SOUNDFREQ[®]

Double Spot

SFQ-09

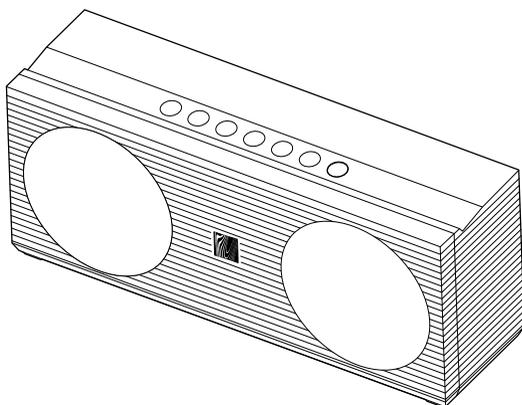

 **Bluetooth[®]**

User Manual

Safety Information

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
	The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	
WARNINGS:		
TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. □		
□ DO NOT REMOVE COVER or OPEN THE CABINET. □ Dangerous high voltages are present inside the enclosure. No user serviceable parts inside. Leave all servicing to qualified service personnel.		

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an

electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING (Symbol provided by RETAC)

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.
16. The mains plug is used as disconnect device and it shall remain readily operable during intended use. In order to disconnect the mains plug from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

18. Do not place any naked flame sources, such as lighted candles, on the apparatus.
19. The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

FCC and IC Information:

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada IC statements

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

Warnings: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Burnport Holdings Ltd. 72MT Belcher Pls, East, Calgary, Alberta, T2Z 2G1, CANADA. Tel: 403-257-4961

FCC&IC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102.

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters from user and bystanders.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

For compatibility between the system and another device with Bluetooth technology, consult the device's documentation and dealer. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.

 **Bluetooth** is a registered trademark of Bluetooth SIG, Inc

Please read rating label at the bottom of system for power input and other safety information.

CAUTION - Proper Installation

- Install the system in a place which is level, dry and neither too hot nor too cold. The appropriate temperature is between 5°C and 35 °C.
- Install the system in a location with adequate ventilation to prevent internal heat from building up inside the unit.
- Leave sufficient distance between the system and TV.
- Keep the system away from TV to avoid interference with TV.

CAUTION - Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

Front: No obstructions and open spacing.


Sides / Top / Back: No obstructions should be placed in the areas shown by the dimensions below.

Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10cm (3-15/16") or more.

Front View:

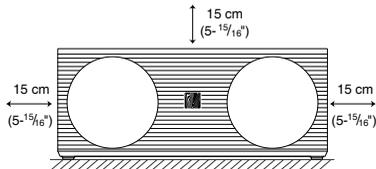

Side View:

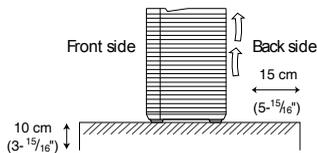

Information for Users on Disposal of Old Equipment



[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling in accordance with your national legislation.

Attention:

This symbol is only valid in the European Union.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health that could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

QDID: B022149


Contents

Getting Started	6
Package Contents.....	6
Connecting to the AC Power Adapter	6
Using the Battery Pack (Optional)	7
Installing the Battery Pack.....	7
Charging the Battery Pack.....	7
Checking Battery Power	8
System Overview	9
Top View.....	9
Rear View.....	10
Bottom View	10
Basic Operation	11
Turning on/off the System.....	11
Adjusting the Volume	11
Selecting a Sound Mode	11
Activating the Power Saving Mode	11
Selecting the Sound Source	12
Playing back via Bluetooth	13
Establishing a Bluetooth Connection	13
Using Multiple Bluetooth Devices.....	13
Playing back from Macbook or Macbook Pro.....	14
Playing back from PC/Notebook	14
Playing back from External Source	15
Charging an External Device	16
Optimizing Sound Quality	17
Troubleshooting	18
Technical Specifications	19


Getting Started

Package Contents

Examine whether the following package contents are all included:

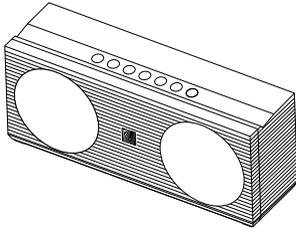

Main Unit

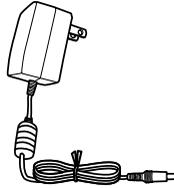

AC Power Adapter



Audio Cable



Quick Start Guide



Safety Card




Warranty Card

Connecting to the AC Power Adapter

WARNING! For optimal performance, use only the supplied AC power adapter.

Ensure that power supply outlet matches with the unit AC's input 100V~240V, 50/60Hz before connection.

Connect one end of the AC power adapter to DC IN jack, and the other end to an electrical outlet only after all other connections are completed.

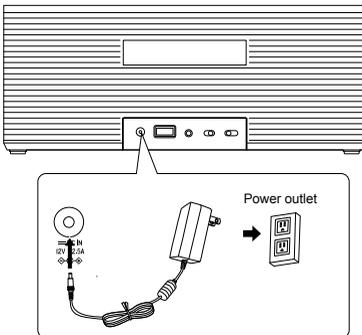


Using the Battery Pack (Optional)

The system has been designed to equip with a separate battery pack (purchased separately) to give you portable power without using the AC power adapter.

Installing the Battery Pack

1. Twist the screw clockwise from **CLOSE** to **OPEN** (Ⓐ), and push down to remove the battery cover (Ⓑ).

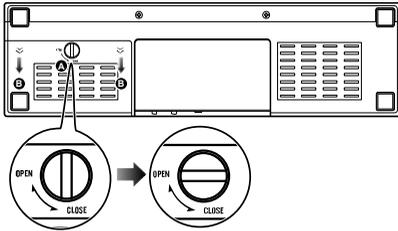

2. Insert the Battery Pack and press it gently to lock in place.



3. Reverse Step 1 above to close the battery cover.

Charging the Battery Pack

After installing successfully, plug the AC power adapter to start charge the battery Pack. During charging, the charging LED indicator combination with the ⏻ button will indicate the charging status as follows:

System Mode	During Charging	Charging Complete
Standby	Blinks in green at a slow rate.	Off
Power on but in idle mode	Blinks in green.	Blinks in white.
Bluetooth mode or AUX IN mode	Remains on in green.	Remains on in white.

Notes:

- It takes about 3 hours to charge the battery from empty to full when the system is in standby mode. Time may vary depending on the temperature or conditions of use.
- The battery will give you portable power for up to 6 hours playback time. The playback time may vary depending on the temperature or conditions of use.
- Do not dispose of system in fire; battery may explode or leak.

Type: Li-Ion Battery
Model No: LC18650
Rated Voltage: 7.4V
Capacity: 1800mAh

WARNING !

There is a danger of explosion if the battery is incorrectly replaced. Replace it only with the same or equivalent type. Do not expose it to excessive heat such as sunshine, fire, etc., where it would be exposed to high temperatures above 60°C.

Checking Battery Power

When the system is on using the battery power and in idle mode, press and hold the **VOL+** and **VOL-** buttons simultaneously on the system to check the battery power by the LED indicator.


Status	Color	Battery Power
Fast blinking (4 times)	Green	66%-100%
Fast blinking (3 times)	Green	36%-65%
Fast blinking (2 times)	Green	15%-35%

Note:

- During operations in battery mode, if the LED indicator blinks alternately in white and green at a slow rate, it indicates the battery power is less than 15%; then you need to connect the AC power adapter to charge it in time.

System Overview

Top View

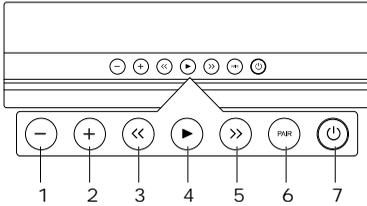


1. **VOL-** button
Press to decrease the volume level.
2. **VOL+** button
Press to increase the volume level.
3. **<<** (Previous/Rewind) button
In Bluetooth mode, press to skip to the start of the current track or skip to previous track. Hold to rewind a track fast.
4. **▶** (Play/Pause) button
In Bluetooth mode, tap to play or pause a track.
5. **>>** (Next/fast forward) button
In Bluetooth mode, tap to skip to next track. Hold to fast-forward a track.
6. **PAIR** button
Press to put the system into pairing mode.
7. **⏻** (On/Standby) button
Press to switch between standby and power-on modes.


LED Indicator

- Illuminates and indicates the battery pack charging status. (See **Charging the Battery Pack** section)
- When powering on, illuminates and blinks in white, and blinks once when any button is pressed.
- When powering on, indicates the pairing state.
- When powering on in battery mode without Bluetooth and AUX connection, indicates the battery pack power by holding **VOL+** and **VOL-** buttons at the same time. (See **Checking Battery Power** section)
- When powering on, indicates the state of power saving mode by holding **PAIR** and the **▶** buttons at the same time.

Rear View

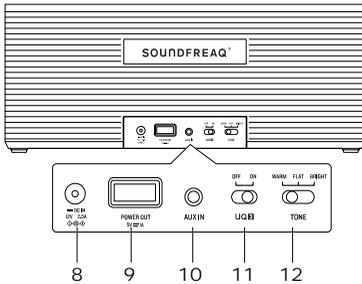

Bottom View

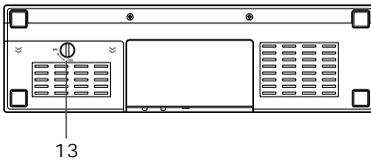


8. **DC IN** jack
Connect to AC power Adapter.
9. **POWER OUT** jack
Charges your external USB devices.
10. **AUX IN** jack
Inputs audio signals from an external device.
11. **UQ3** switch
Slide to activate or deactivate the UQ3 (High Definition Wide Stereo) sound effect.
12. **TONE** switch
Slide to switch EQ settings among **WARM**, **FLAT**, and **BRIGHT**.
13. Battery Pack compartment

Basic Operation

Turning on/off the System

Press the  button on the top to turn on the System.

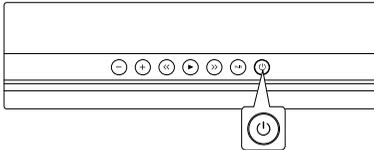

Press the  button again to turn off the System.


Adjusting the Volume

You can adjust the volume level when one of sound sources is selected by pressing the **VOL+/-** buttons.

Each time you press **VOL+** or **VOL-** button, the LED indicator will blink once in white. If the system is at minimum volume level (or at maximum volume level), then press **VOL-** button (or **VOL+** button), the LED indicator will keep its status as before without any action.

Selecting a Sound Mode

Sound modes can be selected to enhance the type of music being played. You can select one sound mode of **WARM**, **FLAT**, and **BRIGHT** by sliding the **TONE** switch on the back of the system.

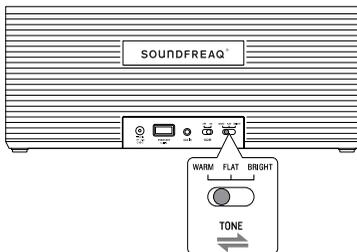

Activating the Power Saving Mode

Press and hold **PAIR** button and the  button together to disable or enable the Power Saving mode:

- The LED indicator blinks twice in green to indicate Power Saving mode is off. The system will keep on all the time.
- The LED indicator blinks once in green to indicate the Power Saving mode is activated. The system will power off automatically when the system is in idle mode for 45 minutes.

Note:

- If you turn off the system manually, the system will activate the Power Saving mode automatically next time even if you disabled it before.

Selecting the Sound Source

This system enables you to access two sound sources – **AUX IN** and **Bluetooth**.

- If **AUX IN** jack has been inserted, the sound source will switch to **AUX IN** mode automatically. Remove the audio cable from the **AUX IN** jack, the sound source will switch to **Bluetooth** mode automatically.
- When a Bluetooth connection has been established and the system is in **Bluetooth** mode, once you insert audio cable, the system will suspend the Bluetooth playback and switch to **AUX IN** mode.
To resume the Bluetooth playback, you need to remove the audio cable from the **AUX IN** jack, and press the ► button.

Playing back via Bluetooth

Establishing a Bluetooth Connection

Notes:

- If your mobile phone supports A2DP, AVRCP profiles, its music will play through the system.
 - You can make a Bluetooth connection with a mobile phone, an iPhone/iPad/iPod touch or any other Bluetooth-enabled devices.
1. Press the  button to turn on the system.
 - The LED indicator on top panel illuminates and blinks in white.
 2. Press **PAIR** button on top of system to put it in pairing mode.
 - The indicator starts blinking at a fast rate.
 - If you press and hold the **PAIR** button for more than 2 seconds during the process of pairing, the operation will be canceled.
 3. During this period, you can operate the mobile phone, iPad or Bluetooth-enabled device to pair with the system within a 33 feet (10m) range.
 - Please check the user manual of the iPad or Bluetooth-enabled device with which you are initiating pair to learn about Bluetooth connection with any other devices.
 4. Once the system is detected and its name **Double Spot** appears on the display of your Bluetooth-enabled device, then select the system on the display. Key in the default password **1234** if a prompt requests it.
 - The LED indicator on top panel starts blinking quickly to indicate that the system and your device have entered into the connection mode.
 - After a Bluetooth connection is established successfully, the LED indicator will remain on in white.

5. Select the desired music and press **Play** button on your device. The system automatically starts playing back the music.
 - Before starting playback via Bluetooth, make sure the **AUX IN** jack is not inserted using audio cable.
 - Try again above steps 2 to 4 if the LED indicator blinks slowly after blinking quickly for 3 minutes, the pair was unsuccessful.

Using Multiple Bluetooth Devices

Only one device can be used at a time, but you can switch between different Bluetooth devices.

Make sure each device you want to use has already been paired, to switch devices:

1. On Double Spot, press and hold **PAIR** button for 2 second.
2. On Bluetooth device, select the connection to Double Spot.

This device is now the connected device to Double Spot, (the previous connected device is now disconnected). Repeat those steps to switch the connected device again.

Notes:

- If the system has no sound output, please check if the volume level of your Bluetooth device connected to the system is set to the minimum, or the Bluetooth device is muted.
- Ensure that the audio cable has been removed from the **AUX IN** jack.

Playing back from Macbook or Macbook Pro

1. In the desktop screen, select the **Open Bluetooth Preference**.
2. If there are any old **Double Spot** records, remove them. Click the **Continue** button to continue pairing process.
3. Once completed, the pairing success screen will come out.

Note:

- Don't quit the page immediately. You may notice that the previous dialog screen still shows the device not connected. Just ignore it. It's confusing to the user. In fact, it's connected already.
4. Open iTunes, play a song. Then use the mouse to click the Bluetooth icon at the top right hand corner of the desktop screen, select the **Double Spot** option and then select the **Use as Audio Device (Stereo)**. After a while (a few seconds), the music will come out from the system. If not, select the **Use as Audio Device (Stereo)** once again. The Sound Quality should be good.


Playing back from PC/Notebook

1. Press the **Start** button to open the **Device and Printers** dialog box.
2. Turn on the system, then press **PAIR** button to put into the pairing mode.
3. Select the **Add a device** in the **Device and Printer** dialog box. The **Double Spot** icon will appear on the display.
4. Double click the **Double Spot** icon and wait until the device has been added successfully.
5. Click the **Close** button to close the **Device and Printer** dialog box. A **Double Spot** icon appears in the dialog box.

6. Double click the **Double Spot** icon and the device connection screen will be shown.
7. Click the **Connect** button in the **Music and Audio** option.
8. Once connected, the LED indicator on the system will be solid on in white and the connection success screen will be shown.

Playing back from External Source

You can enjoy the sound from an optional component such as a digital music player through the speakers of this system. Be sure to turn off the power of each component before making any connections. For details, refer to the instruction manual of the component to be connected. Connect an external device to the **AUX IN** jack on the back panel of the system using a stereo audio cable (supplied).

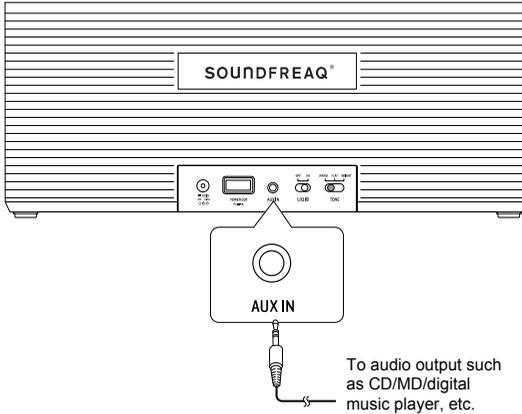


Notes:

- When the audio cable is connected to the **AUX IN** jack, the system will switch to the **AUX IN** mode automatically.
 - In order to save the energy, please plug off the AUX-IN cable when do not use.
1. Press the  button to turn on the system.
 2. Set the volume to the minimum position.
 3. Start playback on the external device.
 4. Adjust the volume to meet your listening requirement.

Charging an External Device

The **POWER OUT** jack can be used to charge most devices that allow for USB charging (including many mobile phones, smart phones and wireless headsets).

Connect one end of USB power cord to **POWER OUT** jack of the system, and the other end to your USB device.

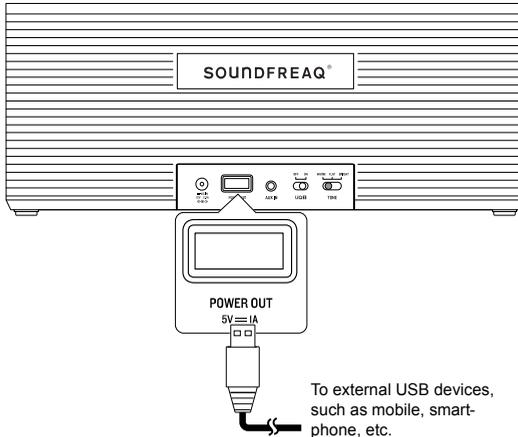

When Double Spot is using the power supply, simply connect your device to Double Spot to begin charging.

When Double Spot is using the power of Battery Pack (purchased separately), connect your device to Double Spot, and turn on the system to begin charging.


Notes:

- Please use the USB power cord that came with your device to connect to Double Spot to charge.
- When using the Battery Pack power, if the battery power is less than 15%, the charging function will be unavailable.
- When the system is operating by Battery Pack only and charging external device at the same time, when the Battery Pack power level is low, it is suggested to keep playback volume to low/medium level to avoid sudden turn off of the system when the Battery Pack is drained off by the external device

Optimizing Sound Quality

UQ3™ is proprietary technology that enhances stereo separation.

- To turn UQ3 on/off, slide the **uq3** switch.
- Slide **Tone** switch to select a **WARM, FLAT** or **BRIGHT** tone for your listening preference.

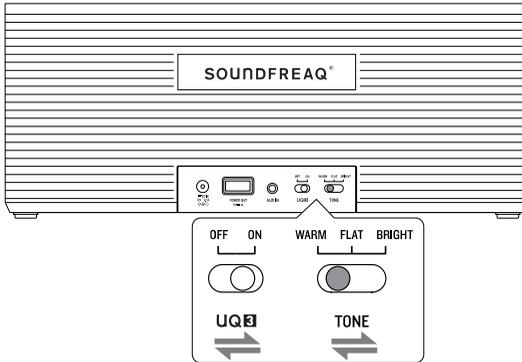

TIP: Sound Spot Stereo has been tuned to a balanced acoustic profile. You can use the EQ settings on your playback device to further customize the EQ balance to suit your personal preference. **Note:** Some custom EQ settings when combined with UQ3 enhancement may cause distortion.

TIP: For playback in Bluetooth or Aux mode, the output volume is set by both the volume control on Sound Spot Stereo and the source device. Both may be adjusted to set your preferred listening volume. Typically, sound quality is best when the volume of the source device is between 70~90%. **Note:** As with any speaker system, if the volume on both your source device and the speaker are at maximum output, it is possible to overdrive the speakers and cause distortion. When using an iOS device or other device that offers a “volume limit” feature, turn this setting off for higher volume listening in Bluetooth or Aux mode.

Troubleshooting

Check this list for a possible troubleshooting solution before calling for service.

In These Cases	Check the Following Points
Power does not come on	<ul style="list-style-type: none"> • AC power adaptor is not inserted securely. Plug in securely. • When using the battery pack, the battery power is too low. Charge the battery.
No sound output	<ul style="list-style-type: none"> • Check if the volume level of the system is set to the minimum. • When in Bluetooth mode, check if the volume level of your Bluetooth device is set to the minimum or muted; check if your audio cable is connected to the AUX IN jack of the system. Unplug the cable. • When in AUX IN mode, check if your external device is set to the minimum or muted.
The system is powered off automatically	<ul style="list-style-type: none"> • The system enters the saving energy mode. The system does not connect with any audio source for more than 45 minutes. Turn on the system again and play back an audio source. • If using the battery pack, check if the battery pack is exhausted. Connect AC power adaptor and turn on the system again.
Bluetooth connection cannot be restored automatically	<ul style="list-style-type: none"> • The system may be powered off and powered on when playing back a track over Bluetooth connection. You need to make the connection again.
If you find USB charging cannot perform after connecting your device to the POWER OUT jack on the system	<ul style="list-style-type: none"> • Maybe your USB cable is not supported by the system, please try to use another USB cable. • The battery power of the system is less than 15%.
Bluetooth connection cannot be established	<ul style="list-style-type: none"> • When making a Bluetooth connection between the system and your device for the first time, if the connection is fail, you need to power off your device and power on again to clear the device name, and make the connection again.

Technical Specifications

Model	SFQ-09	
Type	Double Spot	
Support Bluetooth	Bluetooth 1.2, 2.0 and 2.1 compliant	
Support Profile	A2DP, AVRCP	
Input Sensitivity	AUX Input	1000mV
Input Terminal	External DC IN, AUX IN	
Power Source	DC IN 12V/2.5A	
Dimensions (Approx.)	280mm (L) x 80mm (D) x 112mm (H)	
Weight	845g (without Battery pack)	

Design and specifications are subject to change without notice.

Save this manual