SOUNDFREAQ®

Pocket Kick

SFQ-10



Bluetooth°

User Manual

Safety Information



CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN





The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNINGS:

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

DO NOT REMOVE COVER or OPEN THE CABINET. Dangerous high voltages are present inside the enclosure. No user serviceable parts inside. Leave all servicing to qualified service personnel.

IMPORTANT SAFETY INSTRUCTIONS

- 1. Read these instructions.
- 2. Keep these Instructions.
- 3. Heed all Warnings.
- 4. Follow all instructions.
- 5. Do not use this apparatus near water.
- 6. Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an

- electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11. Only use attachments/accessories specified by the manufacturer.
- 12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE CART WARNING (Symbol provided by RETAC)

- Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vase, shall not be placed on the apparatus.
- 16. The mains plug is used as disconnect device and it shall remain readily operable during intended use. In order to disconnect the mains plug from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
- The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

- 18. Do not place any naked flame sources, such as lighted candles, on the apparatus.
- 19. The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

FCC Information:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canada IC statements

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN ICES-3 (B)/NMB-3 (B)

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio

frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- · Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio TV technician for help.

Warnings: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Burnport Holdings Ltd. 72MT Belcher Pls, East, Calgary, Alberta, T2Z 2G1, CANADA. Tel: 403-257-4961

FCC&IC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102

- This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters from user and bystanders.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

For compatibility between the system and another device with Bluetooth technology, consult the device's documentation and dealer. In some countries, there may be restrictions on using Bluetooth devices. Check with your local authorities.

® Bluetooth is a registered trademark of Bluetooth SIG, Inc

Please read rating label at the bottom of system for power input and other safety information.

CAUTION - Proper Installation

- Install the system in a place which is level, dry and neither too hot nor too cold. The appropriate temperature is between 5°C and 35°C.
- Install the system in a location with adequate ventilation to prevent internal heat from building up inside the unit.
- Leave sufficient distance between the system and TV.
- Keep the system away from TV to avoid interference with TV.

CAUTION - Proper Ventilation


To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

Front: No obstructions and open spacing.


Sides / Top / Back: No obstructions should be placed in the areas shown by the dimensions below.

Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10cm (3-15/16") or more.

Front View:

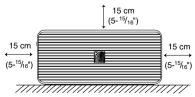

Side View:

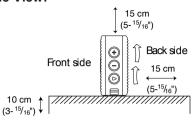

Information for Users on Disposal of Old Equipment



Attention: This symbol is only valid in the European Union.

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling in accordance with your national legislation.

By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health that could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product. Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

QDID: xxxxxxx


Contents

| Getting Started | 6 |
|--|----|
| Package Contents | 6 |
| Charging the Built-in Battery | 6 |
| Checking Battery Power | 7 |
| System Overview | 8 |
| _eft View | 8 |
| Right View | 8 |
| Basic Operation | 9 |
| Turning on/off the System | 9 |
| Adjusting the Volume | 9 |
| Activating the Power Saving Mode | 9 |
| Selecting the Sound Source | 10 |
| Playing back via Bluetooth | 11 |
| Establishing a Bluetooth Connection | 11 |
| Jsing Multiple Bluetooth Devices | 11 |
| Playing back from Macbook or Macbook Pro | 12 |
| Playing back from PC/Notebook | 12 |
| Playing back from External Source | 13 |
| Using Hands-free Calling | 14 |
| Making a Call | 14 |
| Receiving a Call | 14 |
| Ending a Call | 14 |
| Rejecting a Call | 14 |
| Troubleshooting | 15 |
| Technical Specifications | |

Getting Started


Package Contents

Examine whether the following package contents are all included:

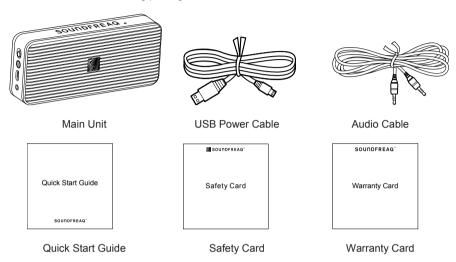

Charging the Built-in Battery

To charge the built-in battery of the system, connect the micro plug of the USB power cable to the **USB power port** of the system and the standard plug to USB power outlet such as PC USB port, USB power adapter. For optimal performance, use only the supplied USB power cable.

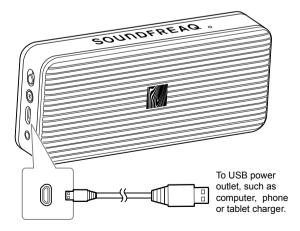

During charging, the charging LED indicator combination with **Power Switch** will indicate the charging status as follows:

| System Mode | During Charging | Charging Complete |
|-------------------------------|---------------------------------|---------------------------------|
| Standby | Blinks in green at a slow rate. | Blinks in white at a slow rate. |
| Power on but in idle mode | Blinks in green. | Blinks in white. |
| Bluetooth mode or AUX IN mode | Remains on in green. | Remains on in white. |

Notes:

- The battery cannot be replaced by the user.
- It takes about 3 hours to charge the battery from empty to full when the system is in standby mode. Time may vary depending on the temperature or conditions of use.
- The built-in battery will give you portable power for up to 10 hours playback time. The
 playback time may vary depending on the temperature or conditions of use.
- · Do not dispose of system in fire; battery may explode or leak.

Type: Lithium-Polymer Rechargeable

Model No: MLP563450

Rated Voltage: 3.7V

Capacity: 1130mAh

WARNING!

There is a danger of explosion if the battery is incorrectly replaced. Replace it only with the same or equivalent type. Do not expose it to excessive heat such as sunshine, fire, etc., where it would be exposed to high temperatures above 60°C.

Checking Battery Power

When the system is powering on and in idle mode, press and hold the **VOL** + and **VOL** – buttons together on the system to check the battery power by the LED indicator.

| Status | Color | Battery Power |
|-------------------------|-------|---------------|
| Fast blinking (4 times) | Green | 66%-100% |
| Fast blinking (3 times) | Green | 36%-65% |
| Fast blinking (2 times) | Green | 15%-35% |

- If the LED indicator blinks alternately in white and green at a slow rate, it indicates the built-in battery power is less than 15%. In this case, you need to turn off the system or decrease the volume level, and connect the USB power cable to charge it in time.
- If the LED indicator blinks simultaneously in white and green at a fast rate, it indicates the built-in battery voltage is too low, then the system will power off automatically. Please charge in time and turn the system on again.

System Overview

Left View



Right View



1. LED indicator

- Indicates the built-in battery charging status.
- When powering on, indicates the pairing state.

2. Power switch

Slide to turn on/off the system.

3. * (Pair) button

Press to put the system into pairing mode.

4. USB power port

Connect the supplied USB power cable.

5. AUX IN jack

Input audio signals from an external device.

6. Microphone

Use to speak during a call.

7. VOL + button

Press to increase the volume level

8. VOL - button

Press to increase the volume level.

- 9. ► (Play/pause/Call) button
 - In Bluetooth mode, press to play/pause a track. Double press to skip to the next track; triple press to skip to the previous track.
 - Press to answer/end a call.
- 10. Wrist strap hole

Basic Operation

Turning on/off the System

Slide up the **Power switch** to turn on the System.



Slide down the **Power switch** to turn on the System


Adjusting the Volume

You can adjust the volume level when one of sound sources is selected by pressing the **VOL** +/- buttons.



Each time you press **VOL** + or **VOL** – button, the LED indicator will blink once. If the system is at minimum volume level (or at maximum volume level), then press **VOL** – button (or **VOL** + button), the LED indicator will keep its status as before without any action.

Activating the Power Saving Mode

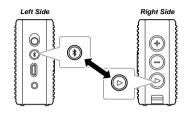

Press and hold the \$ (Pair) button and the button together to disable or enable the Power Saving mode:

- The LED indicator blinks twice to indicate Power Saving mode is off. The system will keep on all the time even it is in idle mode
- The LED indicator blinks once to indicate the Power Saving mode is activated. The system will power off automatically when the system is in idle mode for 45 minutes.

Note:

 If you turn off the system manually, the system will activate the Power Saving mode automatically next time even if you disabled it before.

Selecting the Sound Source

This system enables you to access two sound sources – AUX IN and Bluetooth.

- If AUX IN jack has been inserted, the sound source will switch to AUX IN mode automatically.
 Remove the audio cable from the AUX IN jack, the sound source will switch to Bluetooth mode automatically.
- When a Bluetooth connection has been established and the system is in Bluetooth mode, once you insert audio cable, the system will suspend the Bluetooth playback and switch to AUX IN mode.

To resume the Bluetooth playback, you need to remove the audio cable from the **AUX IN** jack, and press the ▶ button.

Playing back via Bluetooth

Establishing a Bluetooth Connection

Notes:

- If your mobile phone supports A2DP, AVRCP profiles, its music will play through the system.
- You can make a Bluetooth connection with a mobile phone, an iPhone/iPad/iPod touch or any other Bluetooth-enabled devices.
- Slide up the **Power switch** to turn on the System.
- The LED indicator illuminates and blinks in white
- 2. Press the * (Pair) button to put the system in pairing mode.
- The indicator starts blinking at a fast rate.
- If you press and hold the (Pair) button for more than 2 seconds during the process of pairing, the operation will be canceled.
- During this period, you can operate the mobile phone, iPad or Bluetooth-enabled device to pair with the system within a 33 feet (10m) range.
- Please check the user manual of the iPad or Bluetooth-enabled device with which you are initiating pair to learn about Bluetooth connection with any other devices.
- Once the system is detected and its name Pocket Kick appears on the display of your Bluetooth-enabled device, then select the system on the display. Key in the default password 1234 if a prompt requests it.
- The LED indicator starts blinking quickly to indicate that the system and your device have entered into the connection mode

- After a Bluetooth connection is established successfully, the LED indicator will remain on in white.
- Select the desired music and press Play button on your device. The system automatically starts playing back the music
- Before starting playback via Bluetooth, make sure the AUX IN jack is not inserted using audio cable.
- Try again above steps 2 to 4 if the LED indicator blinks slowly after blinking quickly for 3 minutes, the pair was unsuccessful.

Using Multiple Bluetooth Devices

Only one device can be used at a time, but you can switch between different Bluetooth devices

Make sure each device you want to use has already been paired, to switch devices:

- 1. On Pocket Kick, press and hold the \$ (Pair) button for 2 second.
- 2. On Bluetooth device, select the connection to Pocket Kick.

This device is now the connected device to Pocket Kick, (the previous connected device is now disconnected). Repeat those steps to switch the connected device again.

- If the system has no sound output, please check if the volume level of your Bluetooth device connected to the system is set to the minimum, or the Bluetooth device is muted.
- Ensure that the audio cable has been removed from the **AUX IN** jack.

Playing back from Macbook or Macbook Pro

- In the desktop screen, select the Open Bluetooth Preference.
- If there are any old Pocket Kick records, remove them. Click the Continue button to continue pairing process.
- 3. Once completed, the pairing success screen will come out.

Note:

- Don't quit the page immediately. You may notice that the previous dialog screen still shows the device not connected. Just ignore it. It's confusing to the user. In fact, it's connected already.
- 4. Open iTune, play a song. Then use the mouse to click the Bluetooth icon at the top right hand corner of the desktop screen, select the Pocket Kick option and then select the Use as Audio Device (Stereo). After a while (a few seconds), the music will come out from the system. If not, select the Use as Audio Device (Stereo) once again. The Sound Quality should be good.


Playing back from PC/Notebook

- Press the Start button to open the Device and Printers dialog box.
- 2. Turn on the system, then press the \$\\(^{\chi}\) (Pair) button to put into the pairing mode.
- Select the Add a device in the Device and Printer dialog box. The Pocket Kick icon will appear on the display.
- Double click the **Pocket Kick** icon and wait until the device has been added successfully.
- Click the Close button to close the Device and Printer dialog box. A Pocket Kick icon appears in the dialog box

- Double click the **Pocket Kick** icon and the device connection screen will be shown.
- 7. Click the **Connect** button in the **Music** and **Audio** option.
- Once connected, the LED indicator on the system will be solid on in white and the connection success screen will be shown.

Playing back from External Source

You can enjoy the sound from an optional component such as a digital music player through the speakers of this system. Be sure to turn off the power of each component before making any connections. For details, refer to the instruction manual of the component to be connected. Connect an external device to the **AUX IN** jack on the back panel of the system using a stereo audio cable (supplied).

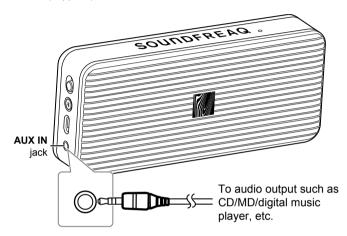


- When the audio cable is connected to the AUX IN jack, the system will switch to the AUX IN mode automatically.
- In order to save the energy, please plug off the AUX-IN cable when do not use.
- 1. Slide up the Power switch to turn on the System.
- 2. Set the volume to the minimum position.
- 3. Start playback on the external device.
- 4. Adjust the volume to meet your listening requirement.

Using Hands-free Calling

You can enjoy hands-free calling via Bluetooth connection with a Bluetooth mobile phone that has a music function and supports the Bluetooth profile A2DP, and HFP or HSP. If your Bluetooth mobile phone supports both HFP and HSP, set to HFP.

- 1. Slide up the Power switch to turn on the System.
- 2. Establish the Bluetooth connection between the system and your mobile phone.

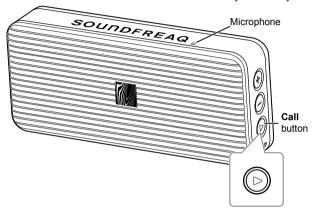

Making a Call

You can use the mobile phone to make a call, and the dialing tone is heard on the system while the music playback is muted. After the call has been connected, you can speak using the microphone of the system.

Receiving a Call

When an incoming call arrives, the music playback is muted and a ringtone is heard from the system, whether the system is in **AUX IN** mode or **Bluetooth** mode. Then press **Call** button on the system and speak using the microphone.

Ending a Call

During a call, you can press Call button of the system to end the call.

Rejecting a Call

When an incoming call arrives, you can press and hold **Call** button of the system for 2 seconds to reject the call.

- During the call, press VOL +/- buttons of the system to adjust the volume.
- The music playback will be resumed when the call has finished.

Troubleshooting

Check this list for a possible troubleshooting solution before calling for service.

| In These Cases | Check the Following Points |
|---|---|
| Power does not come on | When using the battery pack, the battery power is too low. Charge the battery. |
| No sound output | Check if the volume level of the system is set to the minimum. When in Bluetooth mode, check if the volume level of your Bluetooth device is set to the minimum or muted; check if your audio cable is connected to the AUX IN jack of the system. Unplug the cable. When in AUX IN mode, check if your external device is set to the minimum or muted. |
| The system is powered off automatically | The system enters the saving energy mode. The system does not connect with any audio source for more than 45 minutes. Turn on the system again and play back an audio source. Check if the built-in battery is exhausted. Connect USB power cable to USB power outlet for charging the built-in battery. |
| Bluetooth connection cannot be restored automatically | The system may be powered off and powered on when playing back a track over Bluetooth connection. You need to make the connection again. |
| No voice/Low voice from caller while using Hands-free calling | Check if this system is powered on. Increase the volume of the connected mobile phone and the system. |
| Bluetooth connection cannot be established | When making a Bluetooth connection between the system and your device for the first time, if the connection is fail, you need to power off your device and power on again to clear the device name, and make the connection again. |

Technical Specifications

| Model | SFQ-10 | | |
|----------------------|---|-------|--|
| Туре | Pocket Kick | | |
| Support Bluetooth | Bluetooth 1.2, 2.0, 2.1 and 4.0 compliant | | |
| Support Profile | A2DP, AVRCP, HFP, HSP | | |
| Input Sensitivity | AUX Input | 700mV | |
| Input Terminal | Micro USB power port, AUX IN | | |
| Power Source | DC 5V (External USB IN) | | |
| Dimensions (Approx.) | 150mm (L) x 30mm (D) x 65mm (H) | | |
| Weight | 266g | | |

Design and specifications are subject to change without notice.

