

Flat size: 390 × 130 mm

Material: 250g C2S

Folded size: 130x130 mm

 
Printing color: Black

SOUNDFREQ®

Quick Start Guide

Charge Rise

Getting to know Charge Rise

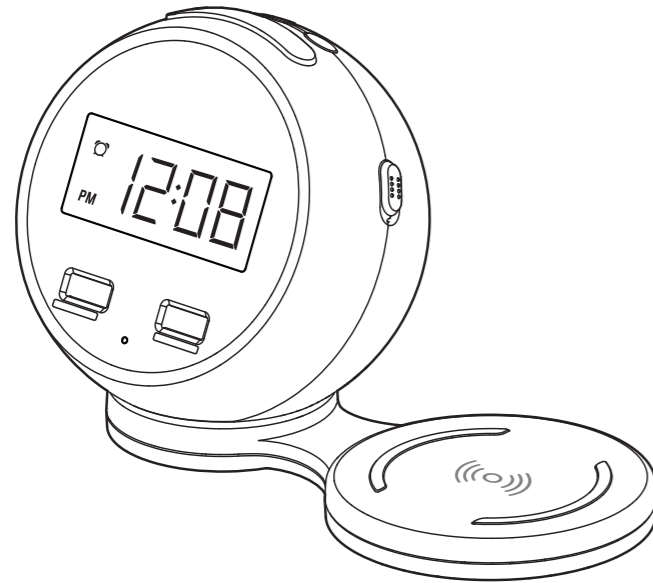

Qi (pronounced “chee”) is the WPC standard for wireless charging. The “Qi” symbol is a trademark of the Wireless Power Consortium.

SOUNDFREQ®

Quick Start Guide

Charge Rise



Appears when Alarm is switched ON



Appears when snooze is active.



 
DST function is activated




Appears when backup battery is LOW/no battery is installed

Powering up the Unit

1 Insert the DC plug of the supplied power adaptor into the DC IN jack.

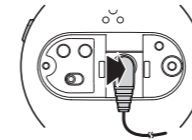

 2 Remove the battery insulation tape from the battery door.

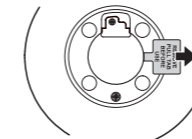

SOUNDFREQ®

Quick Start Guide

Charge Rise

Setting up for the First Time Use

For the first time setup, there is a need to setup the calendar and clock time.

 
- 1 When the unit is plugged in AC power first time, it enters system setup mode.
- 2 The “YEAR” will blink on the display.
- 3 Press the <</>> buttons to set the current YEAR.
- 4 Press **SNOOZE/DIMMER** button to confirm the setting.
- 5 Repeat 3 and 4 above to adjust MONTH, DATE, HOUR, MINUTE and AM/PM.
- 6 Press the 12/24 button at the back to select 12/24 hour display format.

Notes:


- If you want to change the date and the clock, simply press and hold the **SET** button at the back for 3 seconds, then operate according to step 2~6 for setting.
- After the unit is out of power completely (no AC plugged and backup battery has been drained), once the power is resumed, the unit will be reset to default settings as the first time usage and the “year digit” will keep blinking to alert you to set the date and the clock time again.

Setting the Daylight Saving Time (DST)


- 1 When daylight saving time begins, slide the DST switch to “1” position, it will add one hour to the display time.
- 2 When daylight saving time ends, slide the DST switch to “0” position, the displaytime will fall back one hour.

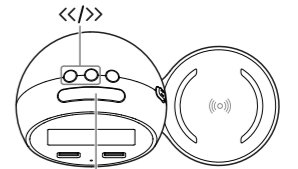


SNOOZE/DIMMER

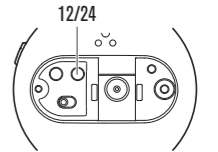 

12/24

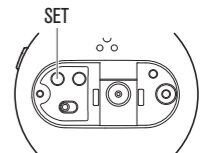 



SET

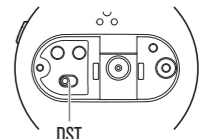 

DST


Using and Setting the Alarm

  1. Press and hold the **ALARM SET** button and then press **HOUR/MIN** buttons to set the desired alarm time.
2. Slide the **ALARM** switch to **ON** position to complete the alarm setting and turn the alarm on.
3. If you want to turn the alarm off, simply slide the **ALARM** switch to **OFF** position.
4. You can simply press the **ALARM SET** button to display the alarm time you have set.

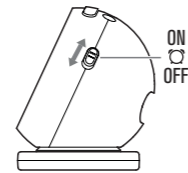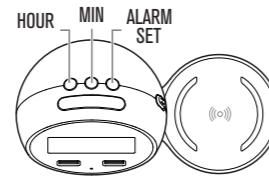

Using Snooze and Shutting off the Alarm

 
1. If you prefer to get some more sleep after the alarm goes off, simply press **SNOOZE/DIMMER** button while the alarm is sounding. The alarm sound will stop and the icon **Z** will display on the screen. The alarm will sound again after 10 minutes. (The snooze function will repeat for 12 times.)
2. If you want to shut the alarm off completely, simply slide the **ALARM** switch to **OFF** position to turn off the alarm.

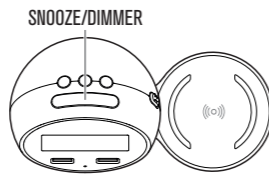

Note: Remember to slide the **ALARM** switch to **ON** position for the next day to wake you up.

Displaying the Date

 Short press either **HOUR** or **MIN** button to show you today's date.

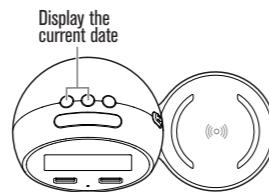

Setting Screen Brightness

 
 
Press **SNOOZE/DIMMER** button repeatedly to change the screen brightness.

Charging your Mobile Devices

USB Charging

You can charge most phones as well as other USB chargeable devices directly from Charge Rise. Simply connect your device to either USB ports in the front of Charge Rise to begin charging.

- The 1.0A port is for regular charging (phone).
- The 2.1A port is for fast charging or charging bigger device (tablet).

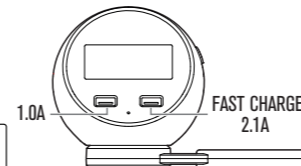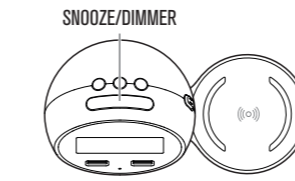


Wireless Charging

CAUTION

BEFORE putting your mobile phone onto the wireless charging pad for charging,

- **REMOVE YOUR CARDS** including any magnetic stripe or RFID cards (such as credit cards, transportation cards or key cards, etc.) placed/inserted **AT THE BACK** of your phone or your phone protective case.
- **REMOVE METAL / MAGNETIC OBJECTS** on the top of the wireless charging pad (such as coins, keys or paper clips, etc.). No foreign object should be placed between the phone and the charging pad during charging.
- **REMOVE YOUR PHONE PROTECTIVE CASE** if it consists of any metal or magnetic part.

 1. Place your phone (with built-in Qi charging function) on the wireless charging pad. For the best result, please remove the phone protective case before charging.
2. You may need to adjust or align your phone position on the charging pad until the charging indicator is **ON**.

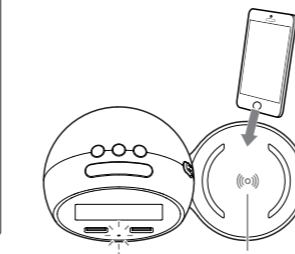

Charging Indicator
Wireless Charging Pad

Indicator	Status
ON	when charging
OFF	when the mobile device is removed from the charging pad
Blinking	when not charging properly due to a general error (Please remove your phone or any foreign metal object on the charging pad if any)

Wireless Charging Pad

- The wireless charging pad is 180° rotatable to fit your nightstand or desktop setting. You can simply lock the charging pad in three positions (front, left or right).
- The charging pad provides up to 10W maximum power. Not all phones are capable of fast wireless charging with full 10W of power.

 
 
 
Note: Place the unit on a flat surface for the stability of your mobile device during wireless charging.

Battery Replacement

- There is a backup battery for keeping the clock time and the date. When the level of backup battery is low, the low battery indicator **⚡** will appear on the display. It is the time to replace the battery.
- To replace the battery, unscrew the cover, then remove the battery door. After replacing the battery, put back the battery door and the screw.

Restoring to Default Setting



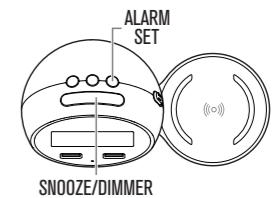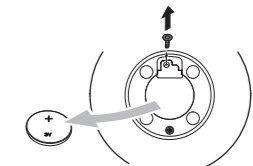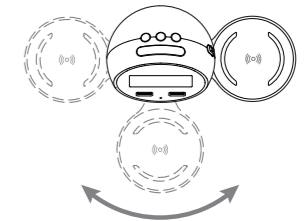

Press and hold **SNOOZE/DIMMER** button and the **ALARM SET** button simultaneously for 5~6 seconds to reset the user setting including **ALARM TIME** and **DIMMER BRIGHTNESS** to default setting. Release both buttons when you see the "cLr" message.






Safety Information

SIZE: 127(W) x153(H)mm

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
	The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	
WARNINGS: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. DO NOT REMOVE COVER or OPEN THE CABINET. Dangerous high voltages are present inside the enclosure. No user serviceable parts inside. Leave all servicing to qualified service personnel.		

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions.
2. Keep these Instructions.
3. Heed all Warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
POTENTIAL CART WARNING
Symbol provided by IEC/ETC
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, shall not be placed on the apparatus.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. The mains plug is used to disconnect device and it shall remain readily operable during intended use. In order to disconnect the mains plug from the mains completely, the mains plug should be disconnected from the mains socket outlet completely.
17. The batteries (battery pack & batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
18. Do not place any naked flame sources, such as lighted candles, on the apparatus.
19. The battery used in this product must be properly recycled or disposed of. Please contact your local recycling center for proper battery handling and disposal instructions.

PRECAUTIONS FOR WIRELESS CHARGING

1. This unit will wirelessly charge Qi certified mobile phones. Devices with other wireless charging standard will not be supported (such as PMA wireless charging is not supported). Remove your THICK protective phone case for best charging performance.
 2. Remove your protective phone case with metallic or magnetic parts before wireless charging your mobile phone or device.
 3. Do not place any magnetic object, magnetic stripe card (such as a credit card) or metal object (such as coins, keys) on the charging pad during wireless charging in process.
 4. Do not place your mobile phone on the wireless charging pad when conductive materials (such as metal or magnetic objects) are placed BETWEEN your phone and the wireless charging pad. The mobile device may not charge properly or may cause overheating and damage.
 5. Do not place your mobile phone on the wireless charging pad with a magnetic stripe card (such as a credit card) or radio-frequency identification (RFID) card (such as a transportation card or key card) placed at the back of your phone or placed at the back of your phone protective case. The cards may be damaged.
 6. Do not place any liquid container on the wireless charging pad.
 7. Place the unit on a flat surface for the stability of your mobile device during wireless charging.
- NOTE:** The wireless charging process may generate heat that may cause your mobile device and wireless charging pad to get warm to the touch. This is natural for wireless charging devices.

WARNING! Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING! Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Please read rating label at the bottom of system for power input and other safety information.

FCC and IC Information:

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warnings: The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and users can obtain Canadian information on RF exposure and compliance from the Canadian Representative Burnport Holdings Ltd. 72MT Belcher Pls, East, Calgary, Alberta, T2Z 2G1, CANADA. Tel: 403-257-4961

Canada IC statements

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

- Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf.
- Cet émetteur ne doit pas être Co-placé ou ne fonctionnant en même temps qu'aucune autre antenne ou émetteur. Cet équipement devrait être installé et actionné avec une distance minimum de 10 centimètres entre le radiateur et votre corps.

FCC&IC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the exemption from the routine evaluation limits in section 2.5 of RSS 102.

- This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 15 centimeters from user and bystanders.
- The interference potential of the device could cause the interference to the system whose fundamental is 120 KHz to 130 KHz.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Information for Users on Disposal of Old Equipment

[European Union]

This symbol indicates that the electrical and electronic equipment should not be disposed as general household waste at its end-of-life. Instead, the product should be handed over to the applicable collection point for the recycling in accordance with your national legislation.



By disposing of this product correctly, you will help to conserve natural resources and will help prevent potential negative effects on the environment and human health that could otherwise be caused by inappropriate waste handling of this product. For more information about collection point and recycling of this product, please contact your local municipal office, your household waste disposal service or the shop where you purchased the product.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

[Other Countries outside the European Union]

If you wish to dispose of this product, please do so in accordance with applicable national legislation or other rules in your country for the treatment of old electrical and electronic equipment.

CAUTION - Proper Installation

- Install the system in a place which is level, dry and neither too hot nor too cold.
- The unit should operate in the appreciate temperature range of 5 °C to 35 °C. The unit is equipped with the overheat protection and will stop charging if the wireless charging pad temperature reaches 60 °C.
- Install the system in a location with adequate ventilation to prevent internal heat from building up inside the unit.
- Leave sufficient distance between the system and TV.
- Keep the system away from TV to avoid interference with TV.

CAUTION - Proper Ventilation

 
To avoid risk of electric shock and fire, and to prevent damage, locate the apparatus as follows:

Front: No obstructions and open spacing.


Sides / Top / Back: No obstructions should be placed in the areas shown by the dimensions.

Bottom: Place on the level surface. Maintain an adequate air path for ventilation by placing on a stand with a height of 10 cm (3-15/16") or more.

Front View:

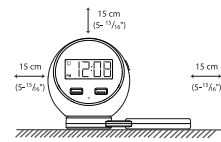

Side View:

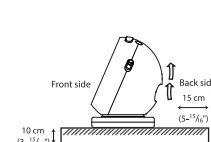 

This device complies with Part 18 of the FCC Rules. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and any other radio device.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

The device prevent from using with damping environment. Use only in according with described instruction in order not to damage the device.