
Test Setup photographs (PCE)

EUT Position: X-axis



EUT Position: Y-axis



EUT Position: Z-axis



Test Setup Photo of Radiated Measurement (Above 1000MHz)



Test Setup Photo of Radiated Measurement (below 1000MHz)

