



3.5"

alarm clock

Digital Picture Frame with WiFi



**Touch
screen**

touch your life

User's Manual

Table of Contents

Table of Contents.....	2
Important Safety Precautions.....	3
Cleaning the LCD Screen.....	3
Cleaning the Digital Picture Frame.....	3
Introduction.....	4
What's In the Box.....	5
Setting Up the Digital Alarm Clock.....	5
Start Using Digital Alarm Clock.....	5
Go to Main Menu.....	5
Display Photos in Local File.....	6
Play Music in Local File.....	6
Playback Videos in Local File.....	7
Setup Menu.....	8
Date and Time Setup.....	8
Alarm Setup.....	8
Music Setup.....	9
Photo SlideShow Setup.....	9
Hardware System Setup.....	10
WiFi Setup.....	10
Setup from Webpage	10
Frame Channel setup	11
Picasa setup	11
Framelt Setup	11
Photo Mail Setup.....	12
Network Function.....	13
Weather widget.....	13
Photo Album.....	13
Photo Mail.....	14
Internet Radio.....	15
YouTube.....	17
Technical Specification.....	18

Important Safety Precautions

Always follow these basic safety precautions when using your Digital Picture Frame. This will reduce the risk of fire, electric shock, and injury.

Warning: To reduce the risk of fire and shock hazard, do not expose this product to rain or moisture.

Warning: To prevent the risk of electric shock, do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

- The Digital Picture Frame is for indoor use only.
- Unplug the Digital Picture Frame before performing care and maintenance.
- Do not block the ventilation holes on the back of the Digital Picture Frame at any time.
- Keep your Multimedia Digital Picture Frame out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the Digital Picture Frame.
- Only use the AC adapter included with the Digital Picture Frame. Using any other power adapter will void your warranty.
- Unplug the power cord from the outlet when the unit is not in use.

Cleaning the LCD Screen

Treat the screen gently. The screen is made of glass and can be scratched or broken.

To clean fingerprints or dust from the LCD screen, it is recommended to use a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.

If you use a commercial LCD Cleaning Kit, do not apply the cleaning liquid directly to the LCD screen. Clean the LCD screen with cleaning cloth moistened with the liquid.

Cleaning the Digital Picture Frame

Clean the outer surface of the Digital Picture Frame (excluding the screen) with a soft cloth dampened with water.

 
Introduction

Welcome to the Digital Alarm Clock! Now you can display your digital photos directly from your memory card, no computer is necessary. Simply insert a memory card into the Digital Picture Frame, and turn on the power. You'll be treated to a slideshow of your photos. It's as easy as that. You can also display individual photos with your slide show.

The Digital Alarm Clock includes these key features:

- Displays Time, Calendar, Alarm.
- Displays digital photos (JPEG), Play Music and Video without a computer.
- WiFi function to connect with your AP router to internet for YouTube, Internet Radio, and Internet Photo Album, Weather Forecast.
- Compatible memory cards includes Secure Digital™, MultiMedia Card™.
- Displays JPEG images on digital cameras.
- Supports up to 64 Mega Pixel image files (JPEG format).
- Control the main functions on touch screen.
- 512MB Internal Memroy.
- Bright TFT LCD screen.
- USB2.0 high-speed connection to connect to your PC.

To learn more about your new Digital Alarm Clock's Features, and takes full advantage of them, please take a few minutes to read this User's Guide.

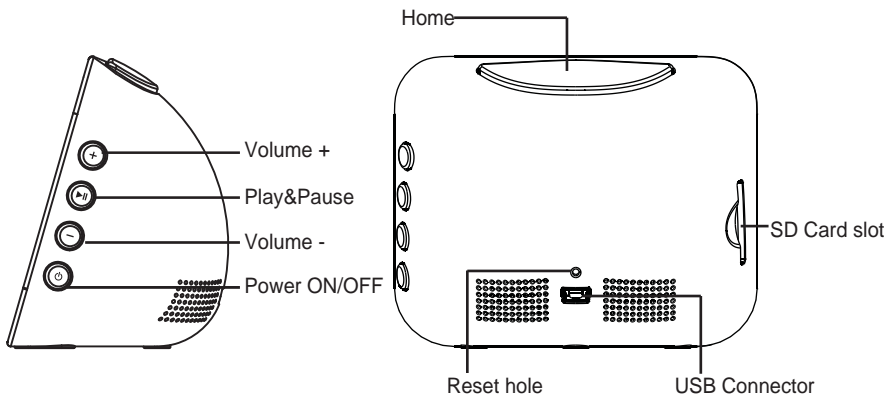

What's In the Box

Digital Alarm Clock
AC Power Adapter (5V, 2A) with USB Cable.
User's Guide

Setting Up the Digital Alarm Clock

 
The Digital Alarm Clock is easy to set up. Just follow these steps:

- 1.Plug the AC power Adapter into the Digital Alarm Clock and into a wall outlet.
- 2.Click the Power button to turn on the Digital Alarm Clock.
- 3.Press the Setup icon in the bottom-right of screen. You may start to setup Time and Date.
- 4.You may press the left / right arrow to adjust Hour, Minute, Year, Month, and Day.
- 5.You may press the Home icon in the bottom-right corner on the screen or click the Home button on the top of Digital Alarm Clock.

Start Using Digital Alarm Clock

Go to the Main Menu



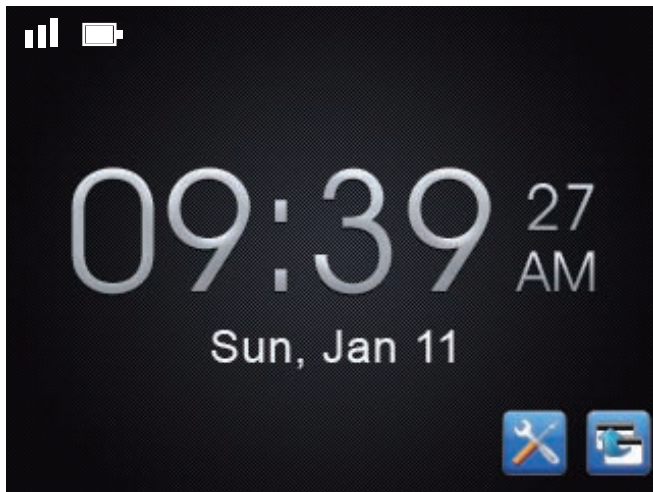







- 1.In time screen, please press "back icon" go to Main Menu or click "Home" button twice.



- 2.In any function screen, please click "Home" button once back to Main Menu.

Display Photos in Local File





1. When you are in Main Menu, please press "Files" icon on screen.
2. It will display Photos, Music, and Videos icon on screen.
3. Press Photos icon on screen, you will see SD Card and Memory icons on screen if you insert SD Card into Digital Alarm Clock.
4. Selecting location, it starts to slide show photos with music if you have music file in it.
5. Press anywhere on screen, you will see the functions on screen.

Icon	Action
	Previous Photo / You may slide left either
	Follow Photo / You may slide right either
	Music on/off
	Volume up
	Volume down
	Pause
	Send Pictures by email
	Copy (Only show when you are in SD card location)
	Delete (Only show when you are in Memory location)
	Back

Play Music in Local File







1. When you are in Main Menu, please press "Files" icon on screen.
2. It will display Photos, Music, and Videos icon on screen.
3. Press Music icon on screen, you will see SD Card and Memory icons on screen if you insert SD Card into Digital Alarm Clock.

4. Selecting location, it will list the Audio file names on screen and playing first song on the list. Press the audio file name on the screen to play music which you are choosing.
5. Using buttons on the right side of Digital Alarm Clock as below.

Icon	Action
	Previous Song
	Next Song
	Copy
	Back to previous menu

Playback Videos in Local File

1. When you are in Main Menu, please press "Files" icon on screen.
2. It will display Photos, Music, and Videos icon on screen.
3. Press Videos icon on screen, you will see SD Card and Memory icons on screen if you insert SD Card into Digital Alarm Clock.
4. Selecting location, it will list the Video file names on screen. Press the Video file name on the screen to play Video which you are choosing.

Icon	Action
	Volume Up
	Volume Down
	Previous Movie
	Play / Pause
	Next Movie
	Back

Setup Menu

Date & Time Setup

Please refer to following Date and Time Setup screen Image.



- 1.You could press Left / Right arrow beside numbers to adjust Hour, Minute, Year, Month, and Day.
- 2.You may press on screen to choose AM/PM and 12H/24H.

Alarm Setup

 
Please refer to following Alarm Setup screen Image



- 1.You may setup Alarm Time by arrows which beside numbers.
- 2.You need to setup On/Off to active alarm function.
- 3.You could select Audio file to become your favorite alarm music.

Music Setup


Please refer to following Music Setup screen Image

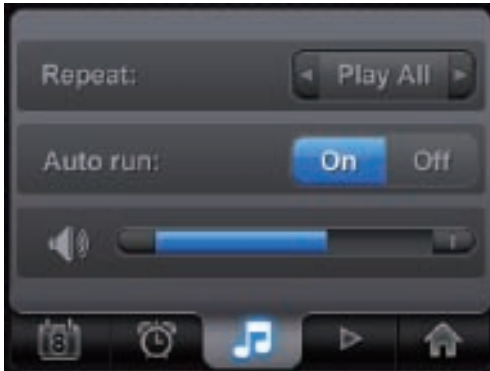

- 1.Repeat Function: Repeat / Play All / Shuffle /
- 2.Auto Run Function: On / Off
- 3.Audio Volume Setup

Photo Slideshow Setup

 Please refer to following Photo Slideshow Setup screen Image

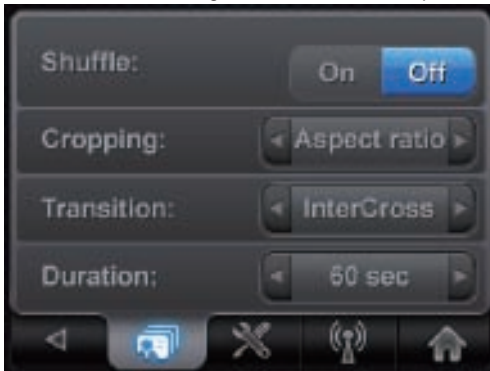

1. Shuffle : On / Off
2. Cropping : Stretch / Aspect Ratio / Smart Crop
3. Transition : None / Random / Left-Right / DoorClose / InterCross / Fade In / Mosaic / Page Switch / Sepia / Ken Burn /
4. Duration : 3 sec / 5 sec / 15 sec / 60 sec / 5 mins

Hardware System Setup

1. Brightness Setting : To adjust panel brightness.
2. Language Setting : English / Spanish / German / Portugal / Italian / Dutch / French
3. Upgrade setting : To upgrade firmware version by SD card.
4. Reset to Default : To setup as original factory settings.
5. Power Saving : Set power saving time in 30 seconds/ 3 minutes/ 10 minutes/ 30 minutes/ 1 hour/ No
6. Temperature Unit : Centigrade / Fahrenheit

WiFi Setup

1. Press the Settings Icon in Main Menu.
 2. Press the “Right Arrow” icon in the bottom menu. You can find “WiFi Setup” icon in the bottom menu line.
 3. Press the “WiFi Setup” icon then Digital Alarm Clock will search all available WiFi signals in your area.
 4. Choosing your WiFi signal and Digital Alarm Clock will connect to it.
- Note: Digital Alarm Clock will ask you to input SSID key to access if your SSID was secured.

Setup from Webpage

You could setup Digital Alarm Clock throw browser on your PC or Laptop.

1. Enter IP address, which show on Digital Alarm Clock, on the PC browser.
2. Keep your Digital Alarm Clock connecting with WiFi.
3. You can see the Following Page on your PC browser.



 
4. You can choose your display language.
5. You also can set up Brightness, Audio Volume, Temperature Unit, and Power saving function in this page.

Frame Channel



Please enter your Frame Channel Username and Pin code then press set.

Picasa Setup

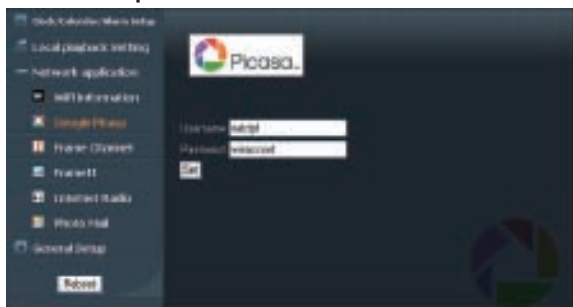

Please enter your Picasa ID and Password then press OK.

FrameIt Setup



- 1.Login <http://claimit.frameit.com>
- 2.Enter the registration token xxxx-xxxx on the web site.
- 3.Click the continue button to finish on line registration.
- 4.Press the continue button on this page to finish configuration.

Photo Mail Setup



1.Please enter your POP3 and SMTP server setting in this webpage.

Example for Gmail:

POP3 Server Setting

 
Server : pop.gmail.com
 Port : 995
 SSL : on
 User name: username@gmail.com
 Password: your password

SMTP Setting

Server : smtp.gmail.com
 Port : 465
 SSL : on
 User name: username@gmail.com
 Password: your password

Then please click "set"

Network Function

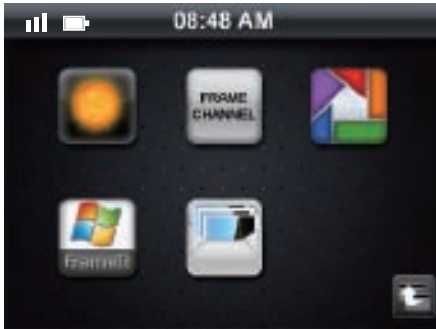

There are 5 functions in Network.

1. Weather
2. Frame Channel
3. Picasa
4. Framelt
5. Photo Mail

Note: You need to setup Web Photo Album on the Website Setup Page before you use.

Weather Widget





1. Digital Alarm Clock can throw internet to get weather information. It doesn't just show weather of today, you also could check 3 days after weather forecast in your area.
2. Press screen, you also can check other city weather by typing in city name.



Photo Album


After you setup the Photo Album from setup website page, you can press the icon to watch your internet photos on Digital Alarm Clock.

Photo Mail

1. Click  icon in main menu.
2. You can see "Photo Mail" icon on the screen and click it.
3. After your Photo Mail setting, please refer to page 12, you can click Mail Receive icon on the right of screen.
4. You can click  icon to receive photo mail.

Internet Radio

 1. Select  icon in the main menu.
2. Press  icon to search Radio station List.
3. Press your favorite station on the screen and list to life radio.

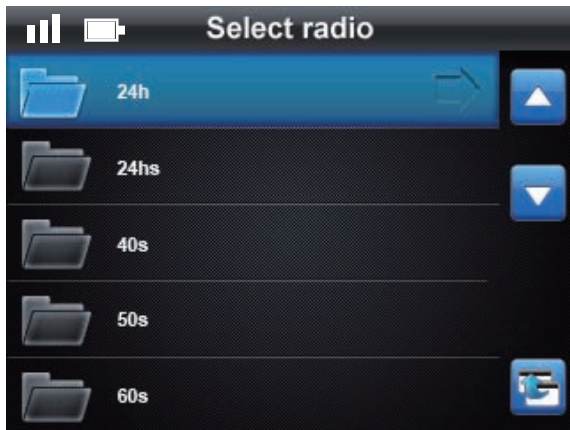

Note: you need to keep WiFi connecting with listen internet radio.

Add Internet radio channel from webpage

1. Go www.shoutcast.com, in the down side of the page, choose: Change Default Player Settings



2. Click: I want to listen using my own media player then Save. (Download free Winamp program if you don't have.)



 
3. Go back to www.shoutcast.com. a. Choose the MP3 format station only b. Click TUNE IN



4. The Radio will be played with Winamp automatically. Click the Playing Info area (in red square)



5. It will show the Radio Station Info as below, Please copy the address:

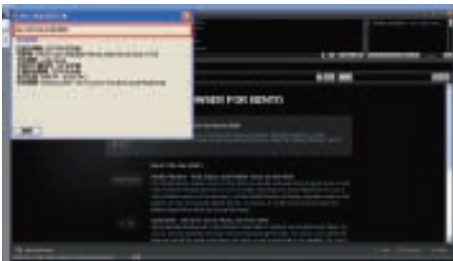

6. Go 3.5" Diamond Set Up page: (please find the info in user manual)

- a. Make a Name
- b. Copy the address in the url, then click "add radio"
- c. Reboot the Unit, if the Unit not reboot automatically, please reboot by hand

 


7. After Reboot the Unit, you could see the radio station has been added.

YouTube

1. Please click  in Main Menu page.

2. You can see Youtube list on screen and click your favorite video.

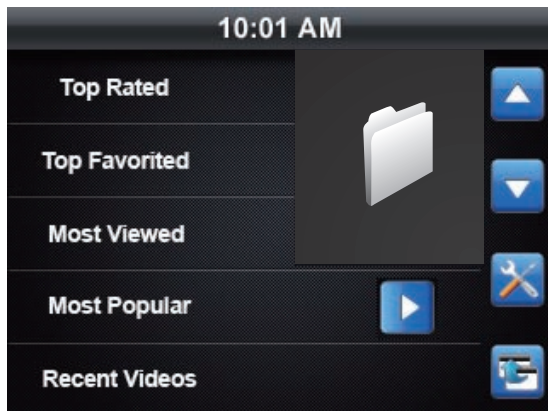

Technical Specification

Products :	3.5" LCD Touch Screen Digital Alarm Clock
Resolution :	320 x 240 Pixel
Memory Card Formats:	Secure Disk™ , Multi Media Card™
File Format:	Photo : Standard JPEG Audio : MP3, AAC*, WMA* Video : Motion Jpeg, Mpeg I, II*, IV* * : customer needs to prepare royalty for specific codec
Features:	Slide Show Mode Multiple Transitional Styles for Slide show Digital Alarm Clock Internet Weather widget Internet Photo Album Internet Photo Mail Internet Radio YouTube
USB Ports:	USB 2.0
Power Input:	100V-240V AC, 50~60Hz
Output:	5V DC, 2A
Certification:	CE/FCC/PSE (Adapter)/RoHS
Internal Speaker:	1W x 1

FCC warning statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.