

Worthy of Your Fondest Memories

3.5 inch

Digital Picture Frame



User's Manual

Congratulations on purchasing the 3.5" portable digital picture frame.

QUICK START


1. Insert a SD/HC or MMC memory card into the slot on the right side of the frame
2. Power the frame On by pressing the  button.
3. Automatic picture slideshow will start after a few seconds.

Table of Content

Overview.....	2
What's Included.....	3
Getting Started.....	4
Internal Memory and Memory Card Slot.....	4
Thumbnail Screen.....	5
Viewing a Single Picture.....	5
Start Slideshow	5
Other Options	6-7
Rotate Photo, Zoom Photo , Copy Photo	6
Delete Photo, Adjust LCD Color.....	7
Display Settings and Tools	8
Recharging the frame	9
Desktop Software	9
FAQs.....	10
Technical Specifications.....	11
Important Product Safety Instructions.....	12
Other Notices and Precautions	13
Cleaning the Digital Picture Frame	13-14

Congratulations on purchasing the 3.5" digital picture frame. Carefully read and follow all warnings and instructions in this manual before you begin to use this digital picture frame. Failing to follow the warnings can result in personal injury or damage to the digital picture frame.

Important:

Please keep this user manual in a convenient location for future referencing .

Overview

You new digital picture frame lets you view photos without a computer.

An automatic, continuous slide show lets you enjoy all of you photos with ease.

The built-on stand pulls out to easily stand the frame on any flat surface.

Photos can be viewed directly from memory cards or from the frames's built-in memory.

The frame's built-in rechargeable battery makes it easy to carry the frame with you wherever you go.

What's Included


Included in the box:

- Digital Picture Frame
- User Manual
- USB cable (Use to charge)



Getting Started





To begin using your digital picture frame right away, follow these simple steps.

1. Connect the frame to a computer's USB port using the mini USB cable to charge the frame. Once fully charged you can use the frame for up to 2 full hours.
2. Once the frame is fully charged insert a memory card (SD/HC or MMC) into the card slot on the side of the frame. Be sure that the logo on the memory is facing you when inserting the card into the slot.
3. A slide show will begin automatically . To stop the slide show press  button twice.

Internal Memory and Memory Card Slot

Your digital picture frame has the capacity to hold up 30 pictures.

The slot marked SD/MMC is meant to be used for your regular memory card, such as the one you use in your camera.

To select form the various types of memory, press  button until you see " Select Card " screen. To select the desired memory type use the  or  button . Press  to access the selected memory type.

Thumbnail Screen

This screen shows thumbnail versions of all photos on the selected memory source. Six photos are displayed at a time. Use this screen to select a single photo to display, or to start a slide show of all of the photos.



Viewing a single Picture:

1. Press ◀ or ▶ to navigate through your pictures
2. Once you have selected a picture of your choice, press ≡ button
3. Your selected picture will display on the screen
4. To start slideshow press ≡ button at any time
5. To pause the slide show at any time press ⏸ button
6. To resume slide show press ≡ button
7. To return to the thumbnail view press ⏸ button twice if in slide show mode, If paused press ⏸ button once to return to thumbnail view.





Start Slideshow of Pictures:

1. Press and hold ≡ button
2. A sub menu will appear on the bottom left hand corner
3. Use ◀ or ▶ buttons to select "Start Slideshow"
4. Press ≡ to start slideshow





Other Options

In the slide show mode, you can press and hold down the  button to access the following : **Rotate Photo, Zoom Photo, Copy Photo, Delete Photo, Adjust LCD Color**. To exit at any time press  button.

Rotate Photo:

Using the  or  buttons highlight "Rotate Photo". Press  to rotate the picture on screen. To exit press  button.

Zoom Photo:

Using the  or  buttons highlight "Zoom Photo". Press  to zoom in and out of the picture displayed on screen. To exit press  button.

Copy Photo:

(This option is only available when viewing pictures from memory card) Using the  or  buttons highlight "Copy Photo". Press  to copy the picture on screen to the internal memory. To exit press  button.

Delete Photo:



(This option is only available when viewing pictures form internal memory) Using the ◀ or ▶ buttons highlight "Delete Photo" . Press ≡ to delete the picture on screen. To exit press ⏻ button





Adjust LCD Color:

Using the ◀ or ▶ buttons highlight "Adjust LCD Color". Press ≡ to adjust the display. You will have the option to adjust brightness, contrast, tint , and color. Press and hold ◀ or ▶ buttons to change options from brightness to color, the selected option will be highlighted in blue with a white border, Continuously pressing the ▶ button will increase the amount and pressing the ◀ button will decrease the amount. Once you have made your adjustments press ⏻ button to exit this screen.

Display Settings and Tools

Additional settings will allow you to access the following: **Display image size, Slideshow transitions, Slideshow Speed, Connect to PC, Power Saving, Factory Default.**

Press  button until you see the 'Select Card' screen. Press and hold  button until the display setting appear.

Use  or  buttons to highlight your selection. Press  to make changes, Press  button to exit a selected option.

Menu Option	Sub-Menu Option	Description and function of operation
Display image size	Original	Picture displays as is
	Optimal	Picture will be adjusted to fit the display screen
Slideshow Transitions	Normal	Select Transition Effect
	Random	
	Top Bottom	
	Curtain	
	Open Door	
	Cross Comb	
Slideshow Speed	Fast	Select Transition Effect
	Medium	
	Slow	
Language	English (only)	
Connect PC	Refer to Optipix Desktop Software section for instructions	
Power Saving	Select your power saving options	
Factory Default	Resets the frame to factory settings	

Recharging the Frame

Your Digital Picture Frame charges directly from the USB cable. Simply plug your Digital Picture Frame into your computer using your USB Cable. A fully charge takes approximately 2 hours to complete.



Indicate that the battery power is low and needs charging



Indicate that the charging in progress



Indicate that the Digital Picture Frame is completed charged

Desktop Software

The Software is designed to help you find, optimize and transfer picture to your frame or any memory card. The software, residing on your computer, will guide you through 3 Easy Steps:

1. Select your pictures
2. Optimize your pictures
3. Transfer your pictures

The software will help you:

- View your vertical photos the right way
- Sharpen your photos
- Find and transfer photos to your frame
- Fit more pictures on your frame

Note: To maximize the use of the internal memory on your frame please use software to optimize your pictures before saving to internal memory and or viewing pictures directly from your SD/HC or MMC memory cards.

FAQs

1. How to power on / off?



To power on press  button



To power off press and hold down  button for 3 seconds.

2. How to browse through your photos?



Press  or  buttons to browse through pictures.

3. How to copy a single photo from SD card to internal memory?

If in thumbnail View press and hold  button until a sub menu appears on the bottom left hand corner. Use the  or  buttons to select "Copy Photo".

Press  button to make the selection. Select " Copy Selected " by pressing  button. "OK " will display when the transfer is completed.

4. How to delete photo from internal memory?

Choose the photo you want to delete in the internal memory and hold the  button for 3 seconds, release then choose "Delete Photo", then select "Delete Selected ", Finally press  button to confirm delete.

Technical Specification

Product: 3.5" Digital Picture Frame

Resolution: 320 X 240 pixel QVGA

Button: 4 Buttons (Power / Exit, Menu / Select , Left /UP , Right / Down)

USB interface: USB 2.0 full speed

Internal Memory: 2.0MB . Saves up to 30 photos at low picture size

File formats: JPEG

Display Colors: 16.7 M Colors

Dimensions: 95 X 77 X 13 (mm)

Power: li-ion poly battery 3.7 V last up to 2 hours when fully charged

Charger: Charged by USB port

Certifications: ROHS /CE /FCC

Important Products Safety Instructions

- Always handle the Digital Picture Frame with care.
- Avoid touching the LCD screen. Finger prints may be difficult to fully remove.
- Always position the Digital Picture Frame on a stable and level surface.. Unstable surface can cause the Digital Picture Frame to topple and fall which will result in possible damage.
- Avoid exposing the Digital Picture Frame to direct sunlight or high temperatures. This may result in damage or shorten life expectancy of the frame.
- Do not place it near heat sources such as radiators, heat registers or other appliances that generate heat.
- Orient the Digital Picture Frame away from direct sunlight to reduce glare. Avoid exposing the Digital Picture Frame to rain, water, moisture, or high humidity.
- Do not place it near basins or sinks where it may come in contact with water.
- Never place heavy or sharp objects on the LCD panel, frame or USB cord.
- Keep the Digital Picture Frame well ventilated and away from high temperatures to avoid damaging the Digital Picture Frame.

Other Notice and Precautions

Caution:

Never remove the plastic casing. There are no end user serviceable parts inside. Do not attempt repairs your self . The warranty does not cover repairs or attempted repairs by anyone not authorized by the Authorized Dealer. If the frame begins to emit smoke, abnormal noises, or a strange odor, immediately turn it off. Contact the authorized dealer's services center.

Cleaning the Digital Picture Frame

MAKE SURE THE DIGITAL PICTURE FRAME IS TURED OFF

How to clean the screen:

1. Wipe the screen with a clean, soft, lint-free cloth . Use the micro fiber protective carrying case to wipe the screen clean .This removes dust and other particles.
2. If it is still not clean, apply a small amount of nom-ammonia, non- alcohol based glass cleaner on a clean, soft , lint-free cloth to clean the screen.

How to clean the plastic casing:

1. Use a soft, dry cloth.
2. If it is still not clean, apply a small amount of nom-ammonia , non-alcohol based and mild non-abrasive detergent on a clean, soft , lint-free cloth to clean the surface.

Disclaimer

Authorized dealer does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing, Some chemical cleaners have been reported to damage screen and/or display case. Authorized dealer will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

NEVER SPAY OR POUR LIQUIDS DIRECTLY ONTO THE SCREEN OR PLASTIC CASING

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help