

Worthy of Your Fondest Memories

**3.5 inch**

**Digital Picture Frame**



**User's Manual**

Congratulations on purchasing the 3.5" portable digital picture frame.

## QUICK START

1. Insert a SD, MS,xD andMMC memory card into the slot on the top of the frame
2. Power the frame On by pressing the on/off button.
3. Automatic picture slideshow will start after a few seconds.

## Table of Content

Overview.....	2
What's Included.....	3
Getting Started.....	4
Internal Memory and Memory Card Slot.....	4
Thumbnail Screen.....	5
Viewing a Single Picture.....	5
Start Slideshow .....	5
Other Options .....	6-7
Rotate Photo, Zoom Photo , Copy Photo .....	6
Delete Photo, Adjust LCD Color.....	7
Display Settings and Tools .....	8
Recharging the frame .....	9
Desktop Software .....	9
FAQs.....	10
Technical Specifications.....	11
Important Product Safety Instructions.....	12
Other Notices and Precautions .....	13
Cleaning the Digital Picture Frame .....	13-14

Congratulations on purchasing the 3.5" digital picture frame. Carefully read and follow all warnings and instructions in this manual before you begin to use this digital picture frame. Failing to follow the warnings can result in personal injury or damage to the digital picture frame.

### **Important:**

Please keep this user manual in a convenient location for future referencing .

### **Overview**

Your new digital photo frame lets you view photos connect with a computer.

An automatic, continuous slideshow lets you enjoy all of your photos with ease.


The built-on stand pulls out to easily stand the frame on any flat surface.

Photos can be viewed directly from memory cards or from the built-in memory.

## What's Included

### Included in the box:

- Digital Picture Frame
- User Manual
- USB cable
- AC power Adapter

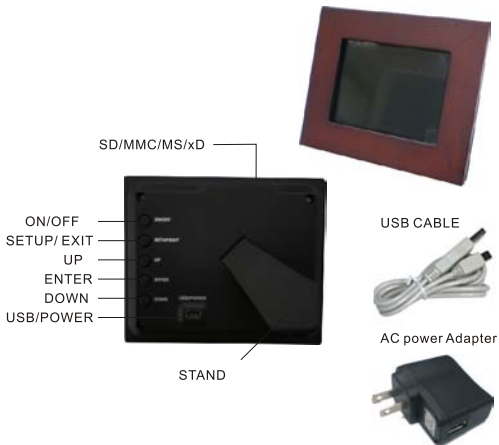

## Getting Started

To begin using your digital frame right away, follow these simple steps.

1. Connect the frame to a computer's USB port using the mini USB cable to working the frame or plug the AC power Adapter in to the Digital Picture and into a wall outlet.
2. Once the frame connect with your computer insert a memory card (SD/MMC OR MS OR XD) into the card slot on the top of the frame. Be sure that the logo on the memory is facing you when inserting the card into the slot.
3. A slideshow will begin automatically. To stop the slideshow press the Setup/Exit button.

### Internal Memory and Memory Card Slot

- Your digital picture frame has the capacity to hold up 17 pictures
- The slot marked SD/MMC/MS/XD is meant to be used for your regular memory card, such as the one you use in your camera.
- Select the various type of memory, press the on/off button until you see "Select card" screen. To select the desired memory type use the down or up button. Press the Enter button to access the selected memory type.

## **Thumbnail Screen**

This screen shows thumbnail versions of all photos on the selected memory source. 6 photos are displayed at a time. Use this screen to select a single photo to display, to start a slide show of all of the photos, to copy photos.

### **Viewing a single Picture:**

1. Press up or down to browse your pictures.
2. Once you have selected a picture of your choice, press the Enter button then the picture you selected will highlight on the screen.
3. To Viewing single picture press the Enter button once.
4. To start slideshow press the Enter button twice.
5. To pause the slide show press the Setup/Exit button.
6. To resume slideshow press the Enter button.
7. To return to the thumbnail view press the Setup/Exit button twice if in slideshow mode, If paused press the Setup/Exit button once to return to thumbnail view.

### **Start Slideshow of Pictures:**

1. From the thumbnail screen, press and hold setup/exit button
2. A sub menu will appear on the bottom left hand corner
3. Use up or down to select "Start Slideshow"
4. Press the Enter to select "Slideshow Selected" or "Slideshow All"
5. Press the Enter button to access.

## **Other Options**

In the slide show mode, you can press and hold the Setup/ Exit button to access the following: **Rotate Photo, Zoom Photo, Copy Photo, Delete Photo, Adjust LCD Color**. Press Setup/Exit button to exit.

### **Rotate Photo:**

Using the up or down button highlight "Rotate Photo". Press the Enter button to rotate the picture on screen. Press Setup/Exit button to exit.

### **Zoom Photo:**

Using the up or down button highlight "Zoom Photo". Press the Enter button to zoom the picture on screen. Press Setup/Exit button to exit.

### **Copy Photo:**

(This option is only available when viewing pictures from memory card) Using the up or down button highlight "Copy Photo". Press the Enter button to copy the picture on screen. Press Setup/Exit button to exit.

**Delete Photo:**

(This option is only available when viewing pictures from built-in memory card) Using the up or down button highlight "Delete Photo". Press the Enter button to delete the picture on screen. Press Setup/Exit button to exit.

**Adjust LCD Color:**

Using the up or down button highlight "Adjust LCD Color". Press the Enter button to adjust the display. You will have the option to adjust brightness, contrast, tint and color. Press and hold the up and down button to change options from brightness to color. Pressing up button will increase the amount and pressing the down button will decrease the amount. Once you have finished the adjustments press the Setup/Exit button to exit this screen.



## Display Setting and Tools

Additional settings will allow you to access the following: Display Image Size, Slideshow Transition, Slideshow speed, OSD Language, Connect PC, Power saving, Factory Default.

Press the Setup/Exit button until you see the 'Select Card's' screen.

Press and hold the setup/exit button until the display setting appear.

Use the up or down buttons to highlight you selection. Press the Enter button to make changes. Press On/off button to exit a selected option.

Menu Option	Sub-Menu Option	Description and function of operation
Display image size	Original	Picture displays as is
	Optimal	Picture will be adjusted to fit the display screen
Slideshow Transitions	Normal	Select Transition Effect
	Random	
	Top Bottom	
	Curtain	
	Open Door	
	Cross Comb	
Slideshow Speed	Fast	Select Transition Effect
	Medium	
	Slow	
Language	English (only )	
Connect PC	Refer to Optipix Desktop Software section for instructions	
Power Saving	Select your power saving options	
Factory Default	Resets the frame to factory settings	

## **FAQS**

### **1. How to power on or off?**

Connect your frame with your PC use mini cable or plug the AC power Adapter into the Digital Picture Frame and into a wall outlet to power on. Cut down the connection or press the ON/OFF button to power off.

### **2. How to browse through your photos?**

Press the down button to go to the next photo

Press the Up button to go to the previous photos.

### **3. How to copy a single photo from SD card to internal memory?**

If in the thumbnail view press and hold setup/exit button until a sub menu appears on the bottom left hand corner. Use the up or down button to selected "copy photo". Press the enter button to make the selection. Select "copy selected" by pressing the enter button. "OK" will display on the left top corner when the transfer is completed.

### **4. How to delete photo from internal memory?**

Choose you want to delete in the internal memory and hold the setup/exit button until a sub menu appears on the bottom left hand corner. Use the up or down button to selected "delete photo". Press the enter button to make the selection. Select "delete selected" by pressing the enter button. "OK" will display on the left top corner when the transfer is completed.

## **Technical Specification**

Products:	3.5"Digital Picture Frame
Resolution:	320X240 pixel super VGA
Button:	5 Buttons(ON/OFF, SETUP/EXIT, UP, ENTER, DOWN)
USB interface:	USB 2.0 full speed
Internal Memory:	Saves up to 17 photos
File formats:	JPEG
Display Colors:	16.7M Colors
Dimensions:	107.5*90*20(mm)
Certifications:	RoHS/CE/FCC

## **Important Products Safety Instructions**

- Proper Handling of the Digital Picture Frame
- Always handle with the Digital Picture Frame with care.
- Avoid touching the LCD screen. Finger prints may be difficult to fully remove.
- Always position the Digital Picture Frame on a stable and level surface. Unstable surface can cause the Digital Picture Frame to topple and fall which will result in possible damage or bodily injury.
- Avoid exposing the Digital Picture Frame to direct sunlight or high temperatures. This may result in damage or shorten life expectancy.
- Do not place it near heat sources such as radiators, heat registers or other appliances that generate heat.
- Orient the Digital Picture Frame away from direct sunlight to reduce glare. Avoid exposing the Digital Picture Frame to rain, water, moisture, or high humidity.
- Do not place it near basins or sinks where it may come in contact with water.
- Never place heavy or sharp objects on the LCD panel, frame or power cord.
- Keep the Digital Picture Frame well ventilated and away from high temperatures to avoid damaging the Digital Picture Frame.

## **Other Notice and Precautions**

### **Caution:**

Never remove the plastic casing. There are no end user serviceable parts inside. Do not attempt repairs yourself. The warranty does not cover repairs or attempted repairs by anyone not authorized by the Authorized Dealer. If the frame begins to emit smoke, abnormal noises, or a strange odor, immediately turn it off. Contact the authorized dealer's services center.

### **Cleaning the Digital Picture Frame**

- MAKE SURE THE DIGITAL PICTURE FRAME IS TURED OFF
- NEVER SPAY OR POUR LIQUIDS DIRECTLY ONTO THE SCREEN OR PLASTIC CASING

### **How to clean the screen:**

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner on a clean, soft, lint-free cloth to clean the screen.

**How to clean the plastic casing:**

1. Use a soft, dry cloth.
2. If it is still not clean, apply a small amount of non-ammonia, non-alcohol based and mild non-abrasive detergent on a clean, soft, lint-free cloth to clean the surface.

**How to clean the frame and base**

Use a soft, dry cloth.

**Disclaimer**

Authorized dealer does not recommend the use of any ammonia or alcohol-based cleaners on the LCD screen or plastic casing. Some chemical cleaners have been reported to damage screen and/or display case. Authorized dealer will not be liable for damage resulting from the use of any ammonia or alcohol-based cleaners.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help