

Displaying Your Favorite Pictures is Easy and Fun

12.1 inch

Digital Picture Frame



User's Manual

Table of Contents

Table of Contents.....	2
Important Safety Precautions.....	3
Cleaning the LCD Screen.....	3
Cleaning the Digital Picture Frame.....	3
Introduction.....	4
What's In the Box.....	5
Setting Up the Digital Picture Frame.....	5
Locating the Digital Picture Frame's Features.....	5
Using the Control Buttons and Remote Control.....	6
Use the Control Buttons.....	6
Use the Remote Control.....	7
Install and Replace the Remote Control Battery.....	7
Setting Up the Slideshow.....	8
Card Selection Screen.....	8
Mode Selection Screen.....	9
Thumbnail Screen.....	9
Display a Single Photo on the Full Screen.....	10
Controlling the Slide Show and Photo.....	10
Manually Change the Displayed Photo.....	10
Rotate the Photo.....	10
Enlarge the Photo.....	10
Copy the Displayed Photo to the Built-In Memory.....	11
Delete the Displayed Photo.....	11
Adjust the LCD Color.....	11
Add Music to the Slide Show.....	11
How to copy pictures from Flash Card into Built-in memory.....	12
Listening to Music.....	13
Control the Volume.....	13
Watching a Video.....	13
Setting Viewing Options.....	14
Advanced Operations.....	15
Connect to a Windows Computer.....	16
Disconnect the Digital Picture Frame from the Computer.....	17
Connect a USB Flash Drive.....	17
Frequently Asked Questions.....	18
Technical Specifications.....	19

Important Safety Precautions

Always follow these basic safety precautions when using your Digital Picture Frame. This will reduce the risk of fire, electric shock, and injury.

Warning: To reduce the risk of fire or shock hazard, do not expose this product to rain or moisture.

Warning: To prevent the risk of electric shock, do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

- The Digital Picture Frame is for indoor use only.
- Unplug the Digital Picture Frame before performing care and maintenance.
- Do not block the ventilation holes on the back of the Digital Picture Frame at any time.
- Keep your Multimedia Digital Picture Frame out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the Digital Picture Frame.
- Only use the AC adapter included with the Digital Picture Frame. Using any other power adapter will void your warranty.
- Unplug the power cord from the outlet when the unit is not in use.

Cleaning the LCD Screen

Treat the screen gently. The screen is made of glass and can be scratched or broken.

To clean fingerprints or dust from the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.

If you use a commercial LCD Cleaning Kit, do not apply the cleaning liquid directly to the LCD screen. Clean the LCD screen with cleaning cloth moistened with the liquid.

Cleaning the Digital Picture Frame

Clean the outer surface of the Digital Picture Frame (excluding the screen) with a soft cloth dampened with water.

Introduction

Welcome to the Digital Picture Frame! Now you can display your digital photos directly from your memory card. No computer is necessary. Simply insert a memory card into the Digital Picture Frame, and turn on the power. You'll be treated to a slideshow of your photos. It's as easy as that. You can also display individual photos, play video clips, and play background music with your slide show.

The Digital Picture Frame includes these key features:

- Displays digital photos (JPEG) without a computer.
- Simply insert a compatible memory card into the digital picture frame to show photos, play music or supported video files (memory card not included).
- Compatible memory cards include Secure Digital™, MultiMedia Card™, Compact Flash™, Memory Stick™, MemoryStick Pro™, Memory Stick Duo™, Memory Stick Pro Duo™ and xD Card.
- Instantly plays music with the integrated speakers.
- Digital photo slide Show with Music background.
- Displays JPEG images and motion JPEG files (AVI) stored on digital cameras.
- Supports up to 12 megapixel image files (JPEG format).
- Control the main functions with buttons on the frame or with the included infrared remote control.
- Bright TFT LCD screen.
- USB2.0 high-speed connection to connect to your PC.
- USB1.1 (Host) for connecting to your digital camera.
- Built-In Memory.

To learn more about your new Digital Picture Frame's features, and take full advantage of them, please take a few minutes to read this User's Guide.