



HP df1 130 Series

**Digital Picture Frame**  
**Marco de Fotos Digital**  
**Cadre Photo Numérique**

User Manual  
Manual del usuario  
Manuel de l'utilisateur



## FCC Compliance Statement

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.










**FCC Caution:** To assure continued compliance, only use shielded interface cables when connecting to computer or peripheral devices. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

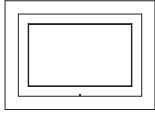This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Table of Contents

 
 
<b>FCC Compliance Statement</b> .....	<b>i</b>
<b>What's in the Box</b> .....	<b>1</b>
<b>Identifying the parts</b> .....	<b>2</b>
<b>Getting Started</b> .....	<b>3</b>
<b>Remote Control</b> .....	<b>5</b>
<b>Using the Picture Frame</b> .....	<b>6</b>
Main Menu .....	6
Photo mode .....	7
Video mode .....	9
Music mode .....	11
Time mode .....	13
Setting the Date, Time, and Alarm .....	14
<b>Setup Menu</b> .....	<b>15</b>
<b>Specifications - df1130</b> .....	<b>18</b>
<b>Frequently Asked Questions</b> .....	<b>19</b>
<b>Cleaning and Care Tips</b> .....	<b>20</b>
Cleaning the Screen .....	20
Cleaning the Frame and Backing .....	20
<b>Getting Help</b> .....	<b>21</b>

## What's in the Box

Qty	Item	Image
1	Digital Picture Frame	
1	Extra set of double mat*	
1	Remote Control Replacement Battery = CR2025	
1	Universal Power Adapter (12V, 1.5A)	
1	USB Cable	
1	User Manual	
1	Declaration of Conformity	
1	Quick Start Guide	
1	Warranty Document	


\* Select models only

## Identifying the parts

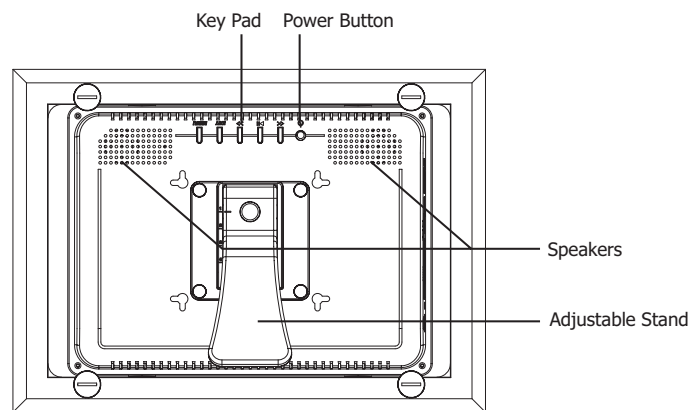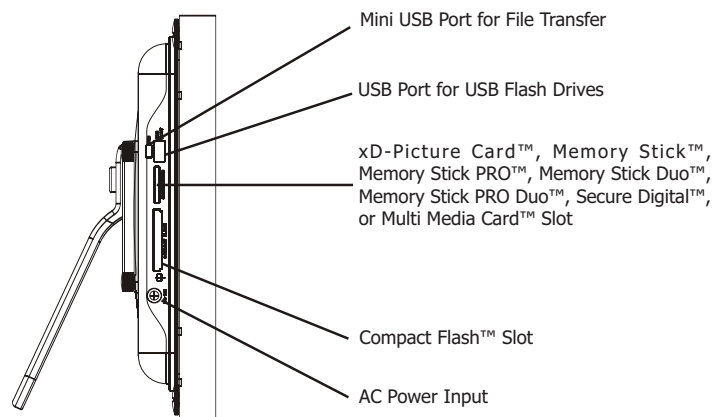


## Getting Started


1. Plug the adapter into a power outlet and connect the power cord into the DC input of the digital picture frame as illustrated below.

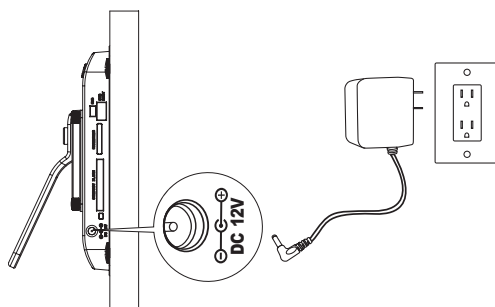


2. The HP Digital Picture Frame is preloaded with pictures that illustrate the basic features of this product. If you want to view these pictures, turn the frame on as illustrated in step 4. The slideshow will begin in a few seconds.
3. Insert a memory card or USB storage device (external memory) containing desired pictures, music, and/or video into the appropriate card slot or USB port as illustrated below. Note: Memory cards and USB storage devices must be orientated correctly.

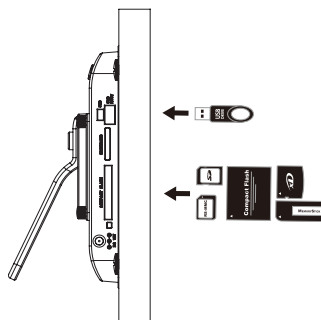


4. Press the POWER button.

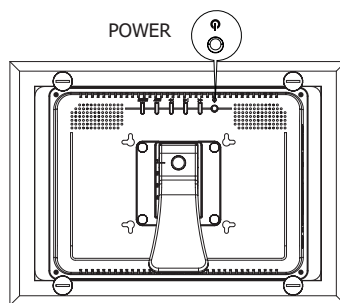

 5. A slideshow of your pictures will begin automatically in a few seconds. If music tracks are available on the same external memory device, the slideshow will be displayed with background music unless disabled in the **SETUP MENU**. Enjoy it and have fun!
6. In addition to the remote control, the digital picture frame has basic control buttons on the top of the frame as illustrated below.

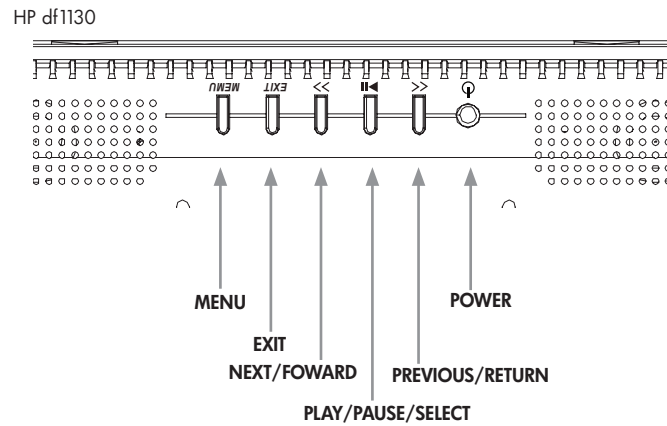



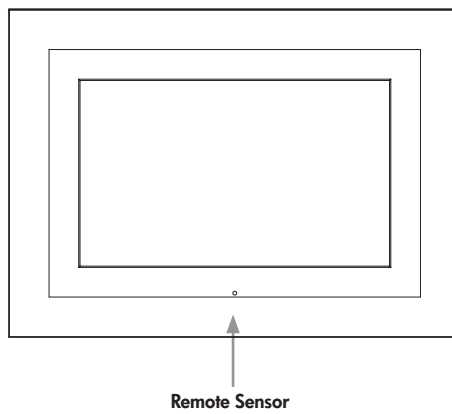













7. When using the remote control, point it at the remote sensor on the front of the frame as illustrated below.






# Remote Control






	<b>POWER</b> Press to turn the frame on or off.
	<b>SETUP</b> Press to access the Setup menu.
	<b>SLIDESHOW</b> Press to start a photo slideshow.
	<b>UP</b> Press to move up in Thumbnail mode or when setting options.
	<b>DOWN</b> Press to move down in Thumbnail mode or when setting options.
	<b>LEFT or PREVIOUS</b> Press to move left in menus or Thumbnail mode. Press to view the previous photo in Browse mode or Slideshow mode.
	<b>RIGHT or NEXT</b> Press to move right in menus or Thumbnail mode. Press to view the next photo in Browse mode or Slideshow mode.
	<b>ENTER</b> Press to change photo display mode (Slideshow, Browse, or Thumbnail). Press to play or pause music or video.
	<b>COPY/DEL</b> Press in Browse, Thumbnail, Video, Music mode to start the copy or delete process.
	<b>ROTATE</b> Press to rotate the displayed photo in Browse mode.
	<b>ZOOM</b> Press to enlarge photos in Browse mode.
	<b>VOLUME + / -</b> Press the + button to increase volume. Press the - button to decrease volume.
	
	<b>MUTE</b> Press to mute audio. Press again to restore audio.
	<b>EXIT</b> Press to exit the current page or mode.
	<b>STOP</b> Press to stop slideshow, music, or video playback.

## Using the Picture Frame

### Main Menu

After the Digital Picture Frame is turned on, the slideshow starts automatically after a few seconds. Press the  button to display the Main Menu as shown below.




- Use the  and  buttons to highlight a mode icon. Press the  button to select the desired mode.
- There are 5 modes available: Photo, Video, Music, Time, and Setup.




### Memory Source Selection

The HP Digital Picture Frame can playback content from internal and external memory devices such as USB flash drives and memory cards typically used with digital cameras. More than one external memory device can be inserted at any given time. However, content from only one memory source can be selected for playback.

To select the desired picture source:

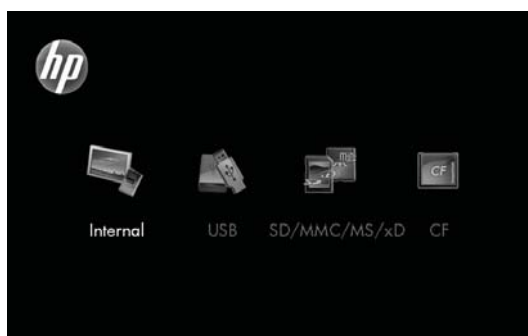1. From the Main Menu, press  to view the memory source options. The memory source options will appear as illustrated below.






- Use the  and  buttons to highlight the desired memory source icon and press the  button.

## Photo mode






The Photo mode allows you to view images in three viewing modes: **Slideshow mode**, **Browse mode**, and **Thumbnail mode**.

### - Slideshow mode







There are three ways to enter Slideshow mode.

- Slideshow mode will begin automatically a few seconds after the frame is powered on or when an external memory card is inserted.
- From the Main Menu, select  and press the  button.
- From any screen, press the  button.

### - Browse mode







- When in Slideshow mode, press the  button once to enter Browse mode.
- Use the  and  buttons to view previous or next photo.
- Press the  button to zoom in the photo.
- Press the  button to rotate the image 90 degrees clockwise.





### - Thumbnail mode

- When in Browse mode, press the  button once to enter Thumbnail mode.
- Use the , , , and  buttons to move among the images.
- Select a photo and press the  button to start a slideshow with the selected picture.

## Deleting photo files from internal memory

Photos can be deleted in both Browse mode and Thumbnail mode.

- In Browse mode, use  and  to select the photo to be deleted, then press the  button. Using the  and  buttons, select **YES** in the pop-up window to proceed with the deletion, or **NO** to cancel. Press  to confirm.











2. To delete photos in Thumbnail mode, select the photo to be deleted and press the  button. Using the  and  buttons, select **SINGLE** in the pop-up window to delete the highlighted picture, **ALL** to delete all photos in internal memory, or **NO** to cancel. Press  to confirm.

- This frame only allows deleting files from internal memory.

### Copying photo files to internal memory

Photos can be copied in both Browse mode and Thumbnail mode.







First, check to make sure an external memory source is selected (refer to "Memory Source Selection" on page 6).


1. In Browse mode, use  and  to select the photo to be copied, then press the  button. Using the  and  buttons, select **YES** in the pop-up window to copy, or **NO** to cancel. Press  to confirm.
2. In Thumbnail mode, select the photo to be copied and press the  button. Using the  and  buttons, select **SINGLE** in the pop-up window to copy the highlighted photo, **ALL** to copy all photos to internal memory, or **NO** to cancel. Press  to confirm.



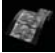



 - This frame only copies files from external memory to internal memory.
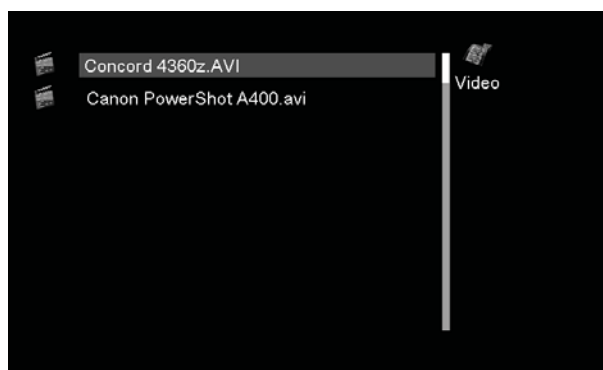
## Video mode








### Viewing a video file

1. From the Main Menu, select  and press . The first video file will start playing automatically.
2. Press  to show the video file list. To play a different video, use the  and  buttons to select it, then press  to begin playback.










- Use the  and  buttons to fast forward and reverse the video.
- Use the  or  buttons to adjust the audio volume.
- Use the  and  buttons to skip to the next video file or return to the previous video.

### Deleting video file from internal memory

1. When in Video mode, press  button to display the video file list if a video is playing, then use the  and  buttons to select the video file to be deleted from internal memory.
2. Press the  button, then use the  and  buttons to select **YES** to delete the file, or **NO** to cancel. Press  to confirm.

• This frame only allows deleting files from internal memory.

### Copying video files to internal memory

1. When in Video mode, press  button to display the video playlist if a video is playing, then use the  and  buttons to select the video file to be copied to internal memory.
2. Press the  button, then use the  and  buttons to select **YES** to copy the file, or **NO** to cancel. Press  to confirm.

- This frame only copies files from external memory to internal memory.










## Music mode

Music mode allows you to play audio files from internal memory or an inserted memory card. In this mode, the audio spectrum (if enabled) and play time are shown at the right side of the screen, while the playlist is displayed on the left.









• This frame only supports the MP3 audio file format.

## Playing music







1. Select  from the Main Menu and press the  button.
2. Use the  and  buttons to select a music file from the playlist on the left, then press  to start playback.
  - Use the  or  buttons to adjust the audio volume.
  - Press the  button once to mute the audio, press  again to restore the audio.

## Deleting music files from internal memory

1. When in Music mode, use the  and  buttons to select the music file to be deleted from the playlist
2. Press the  button, then use the  and  buttons to select **YES** to delete the music file, or **NO** to cancel. Press  to confirm.

• This frame only allows deleting files from internal memory.

### Copying music files to internal memory








1. When in Music mode, use the  and  buttons to select the music file to be copied to internal memory from the playlist.
2. Press the  button, then use the  and  buttons to select **YES** to copy the music file, or **NO** to cancel. Press  to confirm.


• This frame only copies files from external memory to internal memory.









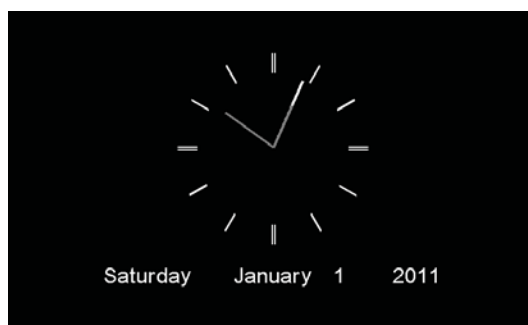





## Time mode

The Time mode has 3 different viewing styles available: a monthly calendar and digital clock with a photo slideshow, a date & time display with a photo slideshow, or an analog clock with date.


- To enter the Time mode, select  from the Main Menu and press the  button.
- Use the  and  buttons to view the previous month or the next month.
- Use the  and  buttons to change the slideshow photo (for calendar modes with slideshow only).
- Press the  button to switch between the three viewing modes.



## Setting the Date, Time, and Alarm

1. Press  to display the Setup menu.
2. Use the  and  buttons to select **Time Setup**, then press .
3. Use the  and  buttons to highlight the setting you would like to change (e.g. Date, Clock Time, or Alarm Time), then press .
4. Use the  and  buttons to move to different fields. Use the  and  buttons to change the value in each field. Press  again to save.





# Setup Menu

The Setup menu is displayed by pressing the  button.

The table below provides details of the settings available from with each mode.

Settings menu	Setting	Options	Description
<b>Photo Setup</b>	Display Mode	Slideshow	Choose the preferred viewing option in Photo mode.
		Thumbnail	
		Browse	
	Display Ratio	Fit to Screen	Display image in original aspect ratio, or resize the image by cropping the edges to fill the whole screen.
		Crop to Fill	
	Slideshow Speed	5 Seconds	Select the speed of your slideshow.
		15 Seconds	
		30 Seconds	
		1 Minute	
		5 Minutes	
	Slideshow Repeat	Once	Select whether to repeat playback the end of a slideshow.
		Repeat	
	Slideshow Transition	Random	Select a style of image transition.
		Snake	
		Partition	
Erase			
Blinds			
Random lines			
Grid			
Cross			
Spiral			
Rect			
Clock	On	Select <b>ON</b> to display time in Slideshow mode.	
	Off		
Auto Image Compression	On	Select <b>ON</b> to automatically compress images copied to internal memory.	
	Off		

<b>Time Setup</b>	Display Mode	Clock	Choose the preferred viewing option in Calendar mode.
		Calendar	
		Date and Time	
	Date	MM-DD-YYYY	Set the system date.
	Clock Mode	12 Hour	Select the displayed time format.
		24 Hour	
	Clock Time	HH:MM AM/PM	Set the system clock.
	Alarm Time	HH:MM AM/PM	Set the alarm clock.
	Alarm Frequency	Off	Select how often the alarm is activated.
		Once	
Daily			
Weekdays			
Weekend			
Alarm Volume	Low	Select the volume for the alarm.	
	Medium		
	High		
<b>Video Setup</b>	Display Mode	Full Screen	Display video to fill the screen, or to display it in its original size and aspect ratio.
		Original Size	
	Play Mode	Repeat	Select the mode for video playback.
		Once	
	Auto Play	On	Select <b>ON</b> to enable your video files to start playing automatically when you enter Video mode.
Off			
<b>Music Setup</b>	Play Mode	Repeat	Select the mode for music playback.
		Random	
		Once	
		Repeat One	
	Music Effect	Jazz	Select the audio effects for music playback.
		DBB	
		Normal	
		Rock	
		Pop	
		Classic	
Show Spectrum	On	Select <b>ON</b> to show the frequency spectrum in Music mode.	
	Off		
Auto Play	On	Select <b>ON</b> to automatically start music playback when you enter Music mode.	
	Off		

<b>System Setup</b>	Language	English	Set the on-screen language. The factory default is "English".
		繁體中文	
		Francés	
		German	
		Italiano	
		Deutsch	
		Português	
		Español	
		Русский	
	Türkçe		
	Brightness	Adjust the LCD brightness, contrast, saturation and tint. Use the  and  buttons to adjust the level.	
	Contrast		
	Saturation		
	Tint		
Wake Time Enabled	On Off	Select <b>ON</b> to power on the unit automatically at a preset time.	
Wake Time	HH:MM AM/PM	Set the time for the unit to power on automatically	
Sleep Time Enabled	On Off	Select <b>ON</b> to power off the unit automatically at a preset time.	
Sleep Time	HH:MM AM/PM	Set the time for the unit to power off automatically	
Wake/Sleep Frequency	Once	Choose how often to apply the Wake/Sleep Time settings.	
	Daily		
	Weekdays		
	Weekend		
Reset	Press the  button to restore all options and settings to the factory default.		
Version	Press the  button to view the current version of system firmware.		

## Specifications - df1130

Panel	
Size	11.3"
Aspect Ratio	16:9 ratio
Resolution	800 x 480 pixels
Power	
AC adapter	12V / 1.5A
Audio	
Internal speakers	1W x 2pcs
Connectivity	
USB Ports	1- USB 2.0 (Host for thumb drive) 1- Mini USB 2.0 (Connect to PC to manage internal memory and inserted external memory cards)
Storage/Media	
Internal Memory	128 MB
Supported Memory Cards	
Memory Card Slot 1	SD/SDHC, MMC, xD, MS
Memory Card Slot 2	Compact Flash (CF1)
Media Format Support	
Picture File Format	JPEG
Audio File Formats	MP3
Video File Formatss	MPEG-4, Motion JPEG
User Interface	
On-Screen Display Languages	English, French, Spanish, German, Italian, Portuguese, Dutch, Russian, Turkish, T. Chinese

## Frequently Asked Questions

**Q:** How do I set up my Digital Picture Frame?

**A:** It is very simple to get your Digital Picture Frame out of the box and running in just a few minutes. Just plug the power adapter into the Digital Picture Frame and into a standard wall socket. Insert a memory card into the appropriate card slot on the side of the Digital Picture Frame and turn it on. Your first slideshow will automatically start to play.

**Q:** What memory cards can the Digital Picture Frame read?

**A:** Compatible memory cards include CF, SD/SDHC, MMC, xD, and MS.

**Q:** I set up the Digital Picture Frame; why does it not turn on?

**A:** The adapter may be not securely connected to the Digital Picture Frame or wall socket, or the Power Switch may not be on. Please check if the adapter is properly plugged to the Digital Picture Frame and the wall socket.

**Q:** I have a memory card in the Digital Picture Frame; why can't I view my photos?

**A:** First, check whether the memory card is one of the listed above and the images are one of the formats listed in the **Specification on page 18**. Second, turn the Digital Picture Frame off and make sure that the memory card is facing the correct direction and is inserted all the way into the card slot and. Third, turn the Digital Picture Frame on; you should see the Select Mode Screen. Follow the **Card Selection** instructions to select your memory card.

Note: Some digital cameras save images in other formats. Please refer to your camera's manual if your photo format is not listed in the **Specifications**.

**Q:** Why is the picture display slower with some pictures and faster with others?

**A:** Higher resolution pictures will take longer to display. Try to use lower resolution pictures or down sampling your images. See your camera's operating manual for details on downsizing your photos.

**Q:** Does the Digital Picture Frame support all JPEG files?

**A:** No. The Digital Picture Frame supports the baseline JPEG files taken by a digital camera. It may not read all image files downloaded from the Internet or from other graphic applications.

## Cleaning and Care Tips

- ✓ Please power off the HP Digital Picture Frame before cleaning.
- ✓ **DO NOT** push on the screen too firmly.
- ✓ **DO NOT** spray or pour liquid cleaning agents directly on the screen or frame.
- ✓ **DO NOT** use ammonia, alcohol, or abrasive detergent cleaning agents.

### Cleaning the Screen:

1. Wipe screen with a clean, soft, lint-free cloth to remove dust and loose particles.
2. If further cleaning is required, apply an appropriate cleaning agent (approved for LCD displays) to a clean, soft, lint-free cloth and wipe the screen.

### Cleaning the Frame and Backing:

1. Use a clean, soft, lint-free cloth to remove dust and loose particles.
2. If desired, apply an appropriate cleaning agent to a clean, soft, lint-free cloth and wipe the appropriate surfaces.



## Getting Help

Should your HP Branded Product require service within the Warranty period, please contact the original point of purchase or an authorized HP reseller in your country. If service is not available at those locations, please contact an HP Branded Product warranty agent from the support contact list provided on this document. A support agent will work with you to troubleshoot your issue and if necessary, issue a Return Material Authorization (RMA) number in order to replace your HP Branded Product. For warranty claims, you will be required to provide a copy of your original dated sales receipt as proof of purchase and the issued RMA number. You will be responsible for shipping charges when shipping the product to the service center. The support agent will provide you with an address and you will also be responsible for any shipping charges to the warranty service center. Once your product is received by the support center, a replacement frame will be shipped back to you within 5 business days.

Contact/phone Support:	
Language	Contact/phone Support:
繁體中文	simp.chinese@hpodd.com
	trad.chinese@hpodd.com
Deutsch	deutsch@hpodd.com
Nederlands	hollands@hpodd.com
English	english@hpodd.com
Español	espanol@hpodd.com
Français	francais@hpodd.com
Italiano	italiano@hpodd.com
日本語	nippon@hpodd.com
한국어	korean@hpodd.com
Português	portugues@hpodd.com
Svenska	svensk@hpodd.com

Contact/Phone Support:			
Country	Language	Number	
<b>Europe Region (EMEA)</b>			
België	Nederlands/Deutsch	+ 32 2700 1724	
Deutschland	Deutsch	+ 49 6950073896	
España	Español	+ 34 914533458	
France	Français	+ 33 171230454	
Ireland	English	+ 353 1850882016	
Italia	Italiano	+ 39 269682189	
Nederland	Nederlands	+ 31 202015093	
Schweiz	Deutsch/Français/ Italiano	+ 41 18009686	
UK	English	+ 44 2073652400	
<b>North America</b>			
United States	English	1-866-694-7633	
Canada	English & Français	1-866-694-7633	
Country	Language	City	Number
México	Español	Mexico City	52.55.1204.8185
		Guadalajara	52.33.1031.3872
		Monterrey	52.81.1107.2639
Venezuela	Español	Caracas	58.212.335.4574
Colombia	Español	Bogota	57.1.508.2325
Perú	Español	Lima	51.1.705.6232
Chile	Español	Santiago	56.2.581.4977
Brasil	Português	Sao Paulo	55.11.5504.6633
Argentina	Español	Buenos Aires	54.11.6091.2399