

PAN DIGITAL®


Effortlessly Moving Images Out of your Camera and Into your Life



Digital Photo Frame User Guide

PAN1200-1300-1500DWPTFR

 Sign up now to enjoy the following benefits...

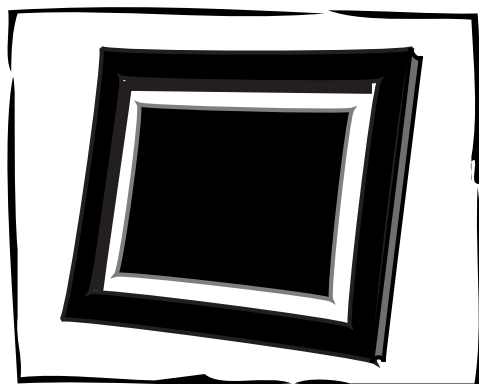

Qualify to win a FREE
digital photo frame!*

(valid in USA only)



Register your FREE
1-year warranty!**

Sign up now at...

<http://www.pandigital.net>

*For details, go to our website: www.pandigital.net

**The online signup is for the purpose of user and product registration. Failure to register does not in any way diminish any of your standard warranty rights, as described in the documentation included with your product.

NOTE: If you must mail your 1-year registration, please send your name, address, phone number, model & serial number, and when & where purchased to:
Pandigital, P.O. Box 2969, Dublin, CA 94568-2969 USA

Table of Contents

Introduction	4
DPF Key Features	4
Overview of the 12” and 13.3” DPF	5
Overview of the 15” DPF	6
Remote Control	6
PanTouch Interface	8
Control Buttons on DPF	9
About Selecting Options	9
Getting Started	10
The HOME Screen	10
SETUP Menu Overview	12
Select Media Source	13
PHOTOS	14
Display Photo Thumbnails Screen	14
Zoom or Rotate Photos	14
Import Photos into Internal Memory	14
Delete Photos from Internal Memory	15
Adjust Screen Colors	16
Optimal Image Display	17
Photo Import Method	17
PHOTO SLIDESHOWS	18
Slideshow of Photos in Internal Memory	18
Slideshow of Photos on your Media Source	18
Pause a Slideshow	18
Slideshow Background Music	18
Adjust the Volume	19
Mute the Background Music	19
Set Slideshow Interval	20
Set Slideshow Transition	21

Set Slideshow Shuffle	21
Display Current Time with Photos	21
Display Photo File Date/Time Stamp with Photos	22
MUSIC	22
Playing Music Only	22
Adjust the Volume	23
Mute the Music.....	23
Set Music Repeat Mode	23
Import Music Files into Internal Memory	23
Delete Music Files from the Internal Memory	24
VIDEOS	25
Watch a Video	25
Adjust the Volume	25
Mute the Video.....	26
Video Repeat Mode.....	26
Import Video Files into Internal Memory	26
Delete Video Files from the Internal Memory	26
CALENDAR/CLOCK	27
Set Date and Time.....	27
Set Alarm.....	28
Select Media Source for Calendar Slideshow.....	28
Set Schedule	28

Introduction

Welcome to the Pandigital Multimedia Digital Photo Frame (DPF). Now you can display your digital photos directly from your memory card, no computer is necessary. View your photos as slideshows with background music, or individually. You can even connect wirelessly to online photo sharing websites to display your uploaded photos directly through the DPF.

Use the DPF as a calendar/clock with personal photo slideshow, play your digital videos, and view preloaded recipes.

This DPF also includes the **PanTouch Technology**, a touch icon-driven interface allowing you to quickly and easily navigate and manage the DPF functions without the remote control.

 
DPF Key Features

- PanTouch Technology
- Displays digital **Photo** files
- Plays digital **Music** and **Video** files
- Displays **Calendar/Clock** with photo slideshow and **Alarm** function
- Includes preloaded **Recipes** from popular authors
- Simple Plug & Play
- Does not require a computer
- Infrared Remote Control and control buttons on the DPF
- 1 or 2GB Internal Memory (*depending on model*)
- 2 USB 2.0 ports

Compatible Memory Cards

Compatible memory cards include: Secure Digital™ (SD), Compact Flash (*select models*), MultiMedia Card™ (MMC), xD Card, Memory Stick™ (MS), MemoryStick Pro™, and Memory Stick Pro Duo™*


- * The **Memory Stick Pro Duo™** requires an additional adaptor to fit properly into the DPF (*not included*). You can purchase the adaptor at retail outlet stores that sell memory cards.

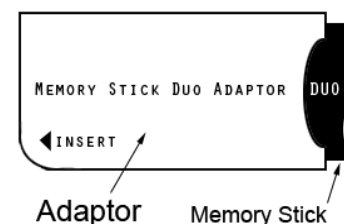

What's in the Box

- Digital Photo Frame (DPF)
- AC Power Cord and Adapter
- Infrared Remote Control
- Decorative Paper Mats
- USB Cable
- Quick Start Guide
- User Guide (on CD)

 Overview of the 12" and 13.3" DPF

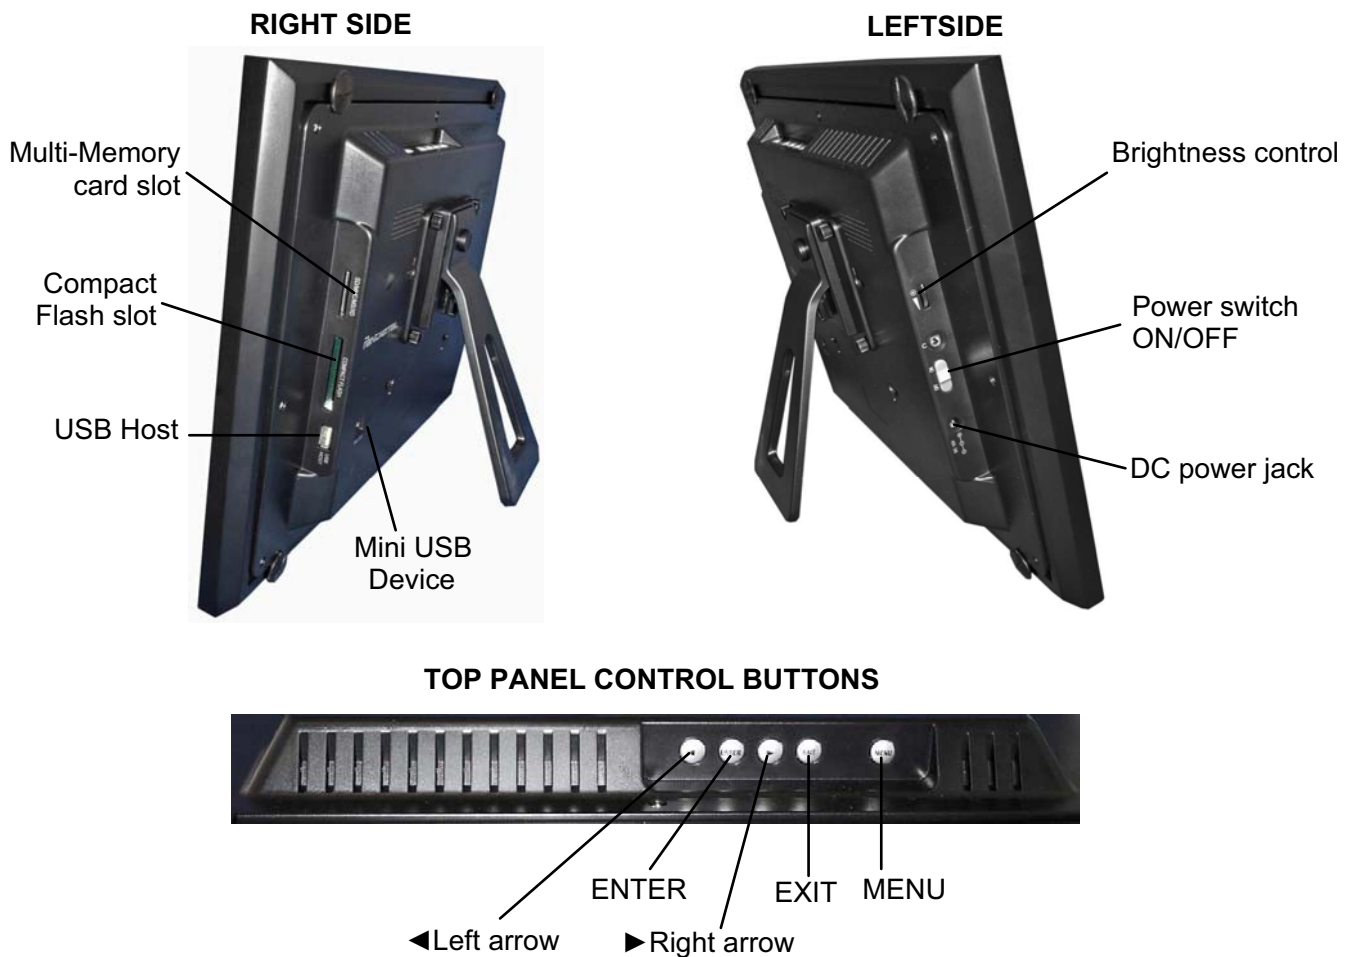

(Note: Your frame, memory card slots, ports, and jacks may be different than those pictured here.)

Overview of the 15" DPF



(Note: Your frame, memory card slots, ports, and jacks may be different than those pictured here.)

Remote Control

You can access all of the DPF's features, and perform all of the functions by using the remote control. You will be able to perform several functions with the remote control that are not possible with the top-back panel control buttons.



 
*Throughout this User Guide, this icon depicts the specific use of the **Remote Control**.*



Note: Before first time use, pull the plastic tab sticking out of the remote control. It protects the battery and the remote control will not work unless it is removed.



Overview of Remote Control

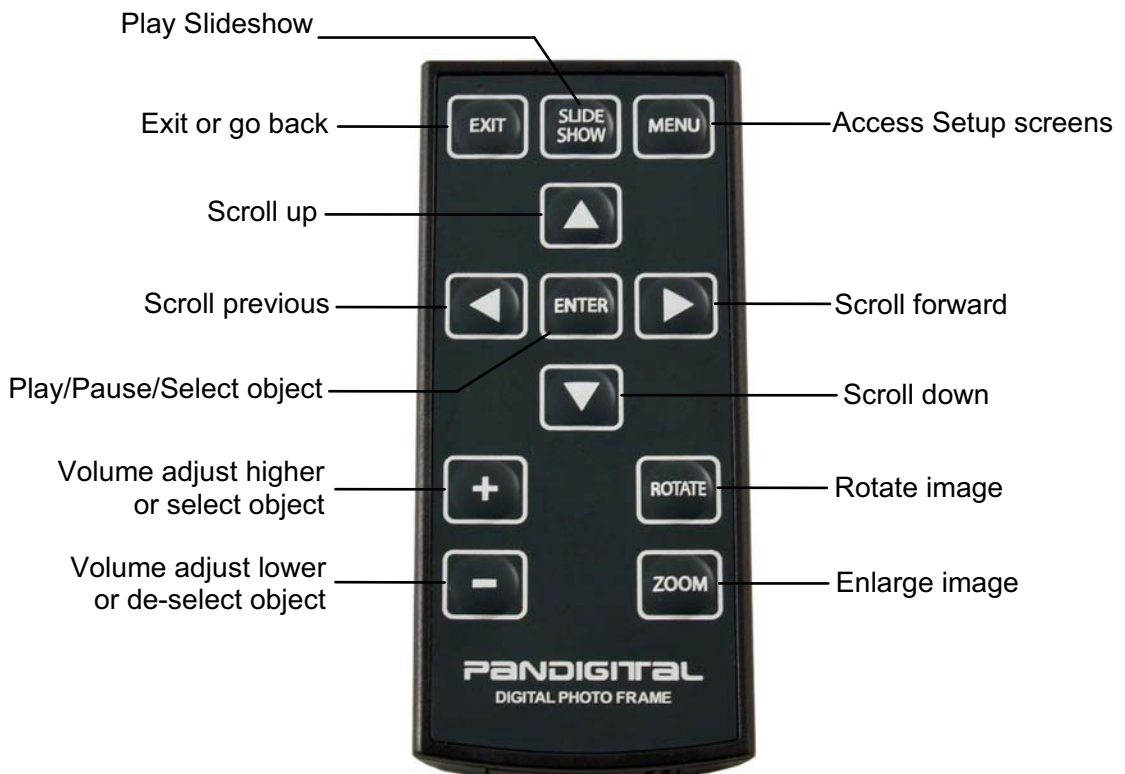

Store the Remote Control

Avoid misplacing the remote control by safely storing it on the back of the DPF when not in use.

The back of the remote control has a built-in magnet and the back of the DPF has a 'magnetic area' so you can simply attach the remote control to the back of the DPF for safe keeping.



Replace the Remote Control Battery

 
1. Hold the remote control with the buttons facing down.
2. Push and hold the small release tab while pulling the battery tray out.
3. Replace the “CR2025” Lithium battery on the tray with the positive (+) side facing up.
4. Push the tray back in until it clicks into place.



PanTouch Interface

This DPF includes our **PanTouch** technology, a touch icon-driven interface allowing you to navigate through all the DPF features and functions.

The touch sensors are located strategically along the top and right edge of the frame under the paper mat and are activated by simply touching the activation point in the upper right corner.

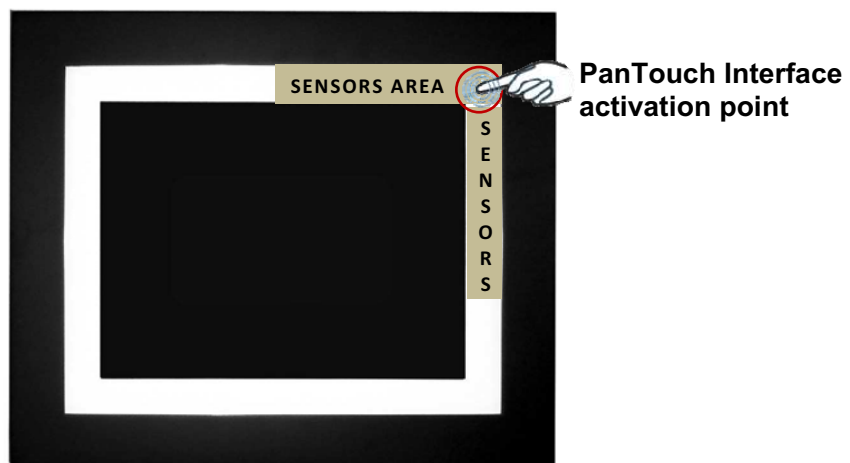

The navigation icons appear for 5 seconds (*without any user interaction*), and then disappear until you activate the PanTouch interface again. While the PanTouch interface is active, the remote control will be inoperable.




*Throughout this User Guide, this hand icon depicts the specific use of the **PanTouch** interface.*

Control Buttons on DPF


You can perform many (*but not all*) of the DPF functions by using the control buttons located on the back of the DPF. Their basic functions are the same no matter when you use them.


Button	Action
◀	Scroll left
ENTER	Select the highlighted option, start a Slideshow, Play and Pause
▶	Scroll right
EXIT	Exit the current display, or go back a screen
MENU	Access the SETUP Menu screen

 **TIP:** *The instructions throughout this User Guide reference the use of the PanTouch interface and the Remote Control. However, you could also use the frame control buttons when the ◀ ▶, **ENTER**, **EXIT**, and **MENU** buttons are referenced.*

About Selecting Options

Throughout this User Guide, when you are instructed to simply ‘touch’ or ‘select’ a function option or button, do the following:

 Touch the upper right corner of the mat to activate the PanTouch interface and then touch the desired option button, or use the arrows to highlight **[the referenced option]**, and then touch **ENTER** to select (*unless otherwise instructed*).

 Use ◀ ▶ ▲ ▼ to highlight **[the referenced option]**, and then press **ENTER** to select (*unless otherwise instructed*).

Getting Started

1. Plug the AC Power Adapter into the DPF's DC power jack and an electrical wall outlet.
2. Push the power button on the DPF to the ON position.
3. *If prompted*, select the desired language for the user interface display (*varies by model*).
4. After the initial start up screen is displayed, a slideshow will automatically begin displaying the photos that are stored in the internal memory.
5. To view your own photos, insert a memory card or USB flash drive containing your photos into the appropriate slot/port on the DPF, and then select **PLAY SLIDESHOW** on the memory source option screen.




CAUTION: The cards and USB flash drive will only fit in one direction; do not force them as this will damage the card reader or USB port.


The HOME Screen

The main DPF features, **PHOTOS**, **MUSIC**, **VIDEO**, **CLOCK**, **RECIPES**, and the **Setup Menu** screen are accessed from the **HOME** screen.

To access the **HOME** screen while a slideshow is playing, press **MENU** or activate the PanTouch interface and then touch **HOME**.



 **TIP:** *The background photo will change according to the photos stored on the selected media source.*

Clock	View clock and calendar with photo slideshow, and manage the calendar, clock, and alarm settings <i>(page 33)</i>
Recipes	View pre-loaded sample recipes and cookbooks <i>(page 37)</i>
Edit	Quick access to single photo manage mode for Zooming, Rotating, Importing, or Deleting currently displayed photo
	Play Slideshow of photos on currently selected media source
MENU	Access the Setup Menu screen
PHOTOS	Display your photo files (.JPG or .JPEG) individually or as slideshows. PHOTOS-Manage: set viewing preferences, assign photos to category folders, import and delete photo files <i>(page 18)</i>
MUSIC	Play your MP3 music files. MUSIC-Manage: set listening preferences, import and delete music files <i>(page 27)</i>
VIDEO	Play motion JPEG AVI video files. VIDEO-Manage: set viewing preferences, import and delete video files <i>(page 30)</i>

SETUP Menu Overview

Use the **Setup Menu** for DPF functions to optimize your viewing/listening preferences. To access the **Setup Menu** screen, on the **HOME** screen, touch or press **MENU**.



Select Media Source

Select the media source for current viewing or listening (*page 17*)

Slideshow Setup

Multiple slideshow functions for optimizing your viewing preferences (*begin on page 22*)

Adjust Screen Colors

Adjust LCD screen settings as desired (*page 20*)

Optimal Image Display

Set photos to display as original photo size, or optimized to best fit the screen (*page 21*)

Photo Import Method

Set photos to be imported compressed or original resolution and file size (*page 18*)

Set Sleep Mode

Power saving function (*page 54*)

Set Language	Select desired DPF display language <i>(page 54)</i>
System Info	View current settings and assign name to DPF <i>(page 55)</i>
System Upgrade	For firmware upgrades

Select Media Source

If you have inserted one or more external media sources (*i.e., memory card, USB flash drive*), you can use the **Select Media Source** function to switch between the internal memory and your external media source for viewing your photos, videos, or listening to music.

You will also use this function to view the contents of the **Slideshow Folders** after you assign photos to these folders *(page 23)*.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Select Media Source**, and then select the desired media source *(only present media sources will be available for selection)*.

Internal Memory = Built-in flash memory
SD/MMC = Secure Digital™ / Multi Media™ card
MS = Memory Stick™ (Standard, Pro, and Duo)
xD = eXtreme Digital flash memory card
CF = Compact Flash
USB = Standard USB flash drive
Slideshow Folders = View photos after assigning to folders *(page 23)*

3. The **Photo Thumbnails** or **Slideshow Folders** screen will display the photos found in the selected media source.

PHOTOS

The **PHOTOS** feature includes many functions for playing slideshows, viewing individual photos, and for optimizing your viewing preferences.

Display Photo Thumbnails Screen

1. On the **HOME** screen, select **PHOTOS** to display the **Photo Thumbnails** screen.
2. To view a photo in full-screen, use the arrows to highlight the desired photo, and then touch **View** or press **ENTER**.

Zoom or Rotate Photos

With an individual photo displayed (*per above instructions*), touch or press **ZOOM** or **ROTATE**, multiple times if required to achieve desired view.



TIP: *When a photo is zoomed, you can pan around the photo by using the arrows to view portions of the photo that are not currently visible.*


Import Photos into Internal Memory

You can import your photo files from external media sources (*i.e., memory card, USB flash drive*) into the DPF's internal memory. The number of photo files you can import depends on file size and available memory.



1. Insert your media source into the DPF. The memory card option screen will be displayed.
2. To import all photos, touch **IMPORT ALL PHOTOS**.

To import selected photos:

- a) Touch **SELECT PHOTOS TO IMPORT**.
- b) Touch **MANAGE +**.
- c) Use the arrows to scroll through the photos, and then touch  to select each photo you want to import.

d) Touch **IMPORT SEL.**

e) Confirm **Yes** or **No**.







1. Insert your media source into the DPF. The memory card option screen will be displayed.

2. To import all photos, select **IMPORT ALL PHOTOS**.

To import individual photos:

a) Select **SELECT PHOTOS TO IMPORT**.

b) Use     to scroll through the photos, and then press '+' to select the desired photos to import.

c) Press **MENU**, and then select **IMPORT SEL.**

d) Confirm **Yes** or **No**.



TIP: After starting an import, you can touch **CANCEL** or press **EXIT** to stop the import operation. Photos that have already been imported will not automatically be deleted.

Delete Photos from Internal Memory

You can delete photo files from the DPF's internal memory, but not from an external media source (*i.e.*, *memory card, USB flash drive*).

In order to delete photo files, you must have **Internal Memory** as your selected media source.



TIP: It is recommended to make backup copies of the photos before you delete them from the DPF.




1. On the **HOME** screen, select **PHOTOS**.

2. Touch **MANAGE +**.

3. To delete all photos, select **DELETE ALL**, and then confirm **Yes** or **No**.

To delete selected photos:





a) Use the arrows to scroll through the photos, and then use  to select each photo you want to delete.

- b) Select **DELETE SEL.**
- c) Confirm **Yes** or **No**.



1. On the **HOME** screen, select **PHOTOS**.
2. To delete all photos, press **MENU** and then select **DELETE ALL**.

To delete selected photos:

- a) Use     to scroll through the photos, and then press '+' to select ('-' will deselect).
- b) Press **MENU**.
- c) Select **DELETE SEL.**
- d) Confirm **Yes** or **No**.



TIP: *If, by mistake, you select **Yes** to delete photos, you can touch **CANCEL** or press **EXIT** to stop the delete operation. Photos already deleted will not automatically be restored.*

Adjust Screen Colors

There are four LCD color level settings that you can adjust for optimal image viewing.



1. On the **HOME** screen, select **MENU** to display the **Setup Menu** screen.
2. Select **Adjust Screen Colors**.
3. Touch **NEXT PHOTO** to view the preferred photo for optimal balance adjustments.
4. Touch the desired setting option button at the top of the screen; **Brightness**, **Contrast**, **Tint**, or **Color**.
5. Use the arrows to adjust the option setting until the desired view is achieved.
6. Select **DONE** to save the settings.



1. On the **HOME** screen, press **MENU** to display the **Setup Menu** screen.
2. Select **Adjust Screen Colors**.
3. Use ◀ ▶ to access the LCD option button.
4. Use ▲ ▼ to scroll through the LCD options, and use ◀ ▶ to adjust the option setting until the desired view is achieved.
5. Press **ENTER** to access the **DONE** button to save the settings.

Optimal Image Display

The DPF can display your photos as original size or optimized to fit the screen size.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Optimal Image Display**, and then select the desired setting (*small green dot indicates selected option*).

Original = Displays photos with actual photo size, which may result in part of a photo not being visible on the screen.

Optimal (default) = Optimizes the size and resolution to best fit the screen.

Photo Import Method

When importing files into the internal memory from an external media source, the file can be optimized or left as the original file size and resolution.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Photo Import Method**, and then select the desired setting (*small green dot indicates selected option*).

Optimized (default) = The photo file is downscaled in size and compressed into a smaller sized JPEG, allowing more photos to be stored in the internal memory.

Original = The photo file is stored keeping its original size and resolution.

PHOTO SLIDESHOWS

The DPF can display all of the photos on the selected media source as a slideshow, or you can select specific photos for a custom slideshow. You can also have background music with your slideshows simply by storing music MP3 files on your selected media source.

Slideshow of Photos in Internal Memory


You can play a slideshow of the photos stored in the DPF's internal memory by simply powering on the DPF (*if no external media source or is inserted*) and then wait for the slideshow to automatically begin.

Slideshow of Photos on your Media Source

Insert an external media source (*i.e., memory card*) into the DPF; a memory source option screen is displayed for 15 seconds and then the slideshow will begin automatically unless you choose one of the three options.

Pause a Slideshow

To pause a slideshow, touch or press **EXIT**. The slideshow will pause for approximately 30 seconds, and then will automatically resume playing.

To resume the slideshow without waiting for the 30-second timeout, touch  or press **ENTER**.

Slideshow Background Music


To play background music during a slideshow, simply copy at least one music MP3 file onto the same media source as your photos. The music will automatically play as the slideshow is displayed.


If you have multiple MP3 files on your media source, each music file will play in succession until all have been played, and then will repeat according to the **Music Repeat Mode** setting (*page 28*).

Adjust the Volume

While the music is playing, activate the PanTouch interface and then select the on-screen volume + or - buttons, or press the remote control '+' or '-' buttons.

Mute the Background Music

Press **ENTER** or activate the PanTouch interface and then touch .

The slideshow will continue to play with the music muted until you press **ENTER** again or touch .

Slideshow Folders


There are five category folders in the internal memory into which you can assign photo files for personalized organization and slideshows (*these folder names cannot be changed*):

Family – Friends – Vacation – Events – Others

Only photos stored in the internal memory can be assigned to the slideshow folders. Assigned photos are not physically moved or copied into the folders, rather, a link is assigned to the photo so it appears to be located in the folder. If you delete the actual photo file from internal memory, the link to the folder will also be deleted.

Copy Photos into Slideshow Folders




1. On the **HOME** screen, select **PHOTOS**.
2. Touch **MANAGE +**.
3. Use the arrows to highlight the desired photos, select  to select each photo, and then select **COPY TO**.
4. Use the arrows to highlight the desired slideshow folder into which you will copy the selected photos, and then select **ENTER**.



1. On the **HOME** screen, select **PHOTOS**.
2. Press '+' to select desired photos ('-' will deselect).
3. Press **MENU**.

4. Select **COPY TO**, and then select the desired folder into which you will copy the photos.


Play Slideshow from Slideshow Folder

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Select Media Source**.
3. Select **Slideshow Folders**.
4. Select the desired folder containing the photos you want to view in your slideshow.
5. Touch or press **EXIT** to return to the **HOME** screen, and then touch  or press **SLIDESHOW**.





Copy or Move Photos to Different Folders

After assigning photos to folders, you can copy or move those photos to other folders.



1. With the slideshow folders slideshow playing (*per above*), touch **EXIT** twice to display the **Folder Thumbnails** screen.
2. Touch **MANAGE +**.
3. Use the arrows to scroll through the photos, and then use  to select the photos you want to copy or move.
4. Touch **COPY TO** or **MOVE TO**.
5. Select the desired folder into which you want to copy or move the selected photos.



1. With the slideshow folders slideshow playing (*per above*), press **EXIT** twice to display the **Folder Thumbnails** screen.
2. Use     to scroll through the photos, press '+' to select ('-' will deselect).

3. Press **MENU**, and then select **COPY TO** or **MOVE TO**.
4. Select the desired folder into which you want to copy or move the selected photos.

Slideshow Setup Options

You can set multiple options for customizing your slideshow preferences.

Set Slideshow Music Mode

You can set the slideshow to display without music, even if music files are present on the selected media source.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Slideshow Setup**.
3. Use the left/right arrows to highlight **Slideshow Music**, use the up/down arrows to toggle **ON/OFF**.

ON (*default*) = Play background music with slideshow

OFF = Do not play music with slideshow, even if MP3 files are stored on selected media source

4. Select **Done** to save all settings.

Set Slideshow Interval

You can set the speed at which the slideshow photos transition from one to another.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Slideshow Setup**.
3. Use the left/right arrows to highlight **Slideshow Interval**, use the up/down arrows to scroll through the options.

5 (*default*), **10**, **30**, **60 seconds**, **30 minutes**, **1 hour**, or **24 hours**

4. Select **Done** to save all settings.

Set Slideshow Transition

You can set the transition ‘special effects’ as photos transition from one to another during a slideshow.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Slideshow Setup**.
3. Use the left/right arrows to highlight **Slideshow Transition**, use the up/down arrows to scroll through the options.

OFF = Photos transition from one photo to the next without special effects.

Random (default) = Photos will transition using all special effects randomly throughout a slideshow.

Remaining special effects = Choose individual transition effect as desired

4. Select **Done** to save all settings.

Set Slideshow Shuffle

You can set the slideshow to display your photos in a random ‘shuffle’ order, or display them in the order as stored on the selected media source.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Slideshow Setup**.
3. Use the left/right arrows to highlight **Slideshow Shuffle**, use the up/down arrows to toggle **ON/OFF**.

ON = Displays photos randomly

OFF (default) = Displays photos in the order found on selected media source


4. Select **Done** to save all settings.

Display Current Time with Photos

The current time can be displayed in the upper left corner of the screen with your photos if desired.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Slideshow Setup**.

3. Use the left/right arrows to highlight **Display Current Time**, use the up/down arrows to toggle **ON/OFF**,
4. Select **Done** to save the setting.

 **TIP:** *If the time is incorrect, refer to **Set Date and Time** on page 33 to set the clock.*

Display Photo File Date/Time Stamp with Photos

Most digital cameras typically include a Date/Time stamp when saving photo files. If your photo files contain this Date/Time information, you can have it displayed with your photos if desired.



1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Slideshow Setup**.
3. Use the left/right arrows to highlight **Display Photo File Date/Time**, use the up/down arrows to toggle **ON/OFF**, and then touch or press **ENTER** to save the setting.
4. Select **Done**.

MUSIC



Note: Music files must be standard MP3 format and not from licensed music download services.

Playing Music Only


1. On the **HOME** screen, select **MUSIC**. All present music files will be listed.
2. Use the arrows to scroll through the list, and then touch  or press **ENTER** to play a music file.
3. To play a different music file, simply select a different file name.
4. To stop the music, touch , or press **EXIT**.

Adjust the Volume

While the music is playing, activate the PanTouch interface and then use the on-screen volume + or - buttons, or press the remote control '+' or '-' buttons.

Mute the Music

Press **ENTER** or activate the PanTouch interface and then touch .

The music will remain muted until you press **ENTER** again or touch .

Set Music Repeat Mode

By default, the **Music Repeat Mode** is set to continuously play all music files found on the selected media source until you stop them. If desired, you can change the repeat mode to play all music files only once.

Repeat ON (*default*) = continuously play all music files on the selected media source until you stop them.

Repeat OFF = play the music files only once.



1. On the **MUSIC** screen, select **REPEAT** to toggle ON/OFF (*small green dot indicates ON*).




1. On the **MUSIC** screen, press **MENU**.
2. Select **Repeat** to toggle ON/OFF (*small green dot indicates ON*).

Import Music Files into Internal Memory

You can import your music files from external media sources (*i.e., memory card, USB flash drive*) into the DPF's internal memory. The number of music files you can import depends on file size and available memory.







1. On the **HOME** screen, select **MUSIC**.
2. To import all music files, select **IMPORT ALL**, and then confirm **Yes** or **No**.

To import selected music files, use the arrows to scroll through the files, touch  on each file you want to import, select **IMPORT SEL**, and then confirm **Yes** or **No**.



1. On the **HOME** screen, select **MUSIC**.
2. To import all music files, press **MENU**, select **IMPORT ALL**, and then confirm **Yes** or **No**.

To import selected music files, use     to highlight the files you want to import, press '+' to select ('-' will deselect), press **MENU**, select **IMPORT SEL**, and then confirm **Yes** or **No**.



TIP: After starting an import, you can touch **CANCEL** or press **EXIT** to stop the import operation. Music files that have already been imported will not automatically be deleted.

Delete Music Files from the Internal Memory


You can delete music files only from the DPF's internal memory. It is recommended that you make backup copies of the music files before deleting them.



Note: **Internal Memory** must be your selected media source.







1. On the **HOME** screen, select **MUSIC**.
2. To delete all music files, select **DELETE ALL**, and then confirm **Yes** or **No**.

To delete selected music files, use the arrows to scroll through the files, touch  on each file you want to delete, select **DELETE SEL**, and then confirm **Yes** or **No**.



1. On the **HOME** screen, select **MUSIC**.
2. To delete all music files, press **MENU**, select **DELETE ALL**, and then confirm **Yes** or **No**.

To delete selected music files, use     to highlight the files you want to delete, press '+' to select ('-' will deselect), press **MENU**, select **DELETE SEL**, and then confirm **Yes** or **No**.





TIP: *If, by mistake, you select **Yes** to delete, you can touch **CANCEL** or press **EXIT** to stop the delete operation. Music files already deleted will not automatically be restored.*

VIDEOS

The DPF supports motion JPEG AVI video files. If your movie file is not in AVI format, you may have to convert the file by using a software video converter which is easily found for purchase on the Internet.


Watch a Video


1. On the **HOME** screen, select **VIDEO**. All present video files will be listed.
2. Use the arrows to scroll through the list, and then touch  or press **ENTER** to play a video file.
3. To play a different video file, simply select a different file name.
4. To stop the video, activate the PanTouch interface and then touch , or press **EXIT**.

Adjust the Volume

While the video is playing, activate the PanTouch interface and then use the on-screen volume + or - buttons, or press the remote control '+' or '-' buttons.

Mute the Video

Press **ENTER** or activate the PanTouch interface and then touch .

The video will remain muted until you press **ENTER** again or touch .

Video Repeat Mode

By default, the **Video Repeat Mode** is set to continuously play all video files found on the selected media source until you stop them. If desired, you can change the repeat mode to play all video files only once.

Repeat ON (default) = continuously play all video files on the selected media source until you stop them.

Repeat OFF = play the video files only once.



1. On the **VIDEO** screen, select **REPEAT** to toggle ON/OFF (*small green dot indicates ON*).




1. On the **VIDEO** screen, press **MENU**.
2. Select **Repeat** to toggle ON/OFF (*small green dot indicates ON*).

Import Video Files into Internal Memory

You can import your video files from external media sources (*i.e., memory card*) into the DPF's internal memory. The number of video files you can import depends on file size and available memory.







1. On the **VIDEO** screen, touch **MANAGE +**.
2. To import all video files, select **IMPORT ALL**, and then confirm **Yes** or **No**.

To import selected video files, use the arrows to scroll through the files, select  on each file to import, select **IMPORT SEL**, and then confirm **Yes** or **No**.



1. On the **HOME** screen, select **VIDEO**.
2. To import all video files, press **MENU**, select **IMPORT ALL**, and then confirm **Yes** or **No**.

To import selected video files, use     to highlight the files you want to import, press '+' to select ('-' will deselect), press **MENU**, select **IMPORT SEL**, and then confirm **Yes** or **No**.



TIP: After starting an import, you can touch **CANCEL** or press **EXIT** to stop the import operation. Video files that have already been imported will not automatically be deleted.

Delete Video Files from the Internal Memory


You can delete video files only from the DPF's internal memory. It is recommended that you make backup copies of the video files before deleting them.



Note: **Internal Memory** must be your selected media source.




1. On the **HOME** screen, select **VIDEO**.
2. To delete all video files, select **DELETE ALL**, and then confirm **Yes** or **No**.

To delete selected video files, use the arrows to scroll through the files, touch  on each file you want to delete, select **DELETE SEL**, and then confirm **Yes** or **No**.



1. On the **HOME** screen, select **VIDEO**.
2. To delete all video files, press **MENU**, select **DELETE ALL**, and then confirm **Yes** or **No**.

To delete selected video files, use ◀ ▶ ▲ ▼ to highlight the files you want to delete, press '+' to select ('-' will deselect), press **MENU**, select **DELETE SEL**, and then confirm **Yes** or **No**.

 **TIP:** *If, by mistake, you select **Yes** to delete, you can touch **CANCEL** or press **EXIT** to stop the delete operation. Video files already deleted will not automatically be restored.*

CALENDAR/CLOCK

Your DPF can be used as a personal desk calendar with a real-time clock and alarm, and also displays a continuous slideshow of photos on the selected media source.

To display the **CALENDAR/CLOCK** screen, select **CLOCK** from the **HOME** screen. The slideshow will be displaying photos found on the currently selected media source.



Set Date and Time

1. On the **CALENDAR/CLOCK** screen, activate the PanTouch interface or press **MENU**, and then select **SET DATE/TIME**.

2. Use the left/right arrows to scroll between the Date and Time options, and touch or press **ENTER** to activate the entry fields.
3. Use left/right arrows to scroll through the fields, and the up/down arrows to change the field values.
4. Select **DONE** to save settings.

Set Alarm

You can use your DPF as an alarm clock when desired. You can set the frequency of the alarm, and set the alert to sound the built-in tone or play your music file.

1. On the **CALENDAR/CLOCK** screen, activate the PanTouch interface or press **MENU**, and then select **SET ALARM**.
2. Use the left/right arrows to scroll between the options, and touch or press **ENTER** to activate the entry fields.

Alarm = set the time you want the alarm to alert.

Frequency = set how often you want the alarm to alert (Always, Once, Off)

Alert = set the alert to Music or default Tone (if music, the music file must reside on the currently selected media when alarm is activated)

3. Use the left/right arrows to scroll through the fields, and the up/down arrows to change the field values.
4. Select **DONE** to save settings

When the alarm is set, a small bell or music note will be displayed indicating the alarm has been set.



Note: At least one MP3 music file must be present on the selected media source for the alert to play music. If you set the alert to play music and there is no MP3 music file present, the default tone will sound instead.

Turn Alarm Off

When the alarm sounds, activate the PanTouch interface or press any button on the remote control to stop it and return to the **CALENDAR/CLOCK** screen.

To cancel the alarm before its scheduled time, follow the previous instructions for setting the alarm and set the frequency to **OFF**.

 
Select Media Source for Calendar Slideshow

You can easily change the media source if you want the calendar/clock slideshow to display photos from a different media source (*i.e., memory card, slideshow folder*).

1. On the **CALENDAR/CLOCK** screen, activate the PanTouch interface or press **MENU**, and then select the **Media Source** button in the top of the screen.
2. Select the new media source from the **Select Media** screen.

Set Schedule

You can schedule the DPF to automatically go into a “stand-by” mode and then resume operation according to your weekly schedule. For example, if you have your DPF on your desk at work, you may want to display the calendar/clock or play a slideshow from 8:30am to 5:30pm every weekday, and then set the DPF to remain in stand-by mode throughout the weekend. The following Monday morning, the DPF would resume operation at 8:30am.

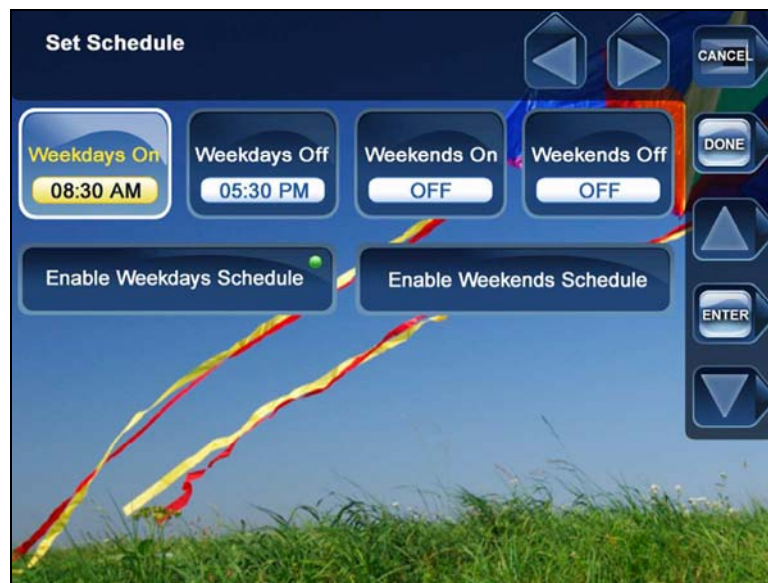

1. On the **CALENDAR/CLOCK** screen, activate the PanTouch interface or press **MENU**, and then select **SET SCHED**.
2. Use the left/right arrows to scroll through the **Weekdays** and **Weekends** options.
3. Touch or press **ENTER** to activate the entry fields.


4. Use the left/right arrows to scroll through the fields, and the up/down arrows to change the field values.
5. Touch or press **ENTER** to enable the **Weekdays** and/or **Weekends Schedule** buttons.
6. Select **Done** to save the settings.

Disable the Schedule

To disable the schedule, turn both **Enable Weekdays/Weekends Schedule** buttons OFF, and the entry fields will display **OFF**.

Run the Schedule

After the schedule times have been set (*per instructions on page 35*), you will use the **Run Schedule** function whenever you want the schedule to take effect.

 **CAUTION:** After you select the **Run Schedule** function, any user intervention will cancel the activation and the schedule will not take effect until you select this function again to re-activate.



At the start of a slideshow, touch **RUN SCHED** before the menu times out.

While a slideshow is playing, or on the **CALENDAR/CLOCK** screen, activate the PanTouch interface and touch **RUN SCHED**.



At the start of a slideshow, press **ENTER** when the **RUN SCHED** button is displayed on the screen (*approximately 10 seconds*).

While a slideshow is playing, or on the **CALENDAR/CLOCK** screen, press **MENU**, and then select **RUN SCHED**.

A small timer clock will appear indicating the schedule is active, and the DPF will go into stand-by mode according to the schedule.

RECIPES

The DPF's **Recipes** feature allows you to view recipes from popular authors such as Bon Appétit and Good Housekeeping (*sold separately on our website <http://www.pandigital.net>*).

Sample Bon Appétit seasonal recipes are included with this DPF so you can experience how the recipe feature works when you purchase and install the complete seasonal cookbooks.



Note: The Recipes feature is accessible only when the Internal Memory is the selected media source (page 17.)

You will use these instructions for the pre-loaded sample recipes as well as the complete cookbook collections.

View Recipes in Cookbook








1. On the **HOME** screen, select **RECIPES** to display the Cookbooks screen.
2. Select a Cookbook to display the **Cookbook Thumbnails** screen.
3. Use the arrows to highlight the recipes, and then touch **VIEW** or press **ENTER** to display a recipe in full screen.

While the individual recipe is displayed, you can touch or press **ZOOM** to enlarge the recipe. You can also use the arrows to display the previous/next recipes.

Copy Recipes to 'My Favorite Recipes'

You can copy recipes from a main Cookbook into six food group categories for quick and easy retrieval: **Hors d'oeuvres, Soups, Salads, Entrées, Desserts** and **Others**. (*The food group category names are not changeable*).

1. On the **HOME** screen, select **RECIPES**.
2. Select a Cookbook to display the **Cookbook Thumbnails** screen.

-  Use the arrows to scroll through the recipes, touch  on each recipe that you want to copy, and then select **COPY TO**.
-  Use     to scroll through the recipes, press '+' on each recipe that you want to copy, press **MENU**, and then select **COPY TO**.
- Select the desired food group category into which you want to copy the recipes.

View the Recipes in 'My Favorite Recipes'



After you have copied recipes into the food group categories (*per instructions above*) you can quickly view them at any time.

- On the **RECIPES** screen, select **My Favorite Recipes**.
- Select the desired food group category to view.
- Use the arrows to highlight the recipes, and then select **VIEW** or press **ENTER** to display a recipe in full screen.

While the individual recipe is displayed, you can touch or press **ZOOM** to enlarge the recipe. You can also use the arrows to display the previous/next recipes.

Delete, Move, or Copy Recipes from Categories

After you have copied recipes into food group categories, you can delete them from the category, move, or copy them from one category into another when desired.

- On the **RECIPES** screen, select **My Favorite Recipes**.
- Select the desired food group category **from** which you will delete, move, or copy recipes.
-  Use the arrows to scroll through the recipes, touch  on each recipe that you want to copy, move, or delete, and then select **COPY TO**, **MOVE TO**, or **DELETE**.

 


Use ◀ ▶ ▲ ▼ to scroll through the recipes, press '+' on each recipe that you want to copy, move, or delete. Press **MENU**, and then select **COPY TO**, **MOVE TO**, or **DELETE**.

4. When applicable, select the desired food group category **into** which you will move or copy the recipes.

Connect DPF to Windows PC

1. Connect the small end of the USB cable to DPF's Mini USB port, and the larger end to an available USB port on your computer.
2. A window opens listing all drives connected to your computer, similar to the following screen:

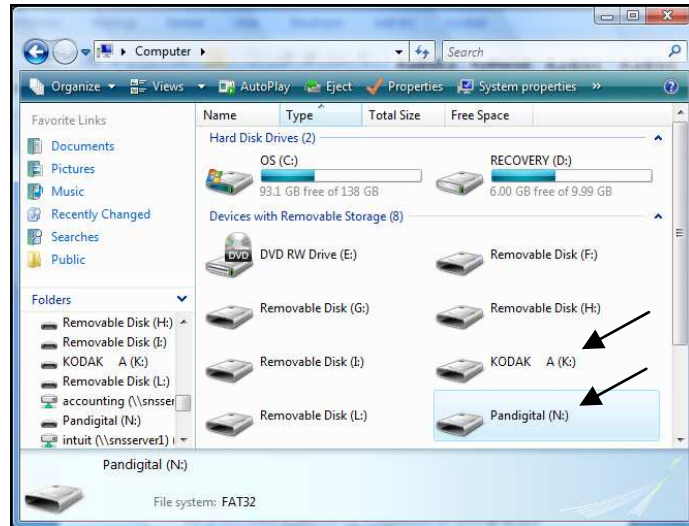


3. The internal memory (*titled **Pandigital***) and each memory card present in the DPF will be associated with one disk drive on your computer.



IMPORTANT: If your PC is connected to Local Area Network drives, or if you have multiple drive letters already assigned to peripheral devices, you will need to manage your drive settings in Windows to free up the four drive letters immediately following your CD-ROM drive so the DPF can assign them to memory card slots properly.

 
4. Double-click the desired drive to display the files on the card. The following example shows a card listing several JPG images.

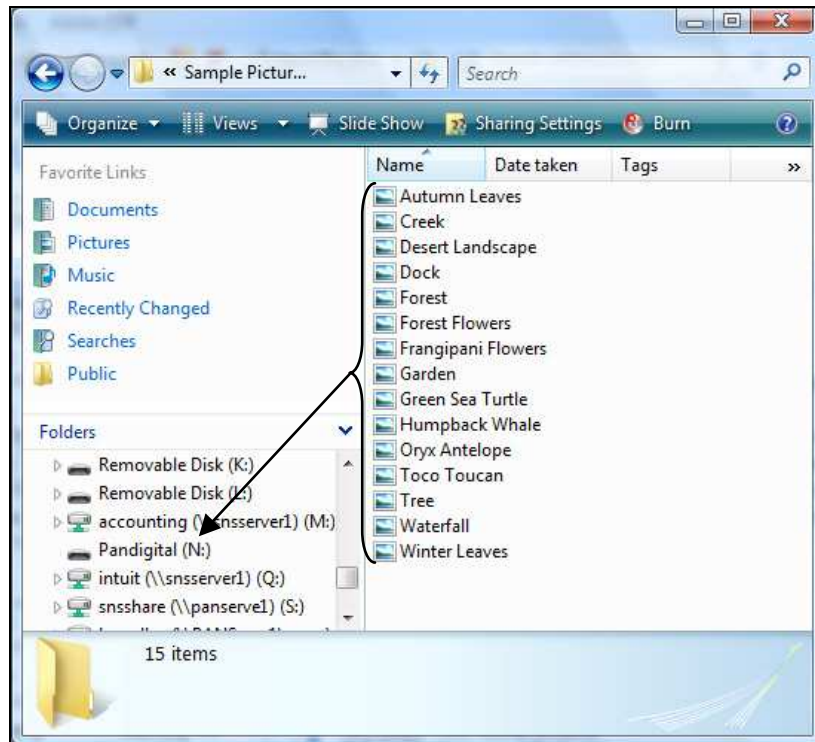


5. To copy files from a media source, select and drag them into the DPF's internal memory drive (***Pandigital***).
6. Similarly, to copy files from your computer to the internal memory, first locate the files on your computer, select the files you want to copy, and then drag and drop them into the appropriate folder in the DPF's internal memory drive.

Disconnect DPF from Windows PC

It is important to always perform a safe PC 'release' before disconnecting the DPF USB cable from the PC.


 **WARNING:** Do not unplug or switch off the DPF when files are being transferred, as that can seriously damage the memory.

Windows Vista

1. On the Windows System Tray, click the hardware removal icon .
2. Click the **Safely remove USB mass Storage device** message corresponding with the DPF device drive.

3. When the message *“This device can now be safely removed from the computer”* appears, you can disconnect the USB cable from your computer.

Windows XP

1. On the Windows System Tray, click the hardware removal icon  icon.
2. Click **Remove Hardware Safely**.
3. Select the storage device corresponding with the DPF, and then click **Stop** to disconnect. A final dialog box opens.
4. Click **Close**.
5. When the message *“It is now Safe to Disconnect Hardware”* appears, you can disconnect the USB cable from your computer.

Connect DPF to Macintosh Computer

1. Use the USB cable (*included*) to connect the DPF to your Macintosh computer.
2. Macintosh will recognize the DPF as an external storage device.
3. Drag and drop files between the two devices as you normally move files.

Disconnect DPF from Macintosh Computer

1. To safely disconnect the DPF from your Macintosh, select DPF’s icon on your desktop and press **Command-e** to eject the disk.
2. When the icon is no longer on the desktop, it is safe to unplug the USB cable.

USB Flash Drive to DPF Connection

The DPF recognizes a USB Flash Drive the same way it recognizes external memory cards. When you insert the flash drive, the DPF automatically recognizes photo, music, and video files stored on it.

To import files from your flash drive to the DPF's internal memory, follow the file import instructions under each feature section (**Photos** on page 18, **Music** on page 28, **Video** on page 30).

Set Sleep Mode

The DPF will stay on until you power it off, however, to save power you can set it to automatically go into a sleep mode when left idle for a specific amount of time.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Set Sleep Mode**, and then select the desired setting (*small green dot indicates selected option*).

OFF (default) = Power saver is 'disabled'; DPF will remain on until you power it off or change the sleep mode setting

2/4/8 Hours = The DPF will automatically go into sleep mode when left idle the specified amount of time

Reset to Factory Defaults

Use this feature to restore function settings to the factory pre-set defaults.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **Reset to Factory Defaults**.
3. Confirm **Yes** or **No**.

Set Language

Depending on model, this DPF may include multiple languages for the user interface display. Use this feature to change the language at any time.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.

2. Select **Set Language** to display the available languages.
3. Select the desired language.

System Info

You can view the current DPF settings, including your internal memory size, wireless network connection, firmware version, and you can assign a personal unit name if desired.

1. On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen.
2. Select **System Info**.
3. To assign a different unit name, select **EDIT FRAME NAME**, and then use the virtual keyboard to enter the desired name. (*Instructions for navigating the virtual keyboard begin on page 39.*)
4. Select **Done** to save.

Cleaning the DPF

Treat the screen gently, it is made of glass and can break. To clean fingerprints or dust from the LCD screen, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen. If you use a commercial LCD Cleaning Kit, do not apply the cleaning liquid directly to the LCD screen. Clean the LCD screen with cleaning cloth moistened with the liquid.

Clean the outer surface of the DPF (excluding the screen) and the remote control with a soft cloth dampened with water.

Frequently Asked Questions

Q: How do I set up my DPF?

A: It is very simple to get your Digital Photo Frame setup. Just plug the power adapter into the DPF and into a standard wall outlet, and then power it on. After the welcome screen is displayed, a slideshow will begin displaying the images pre-loaded in the internal memory. To view your own photos, insert a memory device into the appropriate slot or USB port on the side of the DPF. Select **PLAY SLIDESHOW** from the memory card option screen.

Q: What memory cards can the Digital Photo Frame Read?

A: Compatible memory cards include: Secure Digital™, Compact Flash (*select models*), MultiMedia Card™, xD Card, Memory Stick™, MemoryStick Pro™, and Memory Stick Pro Duo™.

Q: Can I insert multiple memory cards?

A: Yes, you can insert multiple cards at the same time, depending on slot availability. Use the **Select Media** function to select the desired media source for immediate viewing/listening.

Q: I set up the Digital Photo Frame; why won't it turn on?

A: The power adapter may not be securely connected to the DPF or the power switch may not be in the ON position.

Q: I have a memory card in the DPF; why can't I view my photos?

A: A) Be sure that the memory card is one of the formats listed above and that the files on the card are JPEG images files. Some digital cameras save images in other formats. Refer to your camera's user guide if your photos are not JPEG files.

B) Make sure the memory card is inserted all the way into the card slot.

C) On the **HOME** screen, touch or press **MENU** to display the **Setup Menu** screen. Select **Select Media Source**, and then select the desired media source. Touch or press **EXIT** to return to the **HOME** screen and then select **PHOTOS>Slideshow** or press **Slideshow** . The slideshow should begin displaying your photos.

Q: Why doesn't my remote work when the PanTouch interface has been activated?

A: The PanTouch interface has 'control' as long as the navigation buttons are visible. After 5 seconds of non-user intervention, the navigation buttons will disappear and release control to the remote control again.

Q: Why is the photo display slower with some photos than others?

A: Higher resolution photos load more slowly. Try using lower resolution photos or down scaling your images. Refer to your camera's operating user guide for details on down scaling your photos.

Q: Does the DPF have built-in (internal) memory?

A: Yes. The memory size varies by model.

Q: Does the DPF support all JPEG and Motion JPEG files?

A: No. The DPF only supports JPEG and Motion JPEG files taken from a digital camera. The DPF may not read all image files downloaded from the Internet or from other software graphic applications.

Q: Can I add my own cookbook or recipes to the Recipes feature?

A: No. If you want to create .jpg files of your recipes using your own graphics editing software, you can copy the .jpg files to your memory source and then you could view them on the DPF in **PHOTOS** mode.

Important Safety Precautions

Always follow these basic safety precautions when using your Multimedia Digital Photo Frame (DPF). This will reduce the risk of fire, electric shock, and injury.



WARNING: Do not expose this product to rain or moisture.

Do not remove the cover. There are no user-serviceable parts inside. Refer all servicing to qualified personnel.

- The DPF is for indoor use only.
- Unplug the DPF before performing care and maintenance.
- Do not block the ventilation holes on the back of the DPF at any time.
- Keep your DPF out of direct sunlight and heat sources.
- Protect the power cord. Route power cords so that they are not likely to be walked on or pinched by items placed on or against them. Pay particular attention to the point where the cord attaches to the DPF.
- Only use the AC adapter included with the DPF. Using any other power adapter will void your warranty.
- Unplug the power cord from the power outlet when the unit is not in use.

Limited Warranty

The limited warranty set forth below is given by Pandigital with respect to Pandigital brand electronics products purchased and used in the United States of America. Pandigital warrants this product against defects in material or workmanship as follows:

LABOR: For a period of one (1) year from the date of purchase, if this product is found to be defective, Pandigital will repair or replace the product, at its option, at no charge. After this one (1) year, labor charges will be charged on a case by case basis.

PARTS: For a period of one (1) year from the date of purchase, if this product is found to be defective, Pandigital will supply at no cost, new or rebuilt replacement parts, at its option, at no charge. After this one (1) year period, parts will be charged for on a case by case basis. Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

This warranty does not cover: (1) customer instruction, installation or setup; (2) cosmetic damage or damage due to accident, misuse, abuse or negligence; (3) commercial use of the product; (4) modification of any part of the product; (5) damage due to improper operation, improper maintenance, or connection to an improper power supply; (6) loss of data, regardless of value or format, that may result through proper and/or improper use of the product; (7) damage due to an attempted repair of the product by anyone other than a facility authorized by Pandigital to service the product; (8) consumables (such as fuses and batteries). This warranty is valid only in the United States.

The product must be accompanied by a copy of the original retail purchase receipt. If no proof of purchase is attached, the warranty will not be honored and repair costs will be charged. This warranty is only valid with written documentation detailing the complaint attached to the outside or inside of the carton. This warranty is invalid if the factory applied serial number has been altered and or removed from the product. This warranty does not provide protection for the loss of data, regardless of format. Pandigital reserves the right to modify and design this product without prior notice, written or otherwise.

To obtain warranty service, you must deliver the product freight prepaid in either its original packaging or packaging affording an equal degree of protection, plus proof of purchase.

Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. Pandigital, its parent company, affiliates or subsidiaries, shall not be liable for any incidental or consequential damages for breach of any expressed or implied warranty on this product. Except to the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose on this product is limited in duration to the duration of this warranty.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitation on how long an implied warranty lasts, so the above

limitations or exclusions may not apply. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

All content included on the Pandigital website as well as Pandigital products, including pre-loaded demonstration images, digital media, digital cookbooks, text, graphics, logos, designs, photographs, button icons, images, audio/video clips, digital downloads, data compilations, and software, is the property of Pandigital or its suppliers and is protected by United States and international copyright laws or other intellectual property laws and treaties. Said content shall not be reproduced or used without express written permission from Pandigital and its suppliers respectively.

Use of this product constitutes acceptance of these terms and conditions of warranty.

Technical support telephone number: 1-800-715-5354.

FCC Statement


FCC Part 15 Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communication Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 **WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
