



## Notes

- \*1 Outdoor device sends temperature and humidity data to the Weather Station every 60 seconds
- \*2. While turning on the outdoor device, it takes three seconds to detect and send out the temperature, humidity and low voltage data to the Weather Station. The outdoor device will be on normal mode (it sends the temperature and humidity data to Weather Station every 60 seconds) after LCD flickered for a moment.
- \*3. CH: Press the CH button to change the channel
- \*4. C/F: Press the C/F button to change between Fahrenheit and Celsius
- \*5. Outdoor device only provides limited water proof. Please set the outdoor device where rain/water does not directly shower on.

Frequency range: 868MHZ

Battery Voltage: 3V