

406\*58MM

Hantat



MiniBoom  
Wireless Speaker

Specifications & User Manual

**Thank You for Purchasing the Hantat MiniBoom Wireless Speaker!**

Designed and engineered to deliver superb sound, the Hantat MiniBoom is the perfect wireless speaker for enjoying your music anywhere you go. Compact and portable, the MiniBoom boasts amazing sound for up to 3 hours of playback time.\* Hantat MiniBoom Speaker: your wireless mini sound system.

Please take a moment to read this manual thoroughly and keep it for future reference. The manual explains the features and operation of your MiniBoom Wireless Speaker to help ensure trouble-free usage.

**SPECIFICATIONS**

Model: HB127  
Bluetooth Version: 3.0 + EDR  
Input: DC 5V by USB charger  
Battery: 400mAh  
Music Time: 3hrs\*  
Standby Time: 100 Hours  
Operation Range: 10 meters  
Charge Port: Micro USB  
AUX in Connector: 3.5mm  
Dimensions: 59.5mm X 59.5mm X 49.5mm  
Weight: 230g

\*Results may vary per device or usage patterns.

To learn more about the MiniBoom Wireless Speaker, or other Hantat products, please visit:  
www.hantat.com

**Package Contents:**


- MiniBoom Wireless Speaker
- Micro USB Charging Cable & AUX Cable
- User Manual



Designed in California, USA • Made in China

**FRONT**


• Multifunction Button

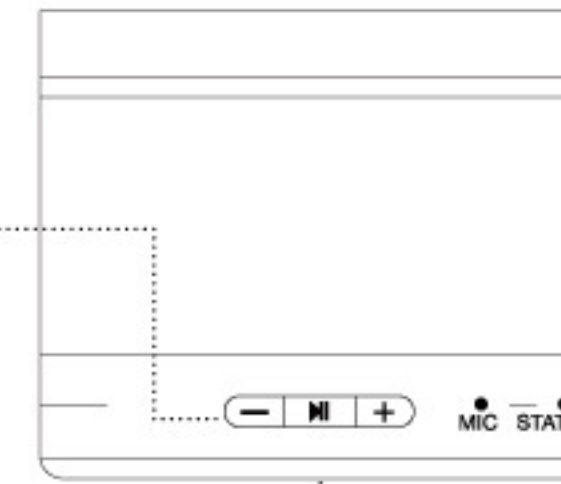

Power Switch  
(on Bottom)

**BACK**

• Micro USB Charging Port

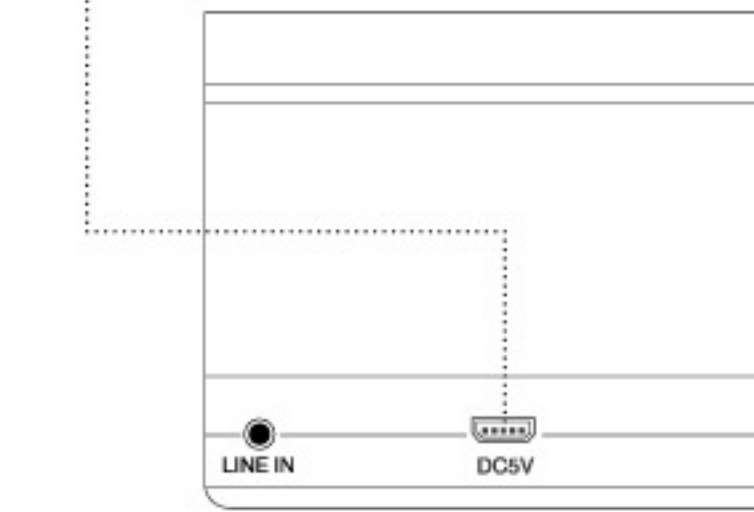

**INSTRUCTIONS**

**Charging the unit:**

Before first time use, fully charge the MiniBoom speakers for approximately two hours. Using the included charging cable, connect the USB end into a USB power source (such as USB charger, computer USB port, etc.) Then plug the micro USB connector end into the MiniBoom Wireless Speaker charging port. Once plugged in, the LED indicator will light up. After approximately 2 hours, the Hantat MiniBoom speaker will be fully charged and ready to be used.

Front

Back

Hantat

www.hantat.com

**Pairing your device:**

Make sure the MiniBoom Wireless Speaker's ON/OFF switch is set to the off position. Slide the power switch on the MiniBoom to the on position. The blue LED will flash 6 times.

Using the Bluetooth menu on your device, enable searching for nearby Bluetooth devices. Please refer to your device's user manual for more details.

Once "Hantat HB127" appears in your list of discovered devices, connect and pair to it. If your device prompts for a PIN code, use "0000". You'll hear a short "beep" tone

when the MiniBoom Wireless Speaker is successfully connected.

*Confirm connection and enjoy.*

**Note:** For optimal sound quality and battery life, the MiniBoom should not be listened to on the loudest sound settings.

**Making Bluetooth™ Calls:**

When you have an incoming call, simply press the Play/Pause Button to answer the call. To end the call, press the Play/Pause Button. Press and hold Volume + to turn volume up. Press and hold Volume - to turn volume down.

**Listening to music using a 3.5mm auxiliary cable:**

You can use the MiniBoom Wireless Speaker to listen to music with non-Bluetooth audio devices (i.e., MP3 players, desktop, computers, etc).

1. Turn your unit On.
2. Connect the 3.5mm audio jack from your device to the AUX IN port on your MiniBoom Wireless Speaker.
3. Press and hold the multifunction button between AUX and Bluetooth mode.
4. Adjust sound levels using your device's original user manual.

Read all safety instructions and warnings prior to using this product. Improper use and failure to follow safety guidelines could result in damage, excess heat, toxic fumes, fire, explosion, electrical shock, or other hazards causing serious and/or fatal injury and/or property damage. These are not the manufacturer's responsibility. The user must maintain this product with care.

1. Do not store below 40° F or above 90° F temperature.
2. Use only the supplied charger to charge this device. The use of a 3rd party charger may damage or overcharge the battery, and may cause fire hazard.
3. Avoid excessive drops, bumps, abrasions, or other impurities. If there is any damage to the battery

such as dents, punctures, tears, or deformities of corrosion, discontinue use immediately. Then contact the manufacturer or dispose of this device in an appropriate manner.

4. Under any circumstances, if you find this product rapidly increase in temperature, emitting odor, deformed, abraded, or demonstrating an abnormal phenomenon, discontinue use immediately.
5. Do not use in the vicinity of flammable fumes or gases, such as propane tanks, large engines, or high voltage devices.
6. Do not modify, disassemble, repair, crush, puncture or shred this product.
7. This product is not at toy — keep away from children.
8. Keep the unit dry. Avoid damp conditions and corrosive materials. Do not clean with harsh chemicals,

9. Disposal of unit in the garbage is unlawful under state and federal environmental laws and regulations.
10. For best maintenance, do not store in a depleted state as the battery's power cells can be damaged. Charge your unit at least once every 3 months when not in use.

**Warranty Information**

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

