 



Wireless Speaker Instruction Manual

How to use the Speaker


The General Features

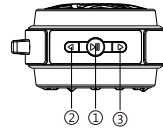

 1. On/Off/Play/Pause Button
Long press this button to power on/off the device.
Short press this button to play/pause the playing music.
Short press this button to answer the incoming phone call.
2. PREV/Volume Down Button
Short press the button to play the previous track.
Hold in the button to turn down the volume.
3. NEXT/Volume Up Button
Short press the button to play the next track.
Hold in the button to turn up the volume.

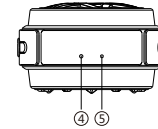

 4. Bluetooth/Charging Indicator light
When the device is turned on, the light turns to blue and flashes.
When the Bluetooth is connected, the light stops flashing and remains blue.
When charging the device, the red light turns on.
When the device is fully charged, the red light turns to green.
5. MIC
Receive your voice when making phone calls

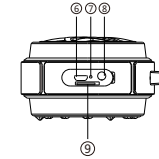

6. Charging Interface
Insert the USB cable to charge the speaker.
7. Reset Interface
Stab the reset interface with some kind of thin stick to sweep all status and restart the speaker.
8. Line-in
Insert the 3.5mm audio cable to listen to music.
9. TF Card Interface
After inserting the TF card, the product will get into TF card playing mode. It is ready to play music with MP3, WAV or WMA format.

Pairing Instructions

- Active Bluetooth mode on mobile device and turn speaker ON. Speaker will automatically enter pairing mode.
- Search for the Bluetooth Speaker from your mobile device
- Mobile device will display the Bluetooth Speaker as "HB146" in list of available devices. Select pair.
- Follow instruction on mobile device to complete pairing. If pass-code is needed, enter "0000".
- After the Mobile Device and Bluetooth Speaker connect, sound can be controlled from the Buttons "◀" "▶" and "⏸".
- If the mobile device has paired with a Bluetooth speaker previously, the match will finish automatically.

Technology Specifications

Bluetooth Ver.:	4.2
Frequency response:	150Hz-20KHz
Sensitivity:	80±2 dB
Signal to noise ratio:	≥70 dB
Battery capacity:	1000mAh
Battery voltage:	3.7V
Distortion:	1%
Charging time:	3 hour
Play time:	around 10 hours

Safety Information:

- Avoid contact with liquids and damp areas
- If speaker is damaged seek professional consultation, do not repair
- Do not take speaker apart to avoid electrocution
- Keep speaker away from flame
- Keep it away from children

WARNING

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by

one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

