

BP60A (Multifunction Printing Base) Product Instruction

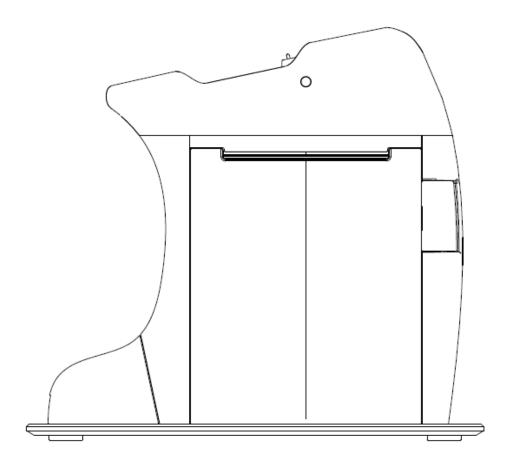


PAX Computer Technology (Shenzhen) Co., Ltd.


1. Appearance Instruction

Front

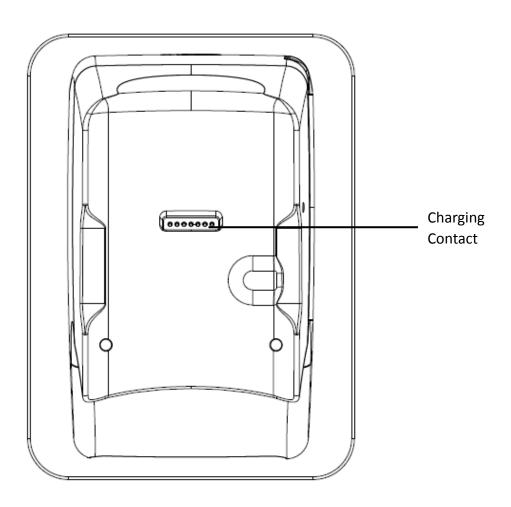


Back

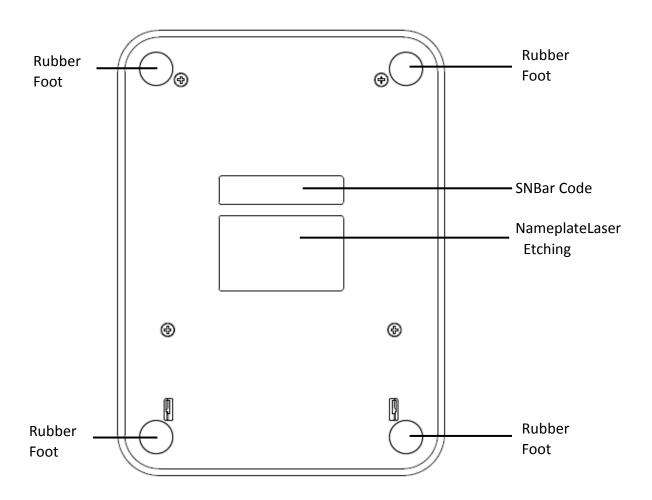

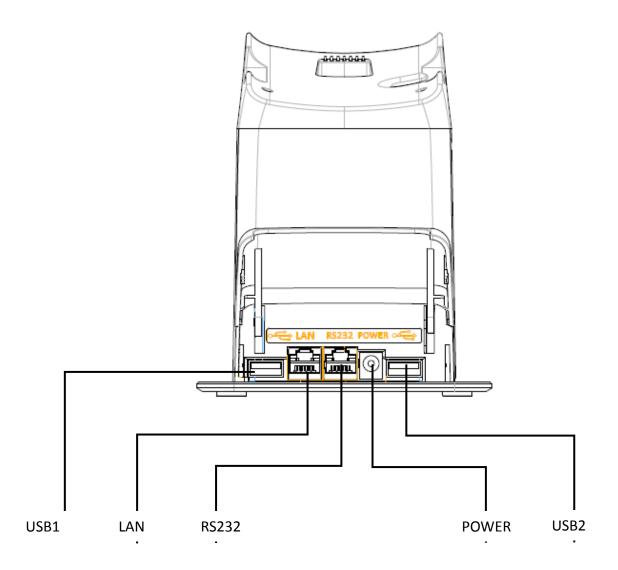

The matching diagram for A60 host and intelligent printer base is as follows:

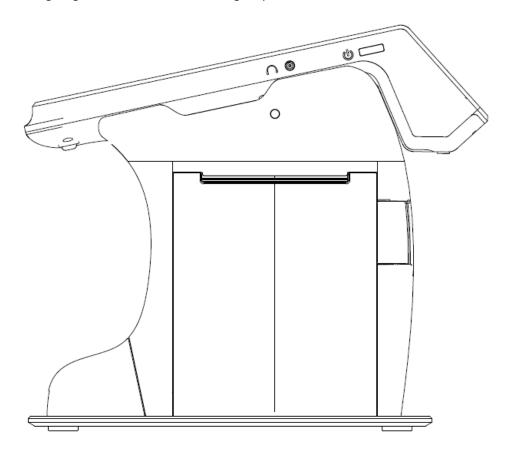

2. Installation Instruction

- 1) Connect the base's DC port with a 9V/1A power adapter.
- 2) Use a network cable to connect the base's LAN port with a gateway device that can access the Internet, such as router, LAN switch. (If not used, do not install.)
- 3) Put the paper roll (width: 58mm, diameter: 80 mm) into the paper storehouse.

3. Usage Instruction

- 1. Place A60 host (by pushing from bottom to top) on the base. Then A60 host will identify the base automatically, and switch to be charged through the base.
- 2. When the base's Ethernet connection is available, the A60 host will automatically switch the data connection to the Ethernet connection on the base.
- 3. It is supported that multiple A60 hosts are connected to the base printer through Bluetooth, and bills will be printed one by one.

Note: When using the Ethernet, do not vibrate the base and A60 host violently, so as to avoid the interruption of the data connection between the host and the base.

4. Terminal Specifications

Power supply: DC-9V@1A

Ethernet: 10/100Mbps adaptive network port

RS-232 serial port: Maximum transfer rate115200bps

USB port: USB2.0 HOST

Port Instruction:

DC port x 1: Power port

TYPE AUSB x 2:USB2.0 Host port, used to connect the scanner gun or keyboard

RS-232serial port x 1: RJ45-8P8C

Ethernet x 1:RJ45-8P8C

Working Environment: Working temperature: $0^{\circ}\text{C} \sim 50^{\circ}\text{C}$

Relative humidity: $10\% \sim 96\%$ (Non-condensing)

Storage Environment: Storage temperature: $-20^{\circ}\text{C} \sim 70^{\circ}\text{C}$

Relative humidity: $5\% \sim 96\%$ (Non-condensing)

Dimensions: 162mm * 119.0mm * 146.3mm (Length x width x height)

Weight: 550g

5. Precautions for Use and Installation

- 1) Do not damage the power adapter. Otherwise, they can't be used again.
- 2) Before connecting the power supply to the AC outlet, check whether the power supply of the socket is in compliance with the device specified voltage.
- 3) Make sure the base is switched on when connecting it to the power supply.
- 4) Avoid exposing the machine in sunshiny, hot, humid, or dusty environment.
- 5) Keep the machine away from liquid.
- 6) Do not insert foreign objects into any port of the device, which may damage the device.
- 7) Please contact the special maintenance personnel when the device fails. The user is not allowed to repair the device without authorization.
- 8) It is strictly forbidden to disassemble the machine in explosive dangerous places and use external interfaces.
- 9) Do not use wet cloth to clean the product.
- 10) You can operate the device only after being guided by the professional.

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept

any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Radiation Exposure Statement:

This equipment complies with FCC's RF radiation exposure limits for general population without SAR evaluation.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.