

MEGASTOMP BATTLE

AUDIO REALITY COSTUME

BATTERY INSTALLATION


- 1 Ensure that both the main box and the wand are powered off.
TO TURN OFF: Turn knobs counter-clockwise until you hear and feel a single click.
- 2 Loosen the screw in both battery compartment doors with a Phillips screwdriver. Remove the battery compartment doors.
- 3 Install 4 new 'AAA' batteries (not included) in the main box and 2 new 'AAA' batteries (not included) in the wand. Follow the diagram imprinted on the boxes. The use of new alkaline batteries is recommended for best performance.
- 4 Replace the battery compartment doors and tighten the screws with a Phillips screwdriver.

GETTING STARTED

- 1 Ensure the units are both turned off.
- 2 Clip the main box on pants and ensure it is securely attached.
- 3 Grip the wand in whichever hand feels comfortable.
- 4 Turn on the main box.
Note: Unit will calibrate upon power up. Please hold still for 2 seconds.
- 5 Turn on the wand.

TROUBLE SHOOTING TIP

If you are having trouble pairing the Wand and Main Box please power both off for 5 seconds before trying again. Only attempt to pair one set at a time.

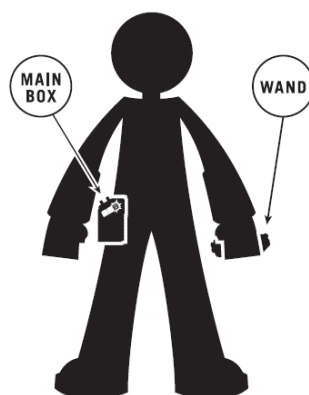

USAGE INSTRUCTIONS

- 1 Turn the knob to select the theme:

#	THEME		
0	METAL MAN	5	GIANT MONSTER
1	VIDEO GAME HERO	6	SPACE BATTLE
2	KUNG FU	7	MAGE
3	MODERN BATTLEFIELD	8	ZOMBIE ATTACK
4	GIANT ROBOT SMASH	9	SWORD FIGHT
- 2 Step to trigger basic walking sound effects.
- 3 Press the trigger or thrust the wand to trigger fighting sound effects.

AUTOMATIC SHUT-OFF

To preserve battery life, the Mega Stomp Battle will automatically power down after approximately 2 minutes without motion. The unit can be turned on again by turning the selector knob.

NEED HELP?

Call 1-888-GEEKSTUFF (1-888-433-5788)

Email <http://www.thinkgeek.com/brain/custserv/>

Live Chat <http://www.thinkgeek.com/help/chat/>

CAUTION:

1) The batteries used with this product are small parts, & should be kept away from small children who still put things in their mouths. If they are swallowed, promptly see a doctor and have the doctor phone American Association of Poison Control Centers (1-800-222-1222). In other countries, have the doctor call your local poison control center.

2) Always purchase the correct size and grade of battery most suitable for intended use.

3) Do not mix old & new batteries, alkaline, standard (Carbon-zinc) or rechargeable (Nickel-cadmium) batteries.

4) Clean the battery contacts and those of the device prior to battery installation.

5) Ensure the batteries are installed correctly with the regard to polarity (+ and -).

6) Always remove batteries if consumed or if product is to be left unused for a long time.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Caution:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.