
## **Operational Description - RFID Reader**

ARE i2 - 17X/RS232 ARE i2 - 23X/RS232/S ARE K1 - RS232

V7IAREI2LF-4 V7IAREI2LF-3 V7IAREK1-1

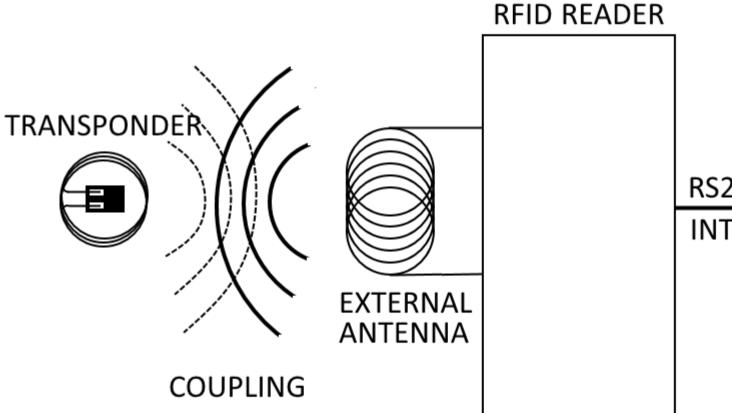

RS232 INTERFACE

For reading a passive transponder, the RFID reader is generating an electromagnetic field. This happens, depending on the operation mode, permanently or when the reader is receiving a command. The electromagnetic field is powering the transponder which is modulating its UID on the exitation field. The reader receives the signal, demodulates the UID and transfers it via RS232.