



# User Manual

By Firstech LLC, Version: 1.0

Applicable to the following remote(s):

2W902R-SP 2 Way 5 Button LED Remote  
&  
ANT-2WSP 2Way Antenna

Remote & Antenna	FCC ID Number (US Only)	IC ID Number (International Only)
2W902R-SP	VA5REC500-2WSP	7087A-2WREC500SP
ANT-2WSP	VA5A1000-2WSP	7087A-2WA1000SP

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions;  
This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following conditions;  
(1) This device may not cause harmful interference.  
(2) This device may accept any interference received, including interference that may cause undesired operation.  
**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

[WWW.COMPUSTAR.COM](http://WWW.COMPUSTAR.COM)

<b>Introduction</b> .....	3
<b>Warranty Coverage</b> .....	3
<b>Quick Reference</b> .....	4
Button Lock.....	4
Full or Half Paging Mode.....	4
Valet Mode.....	4
Remote Maintenance – Battery Replacement.....	4
2 Way Remote Button Functions .....	5
Function Button Menu .....	6
Remote Option Menu Table .....	6
<b>Remote LED Functions and Descriptions</b> .....	6
<b>Alarm LED Notifications</b> .....	7
1 Way Remote Button Functions .....	7
<b>General System Functions</b> .....	8
Sending Commands .....	8
Receiving Commands .....	8
Active Lock/Arm and Unlock/Disarm.....	8
Passive Lock/Arm.....	8
Automatic Transmission Remote Start Function .....	9
Manual Transmission Remote Start Function (Reservation Mode) .....	9
Trunk Release .....	10
Auxiliary Outputs/Window Roll-Down/Sliding Doors.....	10
Silent Arm/Disarm.....	10
Remote Mute .....	11
Shock Sensor On/Off .....	11
Automatic Button Lock .....	11
<b>Advanced System Functions</b> .....	12
Drive Lock/Ignition Controlled Door Locks.....	12
Turbo Timer Mode .....	12
2 <sup>nd</sup> Car Mode (Multiple Vehicle Control) .....	12
RPS Touch and RPS (Remote Paging Sensor) .....	12
Secure Valet Switch .....	15
Timer Start Mode.....	15
Cold/Hot Start Mode.....	15
<b>Remote Coding / Programming Routine</b> .....	16
Programming 2 Way 5 Button Remotes: .....	16
<b>Remote Start Error Diagnostic</b> .....	16
<b>Alarm Diagnostic</b> .....	17
<b>Limited Lifetime Warranty</b> .....	18

## Introduction

Thank you for purchasing a Firstech system for your vehicle. In order to truly enjoy the benefits of this system, we recommend that you thoroughly review the following manual. Please note that this manual applies to the 2 Way 5 Button LED Remote (2W902R-SP) Regardless of whether you purchased the ALARM IT, START IT, or MAX IT system. This manual also supports the 1WG7R-SP that is included in your new RF Kit. Please note that there are certain features listed in this manual that may not be available for your system. There may also be features listed in this manual that require additional installation or programming before they become active. If you have any questions or concerns please contact the original place of purchase. For further information you may also contact our customer support center at 888-820-3690.

## Warranty Coverage



**Caution:** The Manufacturer's warranty will be voided if this product is installed by anyone other than an Authorized Firstech dealer. For complete warranty details visit [www.compustar.com](http://www.compustar.com) or the last page of this manual. Firstech remotes carry a 1 year warranty from original date of purchase. CompuStar Pro remotes carry a 2 year warranty.

Warranty registration can be completed online by visiting [www.compustar.com](http://www.compustar.com). Please complete the registration form within 10 days of purchase. We do not include a mail in warranty registration card with each unit – registration must be done online. To verify that an authorized dealer installed your system, we highly recommend that you keep a copy of the original proof of purchase, such as the dealer invoice in a safe place.



## Quick Reference

### **Button Lock**

The 2W902R-SP comes equipped with automatic button lock. This requires you to tap any button to wake your remote up then tap the button for the function you are trying to activate. Button lock can be turned off in your remote's option menu.

### **Full or Half Paging Mode**


The 2W902R-SP is shipped in Half Paging Mode. This means that the remote will only receive 2 Way LED confirmations for remote start and lock and unlock. It will not receive 2 Way LED confirmations

when the alarm is triggered. To turn this feature on hold the ( + ) buttons for 2.5 seconds to enter the Remote Programming Menu. Tap the Lock <insert lock button icon> button to turn Full Paging on. The remote will beep twice and LED flash red. You are now in Full Alarm and Starter Mode.

### **Valet Mode**

When servicing or loaning your vehicle to others, the system should be placed in Valet Mode. Valet Mode prevents the system from remote starting and disables all alarm functions. **IMPORTANT:** While in Valet mode the remote will still control power lock and unlock systems. The parking lights will not flash.

#### ***The system can be put into valet one of three ways:***

1. Turn the vehicle's key to the ignition "on" position, tap the Function and Trunk buttons <insert function + trunk button icons> at the same time for a half second. The parking lights will flash once and/or siren chirp once to confirm the system is in valet mode. Repeat this process to take the system out of valet mode. The parking lights will flash twice and/or siren chirp once to confirm the system is out of valet mode. Please note the confirmation chirps from the 2 Way remote will be quieter in Valet Mode. 
2. If you do not have your remote control, you can put the system into valet by turning the ignition key "on" and then "off" five times within 7 seconds. The parking lights will flash once to confirm the system is in valet mode. Shortly after the first flash, the parking lights will flash twice. A remote control is required to take the system out of valet mode.
3. If your system is set up for a secure valet option (optional), you will not be able to put the system into valet until the proper code has been entered using the secure valet switch. The secure valet switch is the small button with bright blue LED on the front and if installed is the only way to override the alarm and/or remote start. **Until programmed, the default code is (3, 3).**

#### ***Removing System Out of Valet:***

Tap the <insert function + trunk button icons> for a half second to remove the system out of Valet. On starter and alarm/starter systems, you can turn the key to the Ignition On position and tap the foot brake 10 times. This will take your system out of Valet Mode. If this does not work you can also reprogram your remote(s). See Remote Coding/Programming Routine section for details.

### **Remote Maintenance – Battery Replacement**

The only regular maintenance this system requires is remote control battery replacement. No programming is required when replacing the battery.



### 2W902R-SP:

Turn the remote over and unlock the battery cover by sliding the clear tab up. Slide the battery cover off, revealing the AAA battery. **IMPORTANT:** Be sure to observe correct polarity when installing the battery.

### 1WG7R-SP:

Use a quarter or flat head screwdriver to pry the back cover off of the remote. You can insert the quarter or flat head in the small slot at the bottom of the remote by the keychain loop. Carefully pry off the back cover using caution that you do not damage the circuit board. Your battery size should be listed on the battery. Battery size: Two (2) CR2016) Replacements can be purchased from your local Firstech dealer or an electronics store.

## 2 Way Remote Button Functions

Button	Duration	Function / Description
<Insert Lock Icon>	Half second	Locks doors and if equipped, arms the alarm.
	4 seconds	Panic/vehicle locator (flashes vehicle's parking lights and sounds siren and horn).
<Insert Unlock Icon>	Half second	Unlocks doors and if equipped, disarms the alarm.
	2.5 seconds	Run time extender. Resets the run time for Turbo Timer or Remote Start.
<Insert Trunk Icon>	2.5 seconds	Trunk release. Triggers the trunk release output and opens the vehicle's trunk.
<Insert Key Icon>	Half second	Car Check (updates vehicle status on remote) / Secure Auxiliary
	2.5 seconds	Holding this button will start your vehicle. Repeat and this will shut your vehicle down.
<Insert Function Icon>		This button activates and deactivates multiple features. See the Function Button Menu table below for complete details.
<Insert Lock + Unlock Icon>	Half second	Turns siren chirps on/off (Note: With the siren chirps off, it will still sound in the event the alarm is triggered).
	2.5 seconds	Turns the shock sensor on/off. (ALARM IT or MAX IT systems only)
<Insert Function and Trunk Icon>	Half second	Valet mode (see Valet Mode Section for details)
	2.5 seconds	Option programming menu 1. For use during installation.
<Insert Function and Key Icon>	Half second	Activates timer start mode. Timer start mode has multiple programmable settings: duration settings, temperature settings and self start settings.
	2.5 seconds	Option programming menu 2. For use during installation.
<Insert Trunk Icon>	Half second	Activates passive arming (vehicle will arm/lock 30 seconds after the vehicle is disarmed)

and Key Icon>	2.5 seconds	Accesses Remote Option Menu. See Remote Option Menu Table for details.
---------------	-------------	--

## Function Button Menu

Button	Duration	<Insert Lock Icon>	<Insert Unlock Icon>	<Insert Trunk Icon>	<Insert Key/Start Icon>
<Insert Function Icon>	One Tap	Drive Lock On/Off	Turbo Timer On/Off	Auxiliary 1	Auxiliary 2

## Remote Option Menu Table

Feature	Turns Feature On or Off	Button Duration	Remote Chirp(s)	Function / Description
Enter and Exit Remote Menu	<insert Trunk + Key button icon>	2.5 Seconds	Three On   Three Off	Enters and Exits Remote Option Menu. The LED will flash purple.
2 Way Paging Display	<insert Lock icon>	Half second	One-Half Paging   Two-Full Paging	Determines whether your remote is used for Alarm or Start Only system. Set it to FULL for ALARM IT and MAX IT features. Set to HALF for START IT ONLY systems. If on, LED will flash blue. When turned off, the LED will flash red twice. <b>Important: The 2W902R-SP is defaulted in HALF for START IT systems. It must be changed to FULL for alarm systems.</b>
Silent	<insert Unlock icon>	Half second	One On   Two Off	Turns the silent mode on or off. If on, LED will flash blue. When turned off, the LED will flash red twice.
2 <sup>nd</sup> Car Mode	<insert Trunk icon>	Half second	One On   Two Off	Puts your remote into 2 <sup>nd</sup> Car Mode. You can control another vehicle with the same remote as long as it has the same RF Kit installed. If on, LED will flash blue. When turned off, the LED will flash red twice.
Automatic Button Lock	<insert Key/Start icon>	Half second	One On   Two Off	Locks all buttons on the remote automatically after one minute. Tap any button then the button(s) you would like to use to send a command from the remote to your vehicle. If on, LED will flash blue. When turned off, the LED will flash red twice.

## Remote LED Functions and Descriptions

Your remote will communicate to and from your vehicle while in range. The LED will change colors indicating transmission, confirmation, remote start run time and error confirmations.

Event	LED Color	LED Duration	Chirp(s)
Runtime Remaining: 100 Percent	Blue	Once every 5 seconds	Six times
Runtime Remaining: 66 Percent	Purple	Once every 5 seconds	N/A
Runtime Remaining: 33 Percent	Red	Once every 5 seconds	N/A
All command confirmations	Blue	Once or Twice depending on function	Once or Twice depending on function
All error confirmations	Red	Three LED flashes	Three chirps





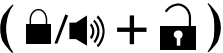
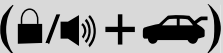
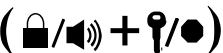
## Alarm LED Notifications







In the event that your alarm has been triggered, your remote will receive notifications based on what zone has been violated. Please see the following table for details and a short description of each notification. Please note that these notifications are only available with MAX IT and ALARM IT systems.

Zone	LED Color	Chirp(s)	Description
Door Trigger(s)	Purple and Red	Chirps for 30 seconds or until button tapped on remote	One of more of your door trigger zones have been violated.
Trunk Trigger	Purple and Red	Chirps for 30 seconds or until button tapped on remote	Your trunk trigger zone has been violated.
Hood Trigger	Purple and Red	Chirps for 30 seconds or until button tapped on remote	Your hood trigger zone has been violated.
Ignition On Trigger	Purple and Red	Chirps for 30 seconds or until button tapped on remote	Your alarm is triggered when your vehicle's ignition is turned on.
DAS Tilt Trigger	Purple and Red	Chirps for 30 seconds or until button tapped on remote	Your alarm is triggered when your DAS detects tilt motion
Prewarn Shock Sensor	Blue and Red	8 Chirps	Your prewarn shock sensor zone has been violated.
Full Shock Sensor	Purple and Red	Chirps for 30 seconds or until button tapped on remote	Your full trigger shock sensor zone has been violated.

## 1 Way Remote Button Functions

<please use 1WG7R-SP icons below>

Button	Duration	Additional Programming Required	Function / Description
	Half second	no	Locks doors and/or arms alarm.
	3.5 seconds	no	Panic/vehicle locater (flashes vehicle's parking lights and sounds siren and horn).
	Half second	no	Unlocks doors and/or disarms alarm.
	Half second	no	Aux 1. Triggers the auxiliary 1 output (most commonly used for rear defrost or window roll-down).
	2.5 seconds	no	Trunk release. Triggers the trunk release output and opens the vehicle's trunk.
	Half second	no	Aux 2. Triggers the auxiliary 2 output (most commonly used for rear defrost or window roll-down).
	2.5 seconds	no	Activates the remote start. Repeat and remote start will shut off.
	Half second	no	Turns siren chirps on/off (Note: With the siren chirps off, it will still sound in the event the alarm is triggered).
	2.5 seconds	no	Option programming menu 1 - Installers Only.
	Half second	no	Valet mode (see Valet Mode Section for details)
	2.5 seconds	no	Turns the shock sensor on/off. (Alarm or Alarm/Starter systems only)
	Half second	yes	Drive lock. Activates ignition controlled door locks.

	2.5 seconds	no	Option programming menu 2 - Installers Only.
(  +  )	Half second	no	Activates passive arming (vehicle will arm/lock 30 seconds after the vehicle is disarmed)
(  +  )	Half second	yes	Activates timer start mode. Timer start mode has multiple programmable settings: duration settings, temperature settings and self start settings.
(  +  )	Half second	yes	Activates the built in Turbo Timer function. Additional installation is required when using this feature on automatic transmission vehicle's.
	2.5 seconds	no	Car Check / Secure Auxiliary


If you would like additional information on the functionality of your 1 Way companion remote, please visit the support page at [www.compustar.com](http://www.compustar.com) to download the full user manual.

## General System Functions


The remote transmitter functions are predetermined and programmed from the factory. The five button configuration allows for many functions to be performed through a series of tapping and/or holding buttons.

### ***Sending Commands***




When in range and a command has been sent the remote will beep and unique LED will flash blue or red.

For example, to send a remote start command from the pager, hold the Key/Start  button for 2.5 seconds. The remote will beep confirming the command has been sent and that the remote is in range. Once the vehicle has successfully remote started, the remote will receive a three beep and LED command indicating the vehicle is running.

### ***Receiving Commands***




The remote pager will receive commands indicating the status of the vehicle, confirmation of sending commands and remote start notifications. For example, after sending the lock command, the pager will receive LED and chirp signals confirming that the vehicle has been successfully locked/armed. To see if your pager is in range, tap the  button for a half second – if the remote receives an audible and LED confirmation then it is in range.

### **Active Lock/Arm and Unlock/Disarm**

Tap the Lock  button for a half second to lock/arm your vehicle. Tap the Unlock  button to unlock/disarm your vehicle. If equipped this will also activate your starter kill and anti grind feature. Also you will not be able to start your vehicle with the key until unlock/disarm. 

**IMPORTANT:** If the alarm has been triggered (Siren is sounding, parking lights flashing, and horn honking), you must wait until the remote pager has been paged before disarming the alarm – the first button tap will shut off the alarm and the second will unlock/disarm the system.

### **Passive Lock/Arm**


The system can be configured to passively lock and arm the vehicle. Put the system in passive by tapping the Trunk + Key Start buttons ( + ) button for a half second.  The remote will beep once and the LEDs will illuminate to indicate the system is in passive lock and



arming mode.

While in passive mode, the system will lock and arm the alarm 30 seconds after the last door is closed. As an indicator that the vehicle is going to passively lock and arm, the remote and siren will chirp once and the parking lights will flash once at both 10 and 20 seconds prior to passively locking and arming. If you want the system to passively arm and not passively lock, ask your local Firstech dealer to turn *Option 1-8* to setting *II*.

## **Automatic Transmission Remote Start Function**

Hold the Key/Start  button for 2.5 seconds to remote start an automatic transmission vehicle. If you are in range and the vehicle is ready to remote start, the remote will beep once and LED flash blue indicating that the remote start command has been successfully transmitted.

If you are in range and the remote beeps three times, there is a remote start error. Refer to the “remote start error diagnostic” on the last page of this manual for details.

Upon receiving confirmation that your vehicle is running, the remote LED will flash the and remote beep to show the run time. The remote start run time can be programmed for 3, 15, 25, or 45 minutes - ask your local Firstech dealer to adjust *Option 2-7* if you would like a run time other than 15 minutes (default).



88:88

**IMPORTANT:** Your vehicle’s key must be inserted into the ignition and turned to the “on” position prior to driving your vehicle. If the foot brake is depressed prior to the key being in the “on” position, the vehicle will shut off.

## **Manual Transmission Remote Start Function (Reservation Mode)**

In order to remote start a manual transmission vehicle, the system must first be set in Reservation Mode. Reservation Mode must be set each and every time you want to remote start a manual transmission vehicle. The purpose of Reservation Mode is to leave the transmission in neutral before exiting the vehicle.

### **IMPORANT:**

- The transmission must be left in the neutral position.
- The vehicle’s windows must be rolled up.
- The vehicle’s door pins must be in working order.
- Do not install this remote start on a manual transmission vehicle that has a convertible or removable top.
- Do not set reservation mode or remote start with people in the vehicle.

### ***Activating Reservation Mode***

**STEP 1:** While the vehicle is running, place the transmission in neutral, set the emergency / parking brake, and remove pressure from the foot brake.

**STEP 2:** Remove the key from the vehicle’s ignition. The vehicle’s engine should remain running even after the key has been removed. If the vehicle does not remain running visit your local authorized Firstech dealer for service.

**STEP 3:** Exit the vehicle and close the door. The vehicle’s doors will lock/arm and then engine will shut down. If the vehicle’s engine does not shut off, your door trigger may be functioning improperly. Do not use the remote start feature and take your vehicle to a local authorized Firstech dealer for service.

Once the vehicle shuts off your system is in reservation mode and the vehicle is ready to safely remote start.

**IMPORTANT:** By default, the system will lock/arm the vehicle upon setting reservation mode. Take care to not lock your keys inside the vehicle.

### ***Canceling Reservation Mode***

Reservation mode will be cancelled for the following reasons;

- You did not activate the parking brake prior to turning off the ignition.
- You pressed the foot brake after the key was removed from the ignition.
- You released the parking brake after the key was removed from the ignition.
- You entered valet mode, opened the vehicle's door, hood, trunk or set off the alarm.

### ***Reservation Mode Settings***

Reservation mode settings can be programmed with *Option 1-6*. It is recommended that reservation mode settings are programmed by your local authorized Firstech dealer.


**Default 1:** Locks doors when Reservation Mode is set.

**Option 2:** Hold Key/Start button to initiate Reservation Mode

**Option 3:** Reservation mode sets 10 seconds after the last door is closed, as opposed to immediately. This option will allow you to access the vehicle's rear doors, trunk or hatch prior to the system setting reservation and passively locking/arming.

**Option 4:** Shuts motor off before locking doors.


### **Trunk Release**

Hold button  for 2.5 seconds to release the trunk or hatch. If you are in range, the remote will beep twice and the LEDs will flash indicating that the trunk release command has been successfully transmitted. **IMPORTANT:** Trunk release is an optional vehicle feature that may require additional parts and labor.




### **Auxiliary Outputs/Window Roll-Down/Sliding Doors**

Your system is equipped with two additional outputs that can be configured to control windows, open power sliding doors, open a power sliding moon roof, or even turn on a rear defroster. These outputs can be configured for pulsed, timed or latched settings. Your authorized Firstech dealer can set these outputs up accordingly. Using auxiliary outputs to control additional vehicle functions will require additional parts and can be rather labor extensive.




Tap the Function <insert icon> button for a half second followed by the Trunk button  to trigger auxiliary output 1. Tap the Function <insert icon> button for a half second followed by the Key/Start <insert icon> button to trigger auxiliary output 2. The remote will beep once and parking lights flash, indicating that the auxiliary output(s) have been triggered.



By default, the system is in secure auxiliary mode, which requires you to tap the Key/Start button  for a half second prior to triggering auxiliary 1 or 2. To turn off secure auxiliary, ask your authorized Firstech dealer to turn on *Option 4-5* to setting *II*



### **Silent Arm/Disarm**

Upon lock/arm and unlock/disarm, you can eliminate vehicle's audible confirmation by muting the siren. Normally, the siren will chirp once to indicate the system is locked/armed and twice to indicate the system is unlocked/disarmed. To mute the siren tap buttons   + 





simultaneously for a half second.


**IMPORTANT:** Even when the siren is muted, it will still go off in the event the alarm is triggered.



## Remote Mute

To silent your remote you must turn on Remote Mute on;



**STEP 1:** Enter remote programming mode by holding the Trunk and Key/Start buttons ( + ) simultaneously for 2.5 seconds. The remote will beep 3 times and the LED will flash purple indicating that you have successfully entered programming mode.



**STEP 2 :** Tap the Unlock  button. The LED will flash blue indicating that silent mode is on. Tap the Unlock button again to turn Remote Mute off. Two chirps and red LED flashes indicates Remote Mute is off.

**STEP 3:** Exit remote programming by holding down the Trunk and Key/Start buttons ( + ) simultaneously for 2.5 seconds. The remote will beep indicating that you have successfully exited programming. Your remote's LED will still illuminate.

## Shock Sensor On/Off

Hold the Lock and Unlock buttons (/ ) simultaneously for 2.5 seconds to turn the shock sensor on and off. The remote will beep twice and LED flash twice to confirm the shock sensor is off. The remote will beep once and LED flash once to confirm the shock sensor is on.







**IMPORTANT:** Turning off the shock sensor also turns off any optional sensors.



Adjusting the shock sensor sensitivity is done at the actual sensor, which is generally mounted somewhere under the vehicle's dashboard. The higher the number on the dial means greater sensitivity to impact. The recommended dial setting for most vehicles is somewhere between 2 & 4. If you are testing your sensor, please note that the shock sensor does not recognize impact for 30 seconds after the system has been armed.

## Automatic Button Lock

Your remote comes with an automatic button lock feature. This feature automatically locks all four buttons on your remote after one minute. To unlock just tap any button then tap or hold the button(s) for the command you would like to send. This feature must be turned on in the Remote Option Menu.

**STEP 1:** Enter remote programming mode by holding the Trunk and Key/Start buttons ( + ) simultaneously for 2.5 seconds. The remote will beep 3 times and the LEDs will flash purple on your remote indicating that you have successfully entered programming mode.


**STEP 2 :** Tap the Start  button. One chirp and LED flash indicates that Automatic Button Lock is on. Tap the Start  button again to turn Auto Button Lock off. Two chirps and LED flashes indicates the feature is off.

**STEP 3:** Exit remote programming by holding down the Trunk and Key/Start buttons ( + ) simultaneously for 2.5 seconds. The remote will beep indicating that you have successfully exited programming.

## Advanced System Functions

The following section reviews advanced system functions. Many of these functions require multiple steps or additional programming by your local authorized Firstech dealer to be active.

### Drive Lock/Ignition Controlled Door Locks

Tap the Function button <insert icon> once followed by the Lock button  to turn the Drive Lock on and off. (also known as ignition controlled door locks) The remote will beep once and the LED flash once to confirm that drive lock mode is activated. The remote will beep twice and LED flash twice to confirm drive lock is off.

**DRIVE  
LOCK**

**IMPORTANT:** Drive lock mode requires the dealer turn on *Option 1-9*. Drive lock has two settings;

**Default 1:** Off

**Option 2:** Locks the doors when the ignition is on and after the brake is depressed.


**Option 3:** locks the doors when the RPM's have reached two times that of idle speed (this setting requires that a tachometer wire is connected).

With both settings, the doors will unlock when the ignition is turned off. If using this feature on a manual transmission vehicle, the doors will unlock upon setting the emergency / parking brake.

### Turbo Timer Mode

The built in turbo timer keeps the vehicle's engine running for either 1, 2, or 4 minutes (programmable from dealer) after the vehicle key has been removed from the ignition. This feature will keep oil running through the turbo system to allow for appropriate cooling time.









Tap the Function button <insert icon> once followed by the Unlock button  to turn turbo mode on or off. The remote will beep once and LED flash once to confirm that turbo mode is activated. Repeat to turn turbo timer off. The remote will beep twice and LED flash twice to confirm turbo mode is off.



**IMPORTANT:** To utilize this feature, the emergency / parking brake wire must be connected to the Firstech system. Consult your local authorized dealer for installation.

### 2<sup>nd</sup> Car Mode (Multiple Vehicle Control)

This remote has the ability to operate a 2<sup>nd</sup> vehicle with the same system. **Note:** When in 2<sup>nd</sup> Car Mode that your LED will flash blue when the buttons are tapped. Hold buttons



( + ) for 2.5 seconds to enter the Remote Option Menu. Tap the Trunk  Button to turn 2<sup>nd</sup> Car Mode on. Your remote will chirp once for on and twice for off. The remote's LED will illuminate blue confirming that 2<sup>nd</sup> car mode is activated. The remote will remain in 2<sup>nd</sup> Car Mode until you hold the ( + ) buttons for 2.5 seconds, enter the Remote Option Menu and tap the Trunk 

Button. The remote will beep twice and you must hold the Trunk and Key/Start buttons ( + ) to save the Remote Option Menu changes.

**IMPORTANT:** 2<sup>nd</sup> car mode requires the remote to be programmed to a 2<sup>nd</sup> vehicle that is equipped with the same remote kit.

## **RPS Touch and RPS (Remote Paging Sensor)**

The RPS is an optional feature. The car call/RPS feature uses a small sensor that is mounted on the inside of your windshield.



### **RPS Touch (Remote Paging Sensor)**

The new RPS touch has multiple features including: remote paging, 4 digit pin unlock/disarm, and arm/lock. All features are operated with a simple touch of the sensor.

Please have your installer program Option 3-16 to Setting 2.

RPS Touch and car call functions do not require programming, however in order to unlock/disarm your vehicle you must program a 4 digit passcode using the instructions below:

**STEP 1:** Choose your RPS Touch 4 digit code. '0' is not available.

**STEP 2:** Turn ignition to the 'ON' position and leave driver's door open.

**STEP 3:** Hold your finger over the 'Red Circle' icon for 2.5 seconds.

**STEP 4:** When the siren chirps and LEDs flash in a circular pattern, tap on your first number. (Hold the number for 2.5 seconds to choose 6 through 10.) After choosing your first number you will get one siren chirp and LEDs will flash in a circular pattern.

**STEP 5:** Repeat Step 4 until all four digits are set. You will get 1 siren chirp and 1 parking light flash. Repeat Steps 2 - 5 if you get 3 chirps and light flashes. Your RPS Touch is now programmed.

### **Alarm rearm and lock**

To rearm hold your finger on the 'Red Circle' for 2.5 seconds.

### **Alarm disarm and unlock**

To disarm hold your finger over the 'Red Circle' for 2.5 seconds. Once the LEDs start their circular pattern, enter your 4 digit code. (Refer to Step 4 above.) Two seconds after entering the 4th digit, your system will disarm.

### **2 Way LCD remote paging**

To page a 2 Way LCD remote just tap the 'Red Circle' twice.

### **Touch Panel Sensitivity**

To change touch sensitivity open the driver's door, hold the button on the back of the RPS Touch until the LEDs go out. Release button and tap again. The number of solid LEDs represent sensitivity of touch, 1 being the lowest, 5 the highest.

### **RPS Touch On or Off**

You can turn the RPS Touch off from your remote. Just follow the instructions below:

**STEP 1:** Enter remote programming mode by holding down the Trunk and Key/Start buttons <insert icon> simultaneously for 2.5 seconds. The remote will beep once and the LCD will read "REMOTE MENU" indicating that you have entered programming mode.

**STEP 2 :** Scroll through the remote options by taping the Function button <insert icon>. Once the LCD reads "RPS-ON" tap the Lock button <insert icon> to turn this feature on. The LCD will read "RPS-OFF"

**STEP 3:** Exit remote programming by holding down the Trunk and Key/Start buttons <insert icon> simultaneously for 2.5 seconds. The remote will beep indicating that you have successfully exited programming. The vibration icon will remain illuminated on the LCD indicating the remote is in remote mute/vibration mode.

### **RPS (Remote Paging Sensor) Unlock/Disarm**

RPS and car call functions do not require programming, however in order to unlock/disarm your vehicle you must program a 4 digit passcode using the instructions below:

**STEP 1:** Disarm/unlock the alarm (remote must be programmed first) and choose a 4 digit code. You can not have zeros.

**STEP 2:** Turn ignition key to the "on" position and leave the driver's door open.

**STEP 3:** Knock on the windshield in front of the RPS a total of 5 times (each time you knock the LED on the RPS will flash RED). The LED will begin to flash rapidly in BLUE with successful completion of this step.

**STEP 4:** Enter the first digit of the desired four digit pass code by knocking on the windshield in front of the RPS the desired number of times. For example, to enter 3, knock on the sensor 3 times (each time you knock the LED will flash RED) then wait.

**STEP 5:** The LED on the RPS will confirm your first number by flashing BLUE slowly. Once the LED begins to flash rapidly in BLUE, enter your second number by repeating step 4.

**STEP 6:** Repeat steps 4 & 5 to enter all four numbers.

**STEP 7:** Turn the ignition OFF - the RPS disarm/unlock passcode is now programmed. Follow steps 3 – 5 to enter your disarm/unlock code.

#### **Alarm rearm and lock**

To rearm, knock on your sensor 5 times.

#### **Alarm disarm and unlock**

To disarm, knock on your sensor 5 times. Wait for the Blue LEDs to flash rapidly. Follow STEP 4 and 5 above to enter your 4 digit passcode.

#### **2 Way LCD remote paging**

To page a 2 Way LCD remote just knock on the RPS twice.

#### **Knock Panel Sensitivity**

To change knock sensitivity, disarm the system and adjust the switch on the rear of the RPS. The larger the circle, the more sensitive the knock sensor is.

## **Secure Valet Switch**

The optional Secure Valet Switch prevents the alarm from being put into valet mode through cycling the ignition on/off five times. The Secure Valet Switch is more secure than traditional toggle / valet switches because it requires a two digit code. **IMPORTANT:** The first two digits of the RPS unlock/disarm pass code will be the default pass code for the secure valet – you do not need to program them independently. If you are not using the RPS unlock, following the below procedures to program your secure valet pass code;

**STEP 1:** Turn on *Option 3-10-III*. (Dealer programmed option)

**STEP 2:** Turn ignition key to the “on” position.

**STEP 3:** Hold down the valet switch for 1.5 seconds. The LED on the valet switch will begin to flash rapidly with successful completion of this step.

**STEP 4:** Enter the first digit of the desired two digit pass code by depressing the switch the number of times that coordinates with the desired first number. For example, to enter 3, depress the switch 3 times, then wait.

**STEP 5:** The LED will confirm the first number by flashing BLUE slowly. Once the LED begins to flash rapidly, enter your second number by repeating step 4.

**STEP 6:** Turn the ignition off - the Secure Valet Switch is now programmed. Follow steps 3 – 5 to enter your Secure Valet code.

## **Timer Start Mode**

Timer start mode is used to cool or warm the vehicle automatically without use of the key or the remote. While engaged, timer start will activate even while the remote is out of range. **TIMER**  
Tap the Function + Key/Start buttons <insert icons> for a half second to activate timer start mode. The remote will beep once and LED flash once. Repeat the same step to turn off timer start mode. Timer start mode will be cancelled any time the vehicle is started manually or remotely. To change from the default setting to optional settings, see your place of purchase.

## **Cold/Hot Start Mode**

Cold/hot start mode works in conjunction with timer start mode (see above) and the temperature sensor. It allows you to configure your timer start feature to check the vehicle’s temperature prior to starting. All of these options require programming from your local dealer.

## **Anti Jacking Mode**

Your system has a mode that requires you to keep your remote separate from your key chain. This feature also requires additional labor. Please consult your installer for more details. The Anti Jacking mode allows you to safely disable your vehicle once a thief has driven off with your property. If you are car jacked and still have your remote, you can panic the system by holding the Lock button <insert icon> down for 4 seconds. The siren will sound for 30 seconds and the vehicle will shut down.

## **More Optional Sensors**


If you purchased an Alarm or Alarm and Remote Start system you have the ability to add optional sensors from Firstech. You have the ability to protect your investment by adding a battery back up system to protect main power to your alarm or a tilt sensor to protect expensive rims and tires.

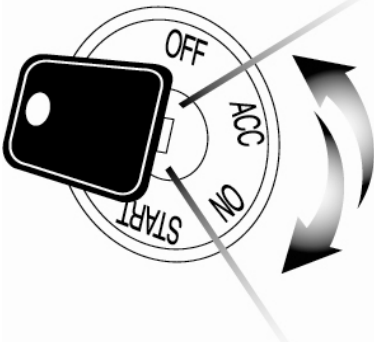
## Remote Coding / Programming Routine

**IMPORTANT:** Every Firstech remote must be coded to the system prior to performing any operations. All remotes must be coded at the same time.


### Programming 2 Way 5 Button Remotes:

**STEP 1:** Activate Valet/Programming mode by manually turning the ignition key *on* and *off* (between the Acc & On positions) five times within 7 seconds. The vehicle's parking lights will flash once with the successful completion of this step.

**STEP 2:** Within 2 seconds after cycling the ignition for the 5<sup>th</sup> time, tap the Lock button  on **2 way remotes** or the (lock) button on **1 way remotes** for a half second. The parking lights will flash once to confirm the transmitter has been coded.



**Exiting Programming:** Programming is a timed sequence. The parking lights will flash twice signaling the end of programming mode.

**Programming Multiple Remotes:** After the confirmation flash given in step 2, code additional remotes by pressing button  on **2 way remotes** or the (lock) button on **1 way remotes**. The parking lights will flash once confirming each additional remote. All systems can recognize up to three remotes.

## Remote Start Error Diagnostic

If the remote start fails to start the vehicle, the parking lights will flash three times immediately. Following those three flashes the parking lights will flash again corresponding to the error table.

Number of Parking Light Flashes	Remote Start Error
1	Motor running
2	Key in ignition on position
3	Door open (manual transmission only)
5	Foot brake on
6	Hood open
7	Reservation off (manual transmission only)
8	Tach or voltage sensing failure
9	DAS sensor movement
10	System is in Valet Mode

We recommend that you do not attempt any repairs on your remote starter. Contact your dealer or call us directly.



## Alarm Diagnostic

While the alarm is armed, the LED will blink slowly. While the siren is going off, the LED will indicate which specific zone was triggered.

Priority	Situation	LED On Duty
1	Door/Hood/Trunk/Key Triggered	2 flash, rest, then repeat
2	2 <sup>nd</sup> Shock Triggered	3 flash, rest, then repeat
3	Optional Sensor Triggered	4 flash, rest, then repeat
4	PANIC	5 flash , rest, then repeat

Upon disarming the alarm after it has been triggered, the amount of siren chirps will indicate the specific zone.

# of Chirps	Situation
4	Optional Sensor Triggered
5	2 <sup>nd</sup> Shock Triggered
6	Door/Hood/Trunk/Key Triggered

## Limited Lifetime Warranty

Firstech, LLC Warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for the period of time that the original owner of this product owns the vehicle in which it is installed; except that the remote controller unit for the period of one year from the date of installation to the original owner of this product. When the original purchaser returns the product to the retail store where it was purchased or prepaid postal to **Firstech, LLC., 21903 68th Avenue South, Kent, WA 98032, USA** within the warranty period, and if the product is defective, Firstech, LLC, will at its option repair or replace such.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH. THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO, THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OR PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD. NEITHER THE MANUFACTURER OF ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights, which vary State to State.

Firstech, LLC. is not RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE that may or may not resulted from the operation of Compustar, Compustar Pro, Arctic Start, Vizion, or NuStart. NOT WITH STANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

### Your Warranty

The product's warranty is automatically void if the date code or serial number is defaced, missing or altered. This warranty will not be valid unless you have completed the registration card at [www.compustar.com](http://www.compustar.com) within 10 days of purchase.