

FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

IC

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

This equipment complies with IC Nerve Stimulation Exposure limits set for an general public environment and meets RSS-102 of the IC radio frequency (RF) Exposure rules.

Separation distance at least 3cm should be maintain from the device to user hand/foot during operation.

Separation distance at least 10cm should be maintain from the trunk of the body would rest in relation to the device under test.

QUICK START


BUTTON	FUNCTION DESCRIPTION
	Tap button 1 time to lock and/or arm your system.
	Double tap button to unlock and/or disarm your system.
	Hold button for 2.5 seconds to activate OR cancel the remote start sequence.
	1 quick TAP THEN HOLD for 5 seconds to enable or disable proximity arming function.


REMOTE FEATURES

NOTE: Passive arming feature 1-08 option 4 (proximity locking) must first be activated on the system by the install tech




FEATURE	FUNCTION/DESCRIPTION
Proximity Lock	Once the proximity lock feature is enabled, the system will search for the remote once the vehicle is off and all zones are closed. Once the remote has left proximity of the antenna the system will arm/lock. NOTE: If the remote is within range of the antenna for 5 minutes the proximity lock feature will stop until a door is opened or vehicle is started.
Proximity Unlock	15 seconds after the system is armed, the proximity antenna will begin to search for the remote. When the remote moves within range of the proximity antenna (approx. 4-6 ft) the system will disarm/unlock automatically. NOTE: The Orange LED on the remote will flash when the remote is within range of the proximity antenna

To reprogram your remote, cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. Then tap the Lock button on your remote. Repeat for any additional remotes. All remotes must be programmed during one sequence. If you receive two parking light flashes, your Compustar has exited remote programming mode and you must retry.

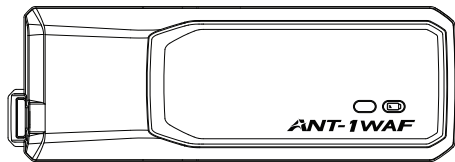Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for ser's manual.




QUICK START

LEDs	DESCRIPTION
 Solid	The system is locked and ready to be armed.
 Blinking	The system is armed / passive arming is on.
 Solid (10sec)	The remote battery is low. Please replace the battery in the remote. (Activated upon the initial "Doors unlock by 1WS2R-AF and Key On" sequence)


Description of antenna module installation position


 
<< Antenna Module >>



<< Harness >>

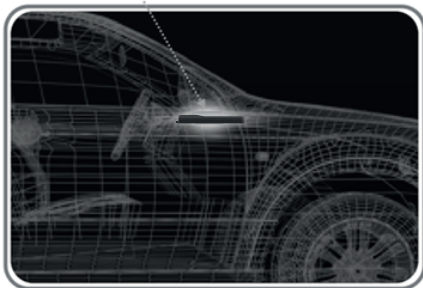

<< Installation of Antenna Module >>

Note : The antenna module is mounted up in the vehicle's dashboard.