



# User Manual

By Firstech LLC, Version: 1.0

Applicable to the following remote(s);  
2WQ9R-FM 2Way 5Button LCD Remote



Model Name	FCC ID	IC Number
2WQ9R-FM	VA5RCL300-2WFX	7087A-2WRCL300FX
ANT-2WFMX	VA5JA1000-2WFMX	7087A-2WA1000FX

[WWW.COMPUSTAR.COM](http://WWW.COMPUSTAR.COM)

## WARNING

It is the responsibility of the vehicle operator to ensure that their vehicle is parked in a safe and responsible manner.

- (1) When leaving the vehicle, it is the user's responsibility to ensure that the gearshift lever is in "Park" in order to avoid accidents upon remote starting. (Note: Make sure that the automatic vehicle cannot start in "Drive".)
- (2) It is the user's responsibility to ensure that the remote starter is disabled or put into valet mode before servicing.

## FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

## FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## ISED COMPLIANCE

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

## FCC/ ISED Radiation Exposure Statement

**For ANT-2WFMX2:** This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

## RF Specification

2WQ9R-FM : 433.92 MHz / FSK

ANT-2WFMX : 433.92 MHz / FSK

## Introduction

Thank you for purchasing a Firstech system for your vehicle. Please take a minute to review this entire manual. Note that this manual applies to the 2 Way 5 Button Liquid Crystal Display Remote (2WQ9R-FM) whether you purchased the ALARM IT, START IT, or MAX IT system. There are certain features listed in this manual that may not be available for your system. There may also be features listed in this manual that require additional installation or programming before they are active.

If you have any questions or concerns please contact the original place of purchase. For further information you may also contact our customer support center at 888-820-3690.

## Warranty Coverage

Caution: The Manufacturer's warranty will be voided if this product is installed by anyone other than an Authorized Firstech dealer. For complete warranty details visit [www.compustar.com](http://www.compustar.com) or the last page of this manual. Firstech remotes carry a 1 year warranty from original date of purchase.

Warranty registration can be completed online by visiting [www.compustar.com](http://www.compustar.com). Please complete the registration form within 10 days of purchase. We do not include a mail in warranty registration card with each unit – registration must be done online. To verify that an authorized dealer installed your system, we highly recommend that you keep a copy of the original proof of purchase, such as the dealer invoice in a safe place.

## Quick Reference








### Remote Maintenance – Battery Replacement

The only regular maintenance this system requires is remote control battery replacement. No programming is required when replacing the battery.




Turn the remote over and unlock the battery cover by sliding the black button push. Slide the battery cover off, revealing the AAA battery.

**IMPORTANT:** Be sure to observe correct polarity when installing the battery.

### 2 Way Remote Button Functions

Button	Duration	Description
	Short(0.5 sec)	Locks doors and if equipped, arms the alarm.
	Double	Unlocks doors and if equipped, disarms the alarm.
	Long(2.5 sec)	Holding this button will start your vehicle. Repeat and this will shut your vehicle down.
	Short(0.5 sec)	Car Check (updates vehicle status on remote pager) / Secure Auxiliary / Temperature Display / Vehicle Voltage Display / Remote Voltage Display
	Double	Accesses Remote Menu (Passive arming, Alert mode, etc) See Remote Menu Table for details.
	Short(0.5 sec)	Locks doors and if equipped, arms the alarm.
	Double	Used as Auxiliary 1 and Sliding door right, Defrost function according to the setting of AUX 1 Config in the remote menu. Not available when set to OFF in AUX 1 Config of the remote menu.
	Long(2.5 sec)	Panic/vehicle locator (flashes vehicle's parking lights and sounds siren and horn).
	Short(0.5 sec)	Unlocks doors and if equipped, disarms the alarm.
	Double	Used as Auxiliary 2 and Sliding door left, Head lights function according to the setting of AUX 2 Config in the remote menu. Not available when set to OFF in AUX 2 Config of the remote menu.
	Long(2.5 sec)	Run time extender. Resets the run time for Turbo Timer or Remote Start.
	Short(0.5 sec)	LCD View
	Long(2.5 sec)	Trunk release. Triggers the trunk release output and opens the vehicle's trunk.
	Long(2.5 sec)	Option programming menu 1. For use during installation.
	Long(2.5 sec)	Option programming menu 2. For use during installation.

## Function Button Menu






 
 
Button	Duration	Description
F	Double	Enter remote menu
	Long(2.5 sec)	Exit remote menu
F or 	Short(0.5 sec)	Remote menu selection and operation.
	Short(0.5 sec)	Move to the up of the remote menu
	Short(0.5 sec)	Move to the down of the remote menu

## Remote Option Menu Table

Feature	Select		Function / Description
Passive arming	Passive on Passive off	Passive on Passive off	Passive arming On/Off
Alert mode	Full Half	Full Half	Sets your remote for Alarm or Starter Only systems. Set to FULL for ALARM IT and MAX IT features. Set to HALF for START IT ONLY systems.
Valet mode	Valet on Valet off	Valet on Valet off	Valet mode On/Off
AUX 1 config	AUX 1 off AUX 1 Sliding door R	AUX 1 off AUX 1 Sliding door R	Used as Auxiliary 1 and Sliding door right, Defrost function according to the setting of AUX 1 Config in the remote menu.
AUX 2 config	AUX 2 off AUX 2 Sliding door L	AUX 2 off AUX 2 Sliding door L	Used as Auxiliary 2 and Sliding door left, Head lights function according to the setting of AUX 2 Config in the remote menu.
AUX Mode	AUX mode off AUX mode on	AUX mode off AUX mode on	Turns your Auxiliary Extender feature on or off.
Language	English Français Español	English Français Español	Changes LCD display language from English to French or Spanish.
Temperature	Temperature °F Temperature °C	Temperature °F Temperature °C	Changes the temperature readout from Fahrenheit to Celsius. If the temperature setting is set to off, the temperature is not displayed.
Turbo timer	Tourbo timer on Tourbo timer off	Tourbo timer on Tourbo timer off	Turbo On/Off

Sound/Vibration	Sound 3	Sound 3	Turns the silent mode on or off. Adjust the volume of your remote. 1 is the lowest. 3 is the highest.
	Sound 2	Sound 2	
	Sound 1	Sound 1	
	Vibration	Vibration	
Screen timeout	Screen timeout 8sec.	Screen timeout 8sec.	Adjusts the time your LCD will stay on after a button is pressed.
	Screen timeout 4sec.	Screen timeout 4sec.	
Timer start	Timer start on	Timer start on	Timer Start On/Off
	Timer start off	Timer start off	
Drive lock	Drive lock on	Drive lock on	Drive Lock On/Off
	Drive lock off	Drive lock off	
2nd car mode	2nd car on	2nd car on	2nd Car Mode On/Off
	2nd car off	2nd car off	
Shock sensor	Shock on	Shock on	Shock sensor On/Off
	Shock off	Shock off	
Siren	Siren on	Siren on	Siren On/Off
	Siren off	Siren off	

### Auxiliary Extender Button Table

Button	Duration	Description
	Short(0.5 sec)	Auxiliary 1
	Short(0.5 sec)	Auxiliary 2
	Short(0.5 sec)	Auxiliary 3
	Short(0.5 sec)	Auxiliary 4
	Long(2.5 sec)	Auxiliary 5
	Long(2.5 sec)	Auxiliary 6
	Long(2.5 sec)	Auxiliary 7


## Description of antenna module installation position



<< Antenna Module >>



<< Harness >>

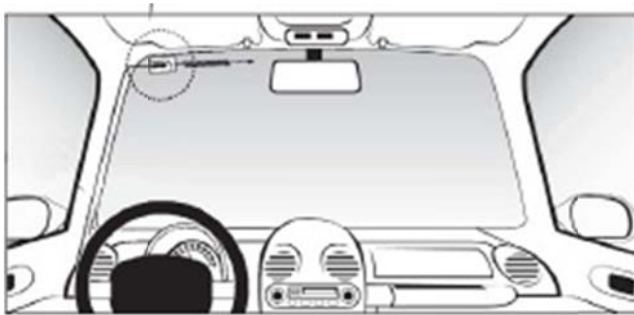

<< Installation of Antenna Module >>

**Note:** Use the power of car battery(+12volts).

The Antenna module have been calibrated for horizontal installation at the left-top corner of the windshield.


## Remote Coding / Programming Routine

**IMPORTANT:** Every Firstech remote must be coded to the system prior to performing any operations. All remotes must be coded at the same time.

### Programming Remotes:

**STEP 1:** Activate Valet/Programming mode by manually turning the ignition key *on* and *off* (between the Acc & On positions) five times within 10 seconds. The vehicle's parking lights will flash once with the successful completion of this step.

**STEP 2:** Within 2 seconds after cycling the ignition for the 5<sup>th</sup> time, tap the Lock button on **2 way remotes** or the (lock) button on **1 way remotes** for a half second. The parking lights will flash once to confirm the transmitter has been coded.

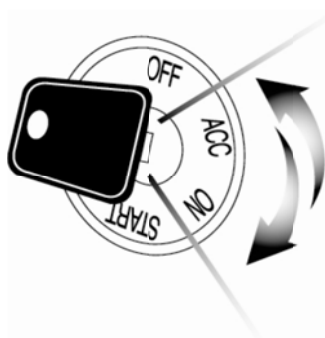

**Exiting Programming:** Programming is a timed sequence. The parking lights will flash twice signaling the end of programming mode.

**Programming Multiple Remotes:** After the confirmation flash given in step 2, code additional remotes by pressing button **(I)** on **2 way remotes** or the (lock) button on **1 way remotes**. The parking lights will flash once confirming each additional remote. All compatible systems can recognize up to 4 remotes.



## Remote Start Error Diagnostic

If the remote start fails to start the vehicle, the parking lights will flash three times immediately. Following those three flashes the parking lights will flash again corresponding to the error table.

Number of Parking Light Flashes	Remote Start Error
1	Motor running or must first program tach
2	Key in ignition on position
3	Door open (manual transmission only)
4	Trunk open
5	Foot brake on
6	Hood open
7	Reservation off (manual transmission only)
8	Tach or tachless sensing failure
9	FT-DAS sensor shutdown
10	System is in Valet Mode

We recommend that you do not attempt any repairs on your remote starter. Contact your dealer or call us directly.

## Remote Start Shutdown Error Codes

If the remote start sequence has been completed and the vehicle shuts down, the vehicle's parking lights will flash 4 times, pause then flash again with the error code. Tap button 4 on 2 Way remotes to initiate the shutdown error codes. On 1 Way remotes hold the Trunk and Start buttons together for 2.5 seconds.

Number of Parking Light Flashes	Remote Start Shutdown Error
1	Lost engine sensing signal
2	Lost emergency brake signal
3	Foot brake triggered
4	Hood pin triggered

## Limited Lifetime Warranty

Firstech, LLC Warrants to the original purchaser that this product shall be free of defects in material and workmanship under normal use and circumstances for the period of time that the original owner of this product owns the vehicle in which it is installed; except that the remote controller unit for the period of one year from the date of installation to the original owner of this product. When the original purchaser returns the product to the retail store where it was purchased or prepaid postal to **Firstech, LLC., 21903 68th Avenue South, Kent, WA 98032, USA** within the warranty period, and if the product is defective, Firstech, LLC, will at its option repair or replace such.

TO THE MAXIMUM EXTENT ALLOWED BY LAW, ANY AND ALL WARRANTIES ARE EXCLUDED BY THE MANUFACTURER AND EACH ENTITY PARTICIPATING IN THE STREAM OF COMMERCE THEREWITH. THIS EXCLUSION INCLUDES BUT IS NOT LIMITED TO, THE EXCLUSION OF ANY AND ALL WARRANTY OF MERCHANTABILITY AND/OR ANY AND ALL WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE AND/OR ANY AND ALL WARRANTY OF NON-INFRINGEMENT OR PATENTS, IN THE UNITED STATES OF AMERICA AND/OR ABROAD. NEITHER THE MANUFACTURER OF ANY ENTITIES CONNECTED THEREWITH SHALL BE RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE. NOTWITHSTANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty will last or the exclusion or limitation on how long an implied warranty will last or the exclusion or limitation of incidental or consequential damages. This warranty gives you specific legal rights, and you may also have other rights, which vary State to State.

Firstech, LLC. is not RESPONSIBLE OR LIABLE FOR ANY DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO, ANY CONSEQUENTIAL DAMAGES, INCIDENTAL DAMAGES, DAMAGES FOR LOSS OF TIME, LOSS OF EARNINGS, COMMERCIAL LOSS, LOSS OF ECONOMIC OPPORTUNITY AND THE LIKE that may or may not resulted from the operation of Compustar, Compustar Pro, Arctic Start, Vizion, or NuStart. NOT WITH STANDING THE ABOVE, MANUFACTURER DOES OFFER A LIMITED WARRANTY TO REPLACE OR REPAIR THE CONTROL MODULE AS DESCRIBED ABOVE.

### Your Warranty

The product's warranty is automatically void if the date code or serial number is defaced, missing or altered. This warranty will not be valid unless you have completed the registration card at [www.compustar.com](http://www.compustar.com) within 10 days of purchase.