
Link@Home

Wireless Remote Control Puck Lights INSTRUCTION MANUAL

CATALOG NUMBERS

EM-BL31W-2pk

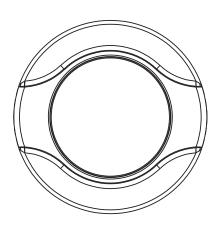



Thank you for choosing Link2Home!

PLEASE READ BEFORE RETURNING THIS PRODUCT FOR ANY REASON.

If you have a question or experience a problem with your Link2Home purchase, go to http://www.link2home.com
If you can't find the answer or do not have access to the internet, call
1-888-783-6082 from 9 a.m. to 5 p.m. EST Mon.-Fri. to speak with an agent.
Please have the catalog number available when you call.

SAVE THIS MANUAL FOR FUTURE REFERENCE.

Important Safety Guidelines

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

(Used without word) Indicates a safety related message.

Definitions: Safety Alert Symbols and Words

This instruction manual uses the following safety alert symbols and words to alert you to hazardous situations and your risk of personal injury or property damage.



DANGER: Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



MARNING: Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION: Indicates a potentially hazardous situation which, if not avoided, may result in **minor or moderate injury.**



MOTICE: Indicates a practice not related to personal injury which, if not avoided, **may** result in **property damage.**



MARNING: PLEASE READ THIS INSTRUCTION MANUAL THOROUGHLY AND COMPLETELY BEFORE INSTALLATION & USE. FAILURE TO DO SO COULD CAUSE DAMAGE TO PROPERTY, SERIOUS INJURY OR DEATH, AND VOID YOUR WARRANTY.





⚠ AVERTISSEMENT: Cancer et Troubles de l'appareil reproducteur www.P65Warnings.ca.gov.



⚠ ADVERTENCIA: Cáncery Daño Reproductivowww.P65Warnings.ca.gov.

For California residents / Pour les résidents de la Californie / Para residentes en California

Table of Contents			
Table of Contents	3	Operation	7
Safety Information	3	Care and Cleaning	7
Pre-Installation	5	Warranty	3
Installation	6		

Safety Information

□ Consult a qualified electrician if you have any electrical questions.

- □ NOTE: This equipment has been tested and found to comply with the limits for Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

CAUTION: Be cautious of what surface the mounting disc is attached to, as it may remove paint or damage surface.

BATTERY PRECAUTIONS

- Use only the size and type of batteries specified.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Reversed batteries may cause damage to the device.
- Do not mix alkaline, standard (Carbon-Zinc), or rechargeable (Nickel Cadmium) batteries.
- Replace all batteries of a set at the same time. Do not mix old and new batteries.
- Clean the battery contacts and also those of the device prior to battery installation.
- Do not dispose of batteries in fire.
- Remove batteries if consumed or if product is to be left unused for an extended period of time.

▲ **WARNING:** Modifications to this product not approved by the party responsible for compliance could void the user's authority to operate the product.

Remote Battery Replacement:

If operation of the receiver units becomes erratic, it may be necessary to replace the battery in the hand-held remote unit. To do this, first remove the battery compartment cover. Press the tray release button on the back of the remote. Next, remove the depleted battery and discard according to local ordinances. Be sure to correctly install the new battery. Replace battery compartment cover and test by using it to control the indoor remote control outlets.

ACAUTION:

- Appliances to be connected to the remote control socket MUST NOT exceed the voltage and current ratings as in "Specifications".
- 2. Operation is subject to the following two conditions:
 - (1) this appliance may not cause harmful interference, (2) this appliance must accept any interference received, including interference that may cause undesired operation.
- 3. Only for indoor use and storage.
- 4. Low transmitter battery may lower the distance between the transmitter and the receiver.

FC FCC PART 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may cause harmful interference, and
- (2) this device must accept any interference received, including interferences that may cause undesired operation

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ·Reorient or relocate the receiving antenna.
- ·Increase the separation between the equipment and receiver
- ·Connect the equipment into an outlet on a circuit
- different from that to which the receiver is connected
- ·Consult the dealer or an experience radio/TV technician for help.

Pre-Installation PLANNING INSTALLATION

□Read all instructions before assembly.

□To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.

□Keep your receipt and these instructions for proof of purchase.

PRODUCT DATA

□Bulb type:3*2835 SMD

□ Luminance:40lm

□ Battery:3*1.5V AAA(not incl.)

□ Electricity:110mAh,Voltage:4.5V


□ Function: Multi-function

□ Remote control distance:39ft

□ Remote: Ground color is light grey(not dark grey)

□ Lens color: Smoky white

PACKAGE CONTENTS

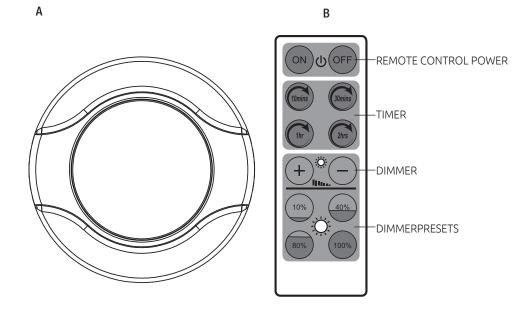



Part	Description	Quantity
А	Light fixture (3 AAA batteries NOT included)	8
В	Remote (CR2032 button cell battery and insulation piece preinstalled)	2

Installation

1. Replacing the batteries

- □ If the LEDs appear to be dim, this is an indication that your batteries need to be replaced.
- □ Rotate the battery cover counterclockwise and remove it.
- □ Remove the old batteries and insert three new AAA batteries. Be sure to match the polarity as shown in the diagram in the battery compartment.
- ☐ Check light operation to confirm that batteries are correctly installed.
- □ Replace the battery cover and rotate it clockwise to lock it in place.

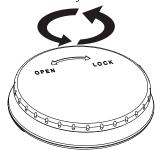


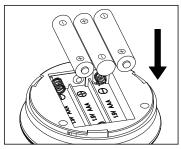

A CAUTION: Do not mix battery types. Use only fresh batteries. Alkaline are recommended.

2. Mounting with double-sided tape

- □ Check the location of where you want to place the puck light. Make sure it is clean and that there is no debris or dust.
- □ Remove the protective film from one side of the double-sided tape (BB) and apply to the center of the mounting bracket (battery door). Peel off the remaining protective film and press the mounting bracket firmly to the intended surface for 5 seconds.

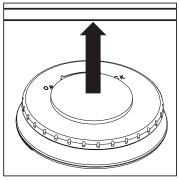

A CAUTION: Be cautious of what surface the double-sided tape is attached to, as it may remove paint or damage the surface.

REMOTE BATTERY

1 CR2032 button cell(incuded)


SAFETY INSTRUCTION BATTERY WARNINGS

- ·DO NOT mix old and new batteries
- •DO NOT mix alkaline standard(carbon-zinc),or rechargeable(NH-CD,NI-MH,etc) batteries
- ·This product contains a button battery
- If swallowed, it could cause severe injury or death in just2 hours. Seek medical attention immediately.

Operation

1. Install batteries

Install batteries and close the batteries cover in place

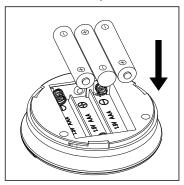

3. Using the Remote

REMOVE THE INSULATION PIECE FIRST REMOTE CONTROL POWER:

Controls all puck lights RED: Turn ALL puck lights off GREEN: Turn ALL puck lights on

TIMER

Controls the amount of time the puck lights will stay ON. Turn lights ON first then select duration. Lights will flash once to confirm command and timer clears when lights turn OFF(10,30,60 or 120 minutes)

DIMMER

Controls brightness of all puck lights Press and hold(+) to increase brightness Press and hold(-) to decrease brightness

DIMMERPRESETS

Turn lights ON first then select brightness preset (10%,40%,80% or 100% brightness)


LAST MEMORY

All puck lights will return to the prior brightness settings when turned ON.


2. Turning the light on

 
Press once to turn ON.

Pressing again to OFF

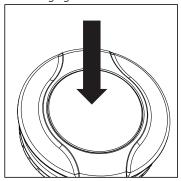



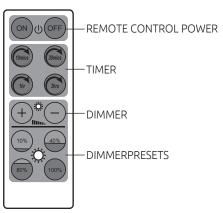



Care and Cleaning

□ Clean the lamp with a soft, dry cloth.

□ Do not use any cleaners with chemicals, solvents, or harsh abrasives.

LINK2HOME

1 YEAR LIMITED WARRANTY

IMPORTANT: Proof of Purchase is required to obtain warranty service

Paragon Group USA Inc. warrants to the original owner that our products will be free from defect in workmanship and material for a period of ONE YEAR from the date of purchase. Should any unit(s) prove to be defective during this period, Paragon Group USA Inc. will be responsible for replacement of the defective unit(s) only. Paragon Group USA Inc. is not responsible for labor charges or any incidental or consequential expenses.

Not Covered – Batteries are not covered by this warranty. Repair service, adjustment and calibration due to misuse, abuse or negligence are not covered by this warranty. Unauthorized service or modification to this product or of any furnished components will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, set-up time, loss of use, postage, unauthorized service, or other products used in conjunction with Link2Home products.

For warranty service, please contact Paragon Group USA Inc.
Customer Service by Phone: 1-888-783-6082 or e-mail: info@paragongroupusa.com.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Paragon Group USA Inc. Link2Home Product Division Englewood, NJ 07631 USA

link2home.com