 
 


### TRANSMITTER

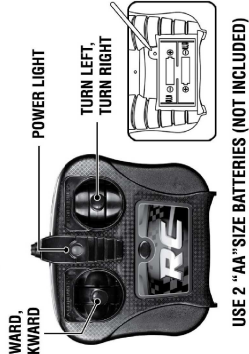

USE 2 "AA" SIZE BATTERIES (NOT INCLUDED)

### VEHICLE

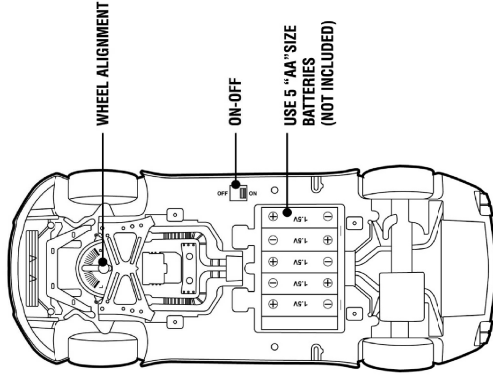

### BATTERY REPLACEMENT:

To replace batteries refer to following directions & illustration:

#### VEHICLE

1. Turn the power switch to the OFF position.
2. Use a Phillips screwdriver to loosen and remove the screw of the battery compartment door as shown.
3. Remove the battery compartment door.
4. Insert 5 new 1.5V "AA" batteries.
5. Cover the battery compartment door and tighten the screw.

#### TRANSMITTER

1. Push the button with a small tool as shown.
2. Remove the battery compartment door.
3. Remove old batteries and replace with 2 new 1.5V "AA" batteries.
4. Close the battery compartment door.

#### BATTERY CAUTION:

1. Rechargeable batteries are not recommended.
2. Do not mix old and new batteries.
3. Non-rechargeable batteries are not to be recharged.
4. Rechargeable batteries are to be removed from the toy before being charged.
5. Rechargeable batteries are only to be charged under adult supervision.
6. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
7. Do not mix old and new batteries.
8. Batteries are to be inserted with the correct polarity.
9. Batteries to be inserted with the correct polarity.
10. The supply terminals are not to be short-circuited.
11. If batteries are loose, bend out the contacts for a light fit.
12. Exhausted batteries must be removed from the toy and be disposed of immediately. Do not put the batteries in a fire.
13. Remove batteries from the toy when not in use.
14. Check the product periodically for signs of damage to electrical parts; do not play with product until damage has been properly assessed.

If the unit malfunctions, please remove the batteries for one minute and reinstall again.

#### BATTERIES SHOULD BE INSTALLED BY ADULTS ONLY.

Don't forget to remove batteries from the vehicle and transmitter when you have finished operating your vehicle.

### CAUTION: CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If interference is experienced, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

All rubber bands, plastic and wire ties, as well as tags, are not part of this toy and should be removed before use. Please keep this packaging for future reference. Colors, designs & contents may vary.

Porsche, the Porsche Shield and the distinctive design of Porsche cars are trademarks and trade dress of Porsche AG. Permission granted. Licensee: GuangHong Huiquan Toys Industry Co., Ltd.



 NO.61007  
MADE IN CHINA



Grandex Int'l Development Ltd.,  
3/F East Ocean Ctr., Granville Rd., TST, Hong Kong  
Alkaline batteries are recommended.